


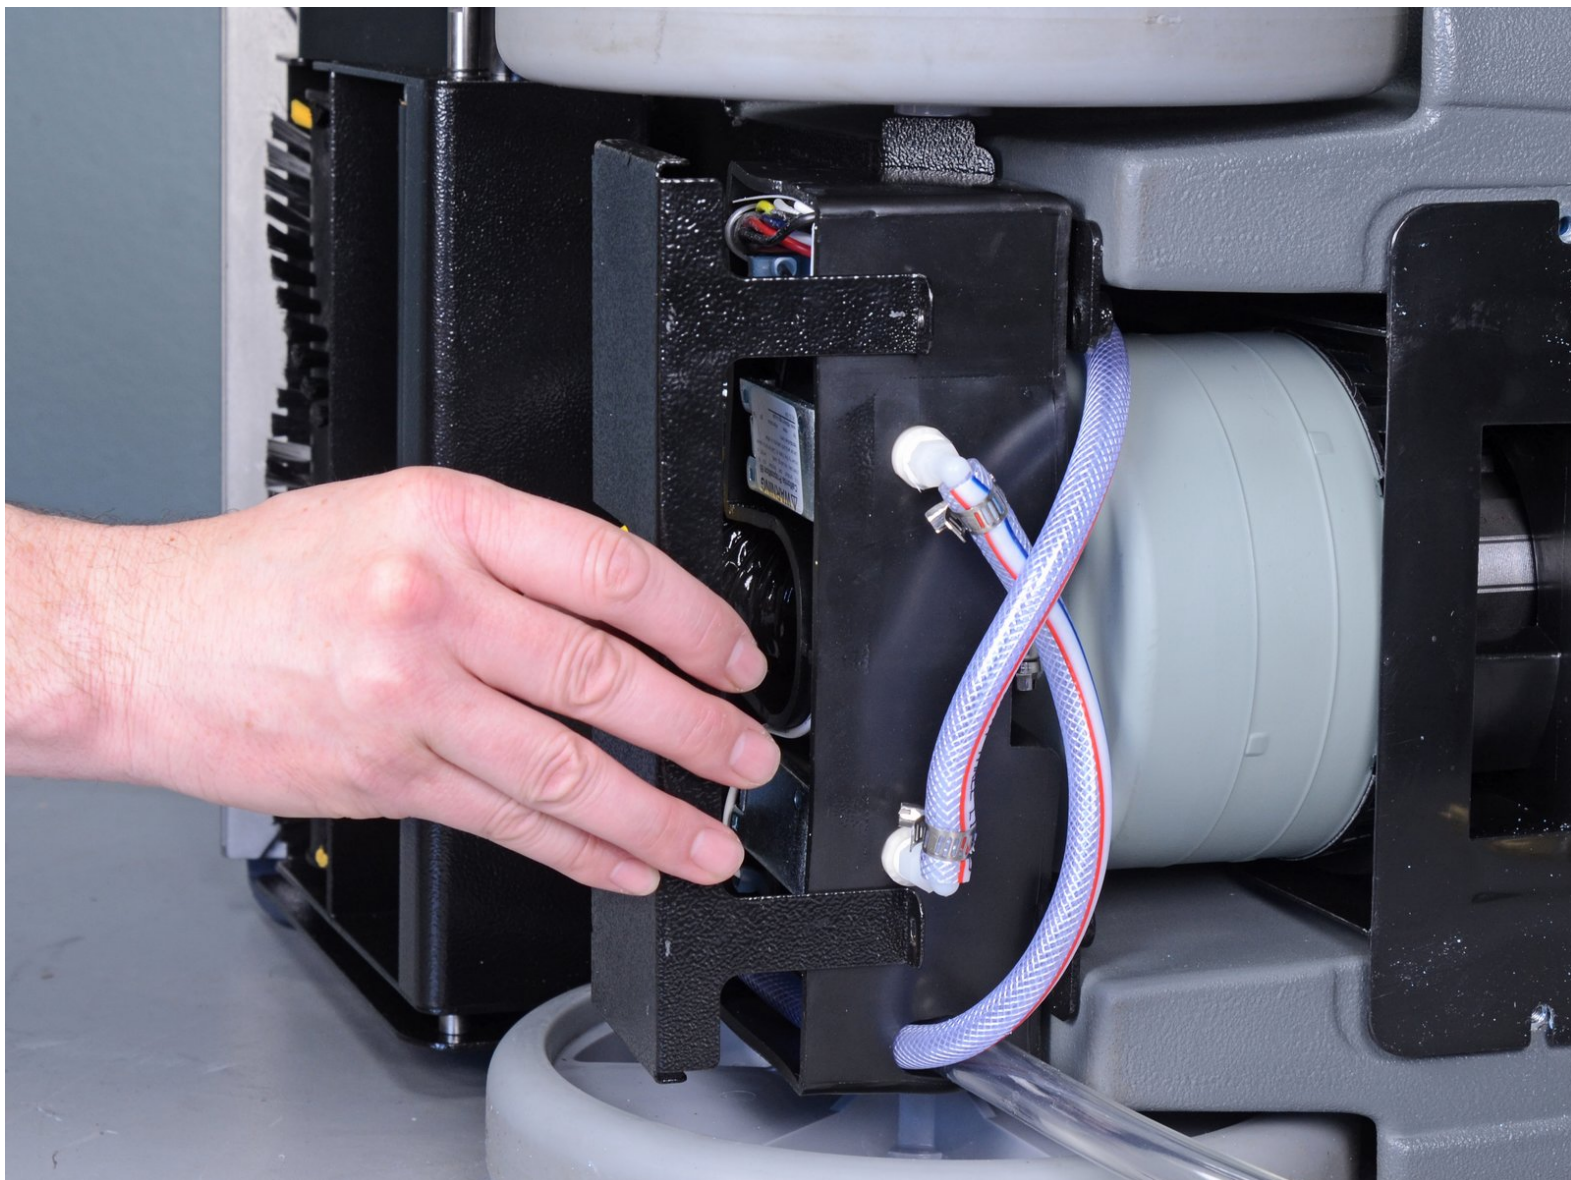

Karcher Carpet Cleaner BRC3015C 2018 Pump Cover Replacement

Remove the pump cover in a Karcher Carpet Cleaner BRC3015C 2018.

Written By: Adam O'Camb



INTRODUCTION

Use this guide to remove the pump cover in a Karcher Carpet Cleaner BRC3015C 2018.




TOOLS:

- [3mm Hex Key](#) (1)
-

Step 1 — Disconnect the hose



 Make sure the carpet cleaner is turned off and completely disconnected from power.

- Pull the hose on the rear of the carpet cleaner straight down to disconnect it.

Step 2 — Remove the bottom cover




- Use a 3 mm hex key to remove two bolts securing the bottom cover.


Step 3



- Rotate the bottom cover down toward the bottom of the carpet cleaner, then pull it straight back toward the rear of the carpet cleaner to remove it.


 Don't completely remove the cover yet. There is a ground wire connecting the cover to the carpet cleaner that must be disconnected first.

Step 4 — Disconnect the ground wire

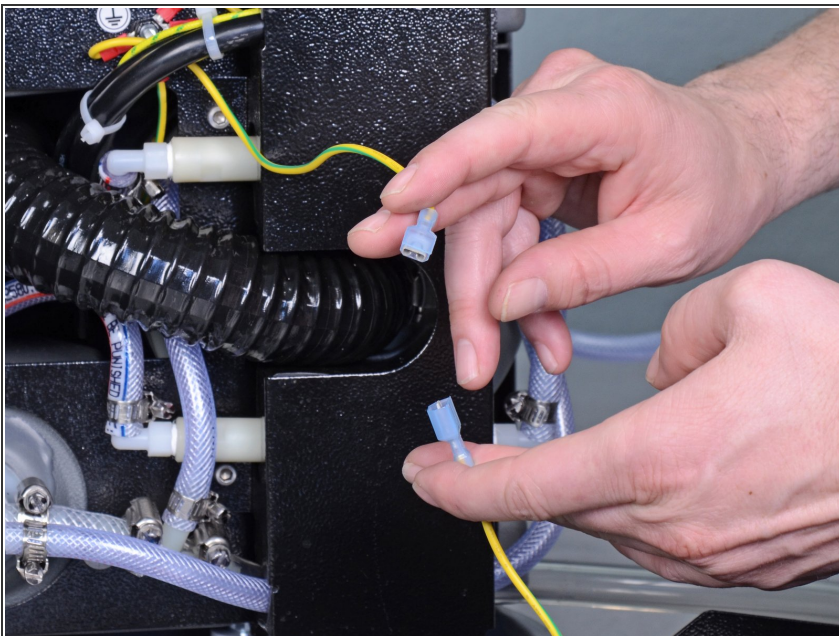



- Pull the yellow and green ground wire connectors straight apart to disconnect the bottom cover's ground wire.

Step 5 — Remove the pump cover

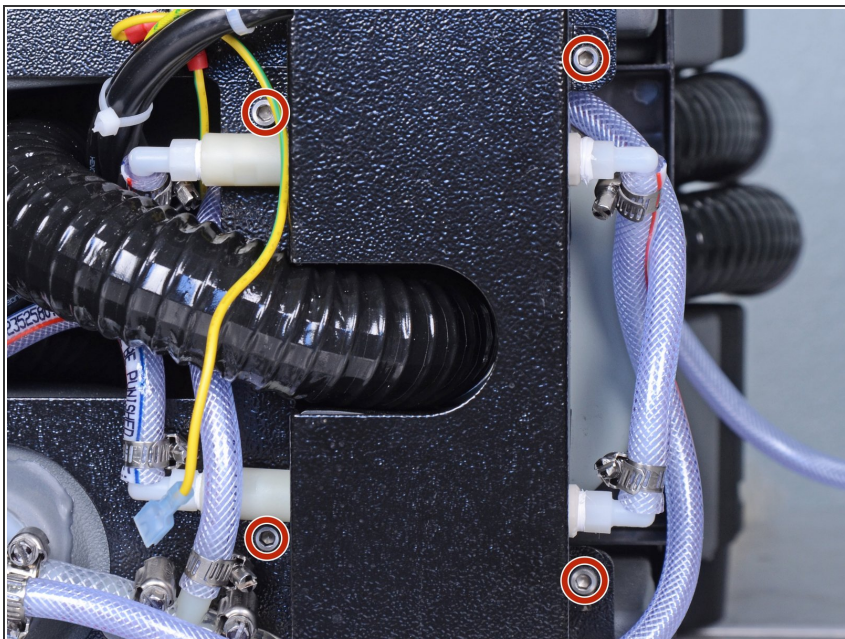

- Use a 3 mm hex key to remove the four bolts securing the pump cover.

Step 6

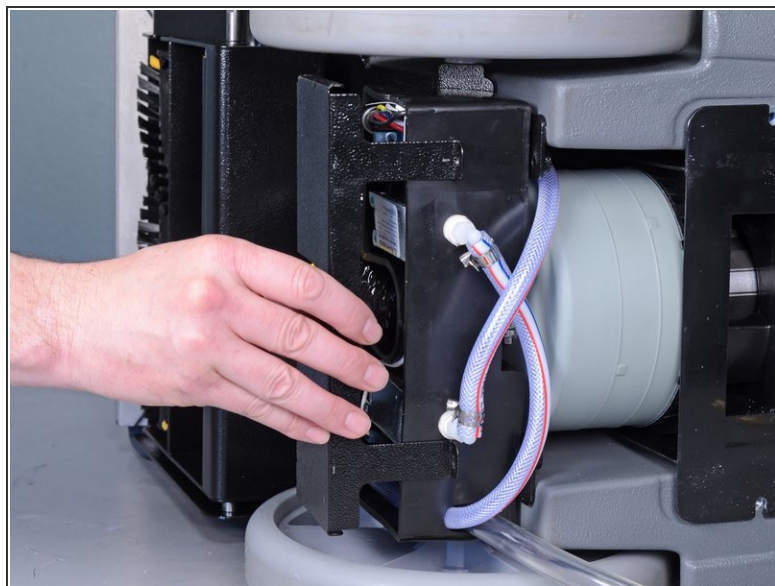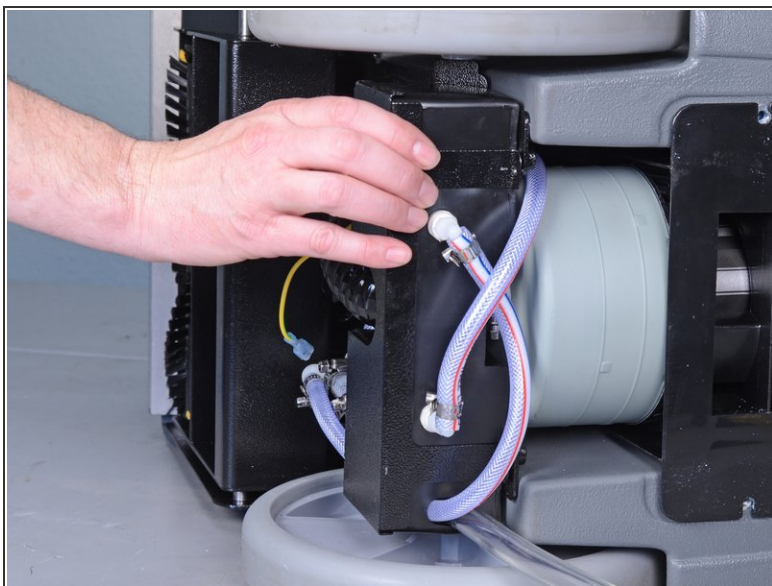

- Remove the pump cover.

To reassemble your device, follow these instructions in reverse order.