



---

## INTRODUCTION

Prereq for removing the upper case.

---



### TOOLS:



- [Phillips #000 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Trackpad




- Remove the following screws securing the trackpad to the upper case:
  - Four 1.4 mm Phillips #000 screws

## Step 2

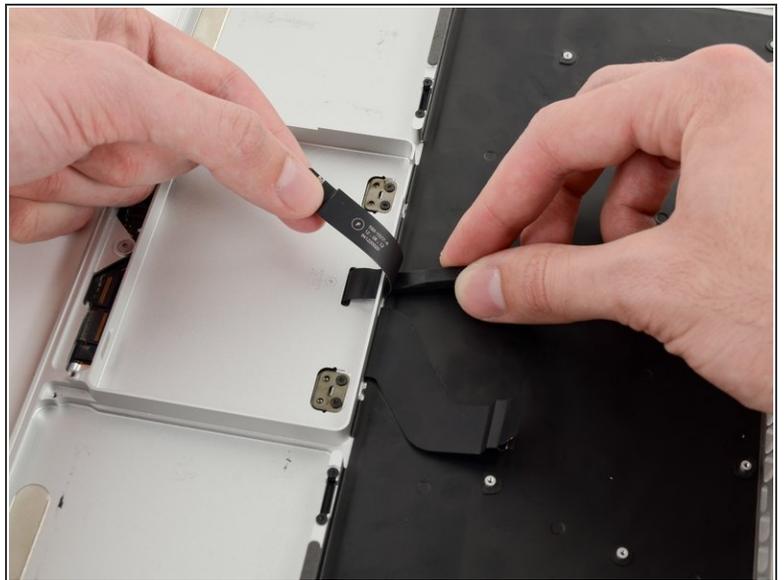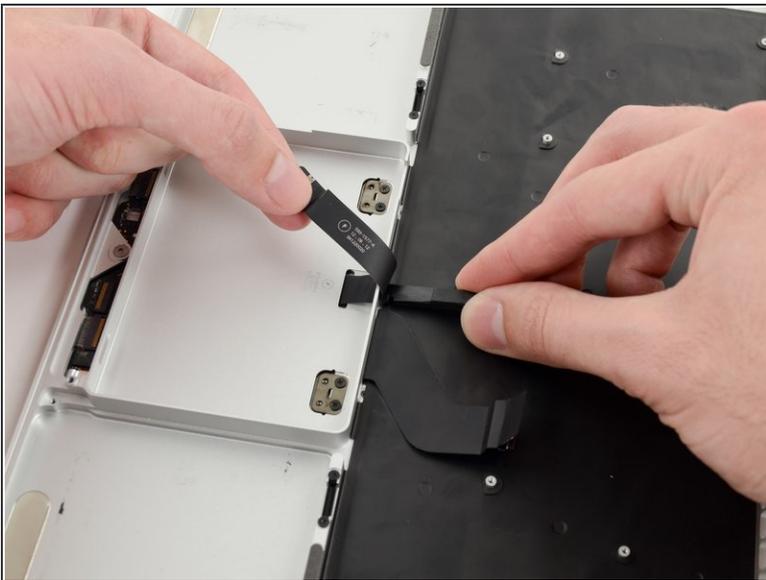

- Wedge the spudger between the trackpad ribbon cable and the upper case.
- Run the spudger along the bottom to release the trackpad ribbon cable from the adhesive securing it to the upper case.

### Step 3

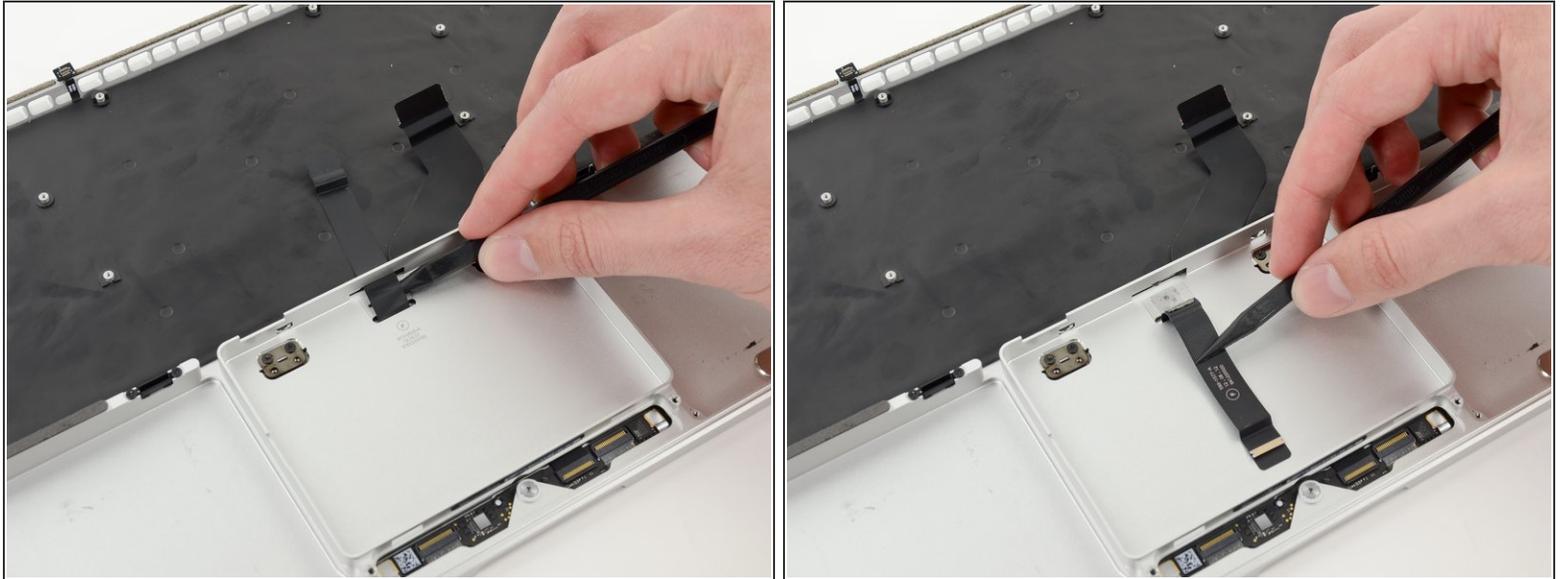

- Insert the tip of a spudger in between the trackpad ribbon cable and the upper case.
- Carefully thread the trackpad ribbon cable out of the notch near the top of the SSD assembly cavity.

## Step 4



- Once the trackpad is free of the upper case, guide the trackpad ribbon cable through the slot cut in the upper case.
- Remove the trackpad from the upper case.

To reassemble your device, follow these instructions in reverse order.