



Kobo Glo HD Rear Cover Replacement

Replace the back cover on your Kobo Glo HD.

Written By: Kevin Bhasi



INTRODUCTION

This guide shows how to remove/replace the rear cover on a Kobo Glo HD.

This guide applies to the Kobo Glo HD (model N437), but may also apply to the Kobo Touch 2.0 (model N587).

*This guide does **not** apply to the regular Kobo Glo and Touch models.*




TOOLS:


- [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Rear Cover



- If you haven't done so already, power off your eReader by holding down the power button for 3 seconds until the display refreshes to indicate that it has powered off.

 Opening picks are required for this step as opening tools can be too wide to get into the gap between the rear cover and the side/front.

- Start by inserting the pick into the area around the power button or Micro USB port.
 -  Don't insert it too far, as that could result in damage to the power button, status indicator, and/or Micro USB port.
- Then, slide the pick around to undo these clips.

Step 2



- The rear cover should then pop off.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-12-13 02:27:29 PM (MST).

