



Dell Inspiron N5050 Battery Replacement

Follow this replacement guide to remove or replace the battery from your laptop.

Written By: Tyler



INTRODUCTION


Before disassembling your laptop to replace any device components, you must remove the battery. By removing the battery, you can prevent hazardous power issues.



PARTS:

- [Dell Inspiron n5050 Battery](#) (1)
-

Step 1 — Battery

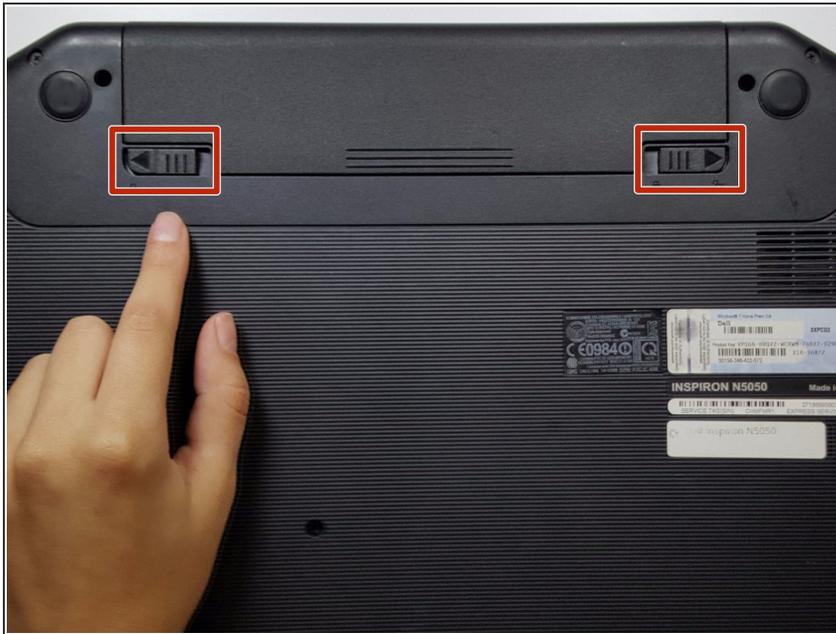

- Flip your laptop over to view the bottom and locate the two locks.

Step 2



- Slide the two locks away from each other.
- ⓘ Sliding these locks will loosen the battery to allow removal.

Step 3



- Pull battery out of the laptop.
- ⓘ Your laptop's battery should be completely removed.

To reassemble your device, follow these instructions in reverse order.