
INTRODUCTION

This is a prerequisite-only guide! This guide is part of another procedure and is not meant to be used alone.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove the hard drive cover



- Grip the PS4 with both hands along the gap in the top cover.
- Push the glossy side of the top cover with your thumbs until it pops to the side.
- Lift the glossy top cover up and back to remove it from the PS4.

Step 2 — Remove the hard drive bracket screw

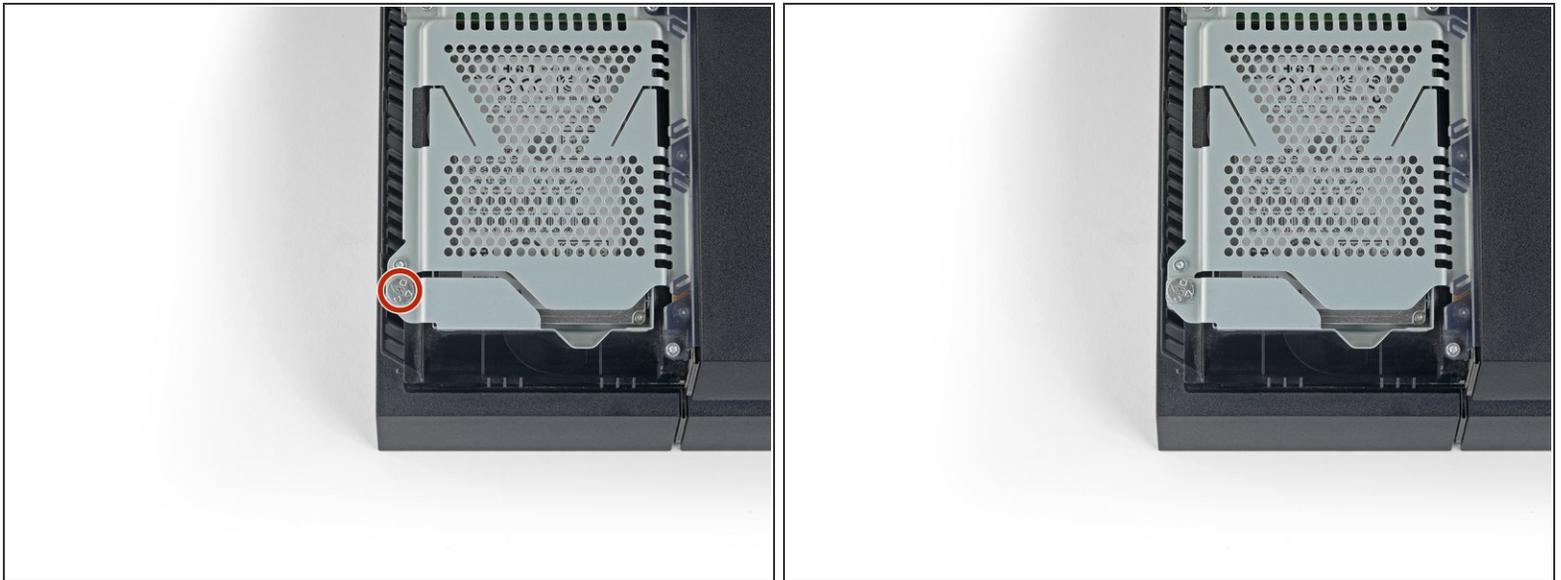

- Use a Phillips screwdriver to remove the 6.5 mm screw securing the hard drive bracket to the enclosure.

Step 3 — Remove the hard drive bracket



- Pull the hard drive bracket out of the enclosure.

⚠ Be careful not to drop the hard drive. The internal components are fragile and are susceptible to damage by sudden shock.

To reassemble your device, follow these instructions in reverse order.