

HP Omen 15-ce019dx Battery Replacement

Replacing the battery of a model 15-ce019dx HP Omen laptop with a new battery

Written By: Ashley Hanna



INTRODUCTION

If the battery in your HP Omen 15-ce019dx laptop doesn't last through the day, or needs to be constantly plugged in, you might need to replace the battery. The process is actually quite simple. Once you order the right battery for your laptop, all you need is a screwdriver and an antistatic parts tray to hold the screws. You will be removing the back cover of the Omen laptop to access the battery. The battery will be removed and replaced with a new battery. Then, the back of the laptop will be replaced and you can resume using your laptop with brand new restored battery life. No major tech knowledge needed.



TOOLS:

- Phillips #00 Screwdriver (1)
- Anti-Static Project Tray (1)



PARTS:

HP OMEN Battery (part number 917724-855) (1)

Step 1 — Battery








Unplug the computer and power it off completely.

Step 2





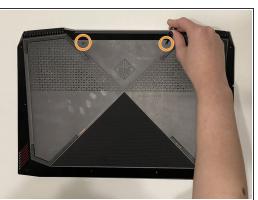

- Turn the laptop over so the bottom is facing up.
- Remove the eight 1.2 mm screws around the frame using a Phillips #00 screwdriver.
- Unscrew the two 1.2 mm screws at the top using a Phillips #00 screwdriver. These screws stay in the back of laptop, so when you hear a clicking sound, the screw is removed and you may proceed.

Step 3









- At the top of the laptop, there is gap between the back cover and the rest of the laptop.
- Gently pop the back off by gripping the top edge where the gap is and pulling up. The rest of the frame should pop up as you pull.
- (i) There should be popping sounds as the frame comes up around all the edges.
- it will take some force to remove the frame for the first time. Don't be afraid to really pull it up; just be patient and don't rip it up all at once. Each edge should pop up as you pull.

Step 4

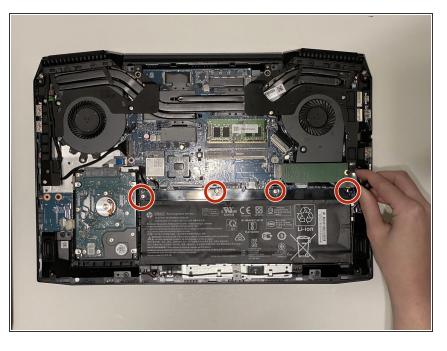

 Remove the four 1.2 mm screws from the top of the battery using a Phillips #00 screwdriver.

Step 5

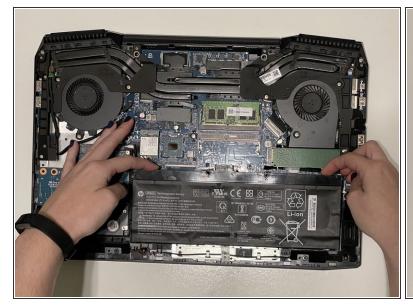



Pull up on the battery from the top, and slide it out of place.

To reassemble your device, follow these instructions in reverse order.