



Audio-Technica AT-LP60BK-BT Belt Drive Replacement

Use this guide to replace the broken or missing belt drive for the Audio-Technica AT-LP60BK-BT Turntable.

Written By: Zonghao Li



INTRODUCTION

This guide will deal with how to replace the broken or missing belt drive for Audio-Technica AT-LP60BK-BT Bluetooth Wireless Turntable. The rubber band could cause a malfunction and break after using a long time or under extreme temperatures.

Before using this guide, make sure the size of the new belt is designed specifically for this model to avoid motor overheat problem.



PARTS:

- [Black rubber band belt](#) (1)
-

Step 1 — Belt Drive



- Open the top plastic cover and remove the record and rubber mat.

Step 2





- Find the belt underneath the platter by rotating the platter to the correct place.
- Remove the belt from the motor pulley.

Step 3




- Take the platter off by pulling it straight up.

Step 4

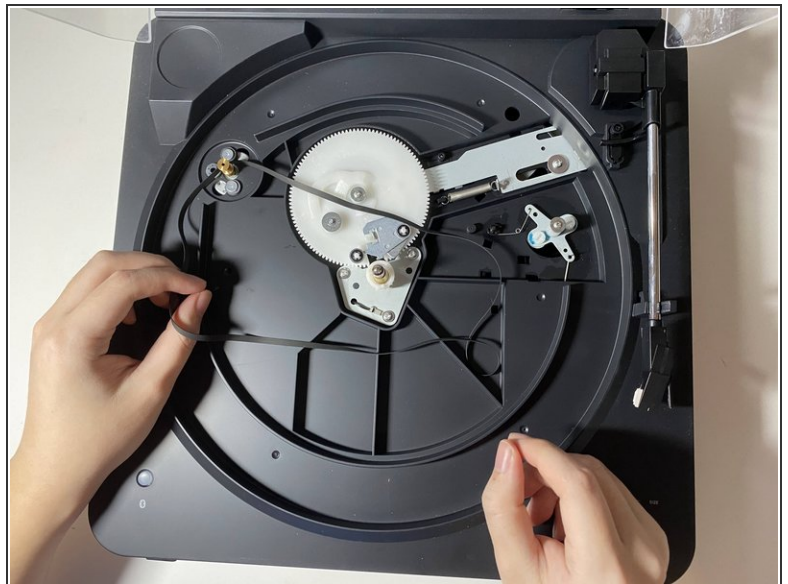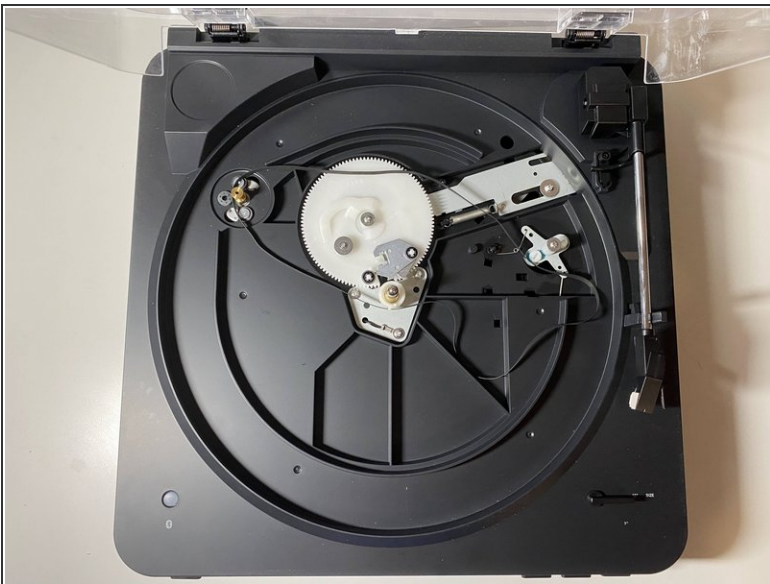

- Remove the old belt.

Step 5

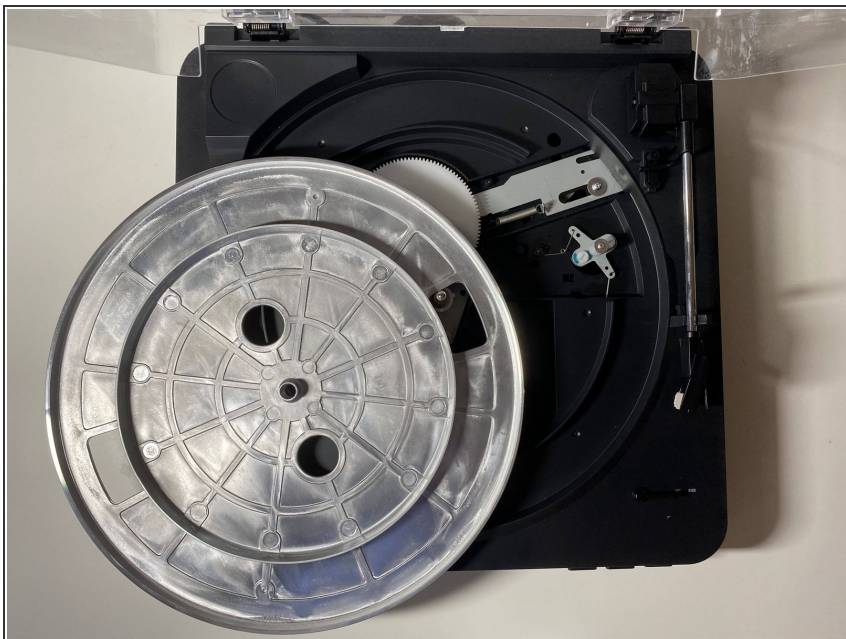

- Turn platter upside down.

Step 6



- Place the new belt around the inner lap on the upside-down platter.

⚠ Make sure the rubber band is flat on the platter, with no flipping.

Step 7



- Turn the platter around.
- Grab the belt around with a finger through one of the holes in the platter.

Step 8




- Put the platter straight down.

Step 9



- Put the belt around the motor pulley.

Step 10

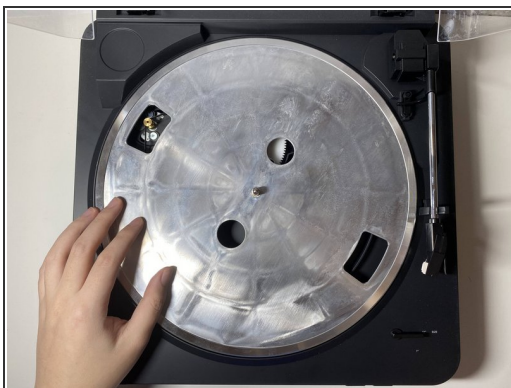

- Test the function by spinning the platter and put the rubber mat into place.

To reassemble your device, follow these instructions in reverse order.