




Dell XPS 720 H2C Sound Card Replacement

Removing and installing a sound card on the Dell XPS 720 H2C.

Written By: Graham Bultema

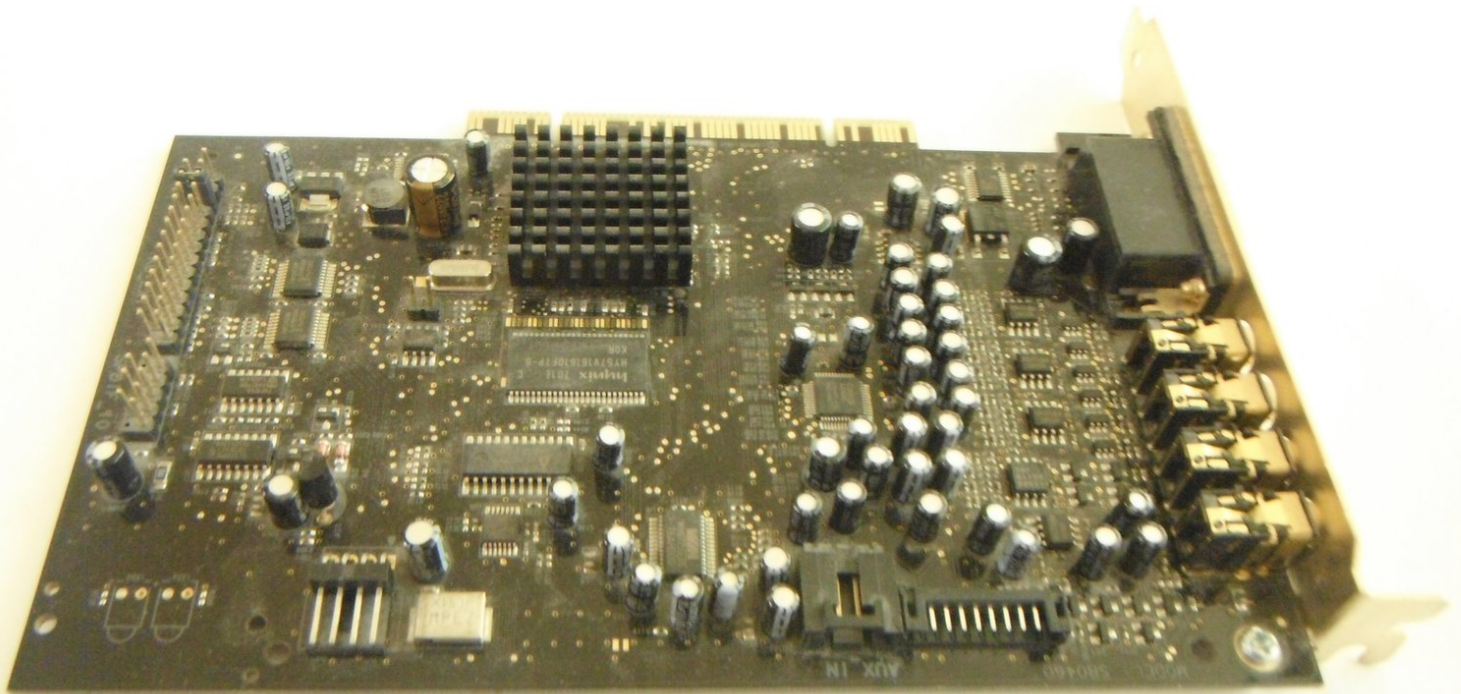

INTRODUCTION


The sound card is responsible for most of the audio functions on a computer. This guide will help users remove and replace the sound card in the Dell XPS 720 H2C.

Step 1 — Removing Dell XPS 720 H2C Cover Panel




- Remove the cover panel on the side of the computer by pulling out the latch on the back panel and pulling the panel downwards towards the ground.

Step 2 — Sound Card

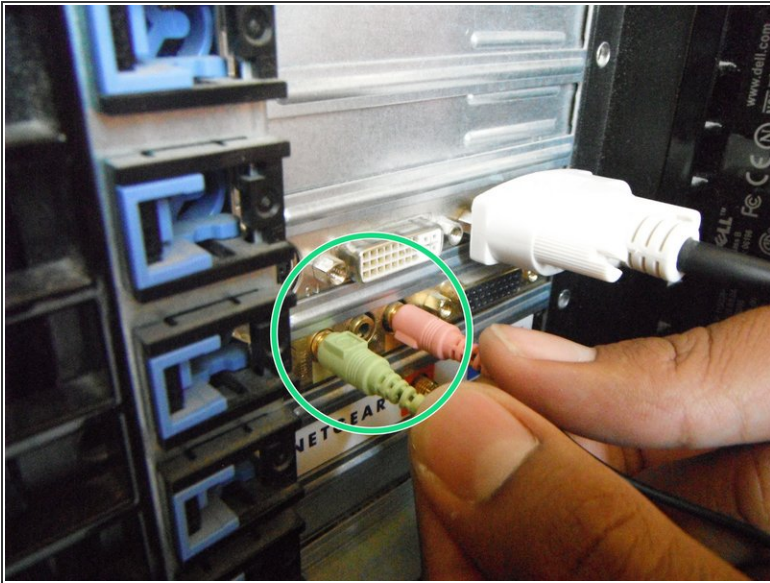


- Before handling the inside of the computer, ensure that all wires are disconnected from the audio ports along the back panel.
- The sound card is located towards the bottom of the computer, near the righthand side (see red outline).

Step 3

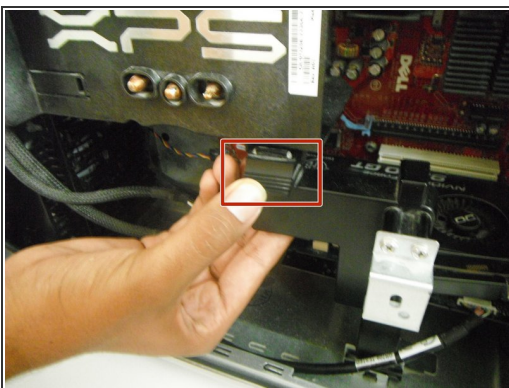


- To remove the support below the processor: press down on the latch at the top of the support, then pull the support outwards, towards yourself.

Step 4

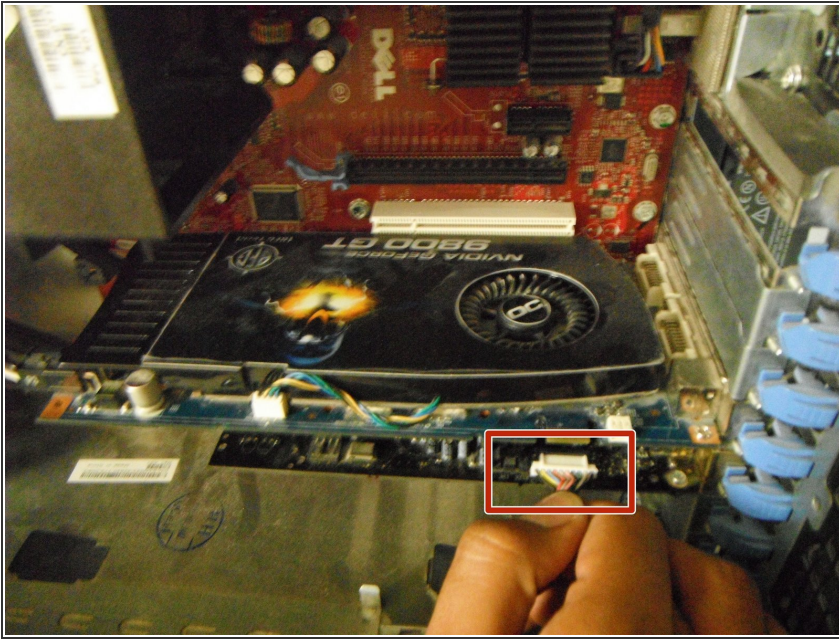



- To unplug the wire that connects the sound card to the motherboard: grasp the wire tightly and pull it outwards, towards yourself.
- ⓘ The wire may appear to be stuck. Keep increasing your pulling force until the wire unplugs. It will not break.

Step 5

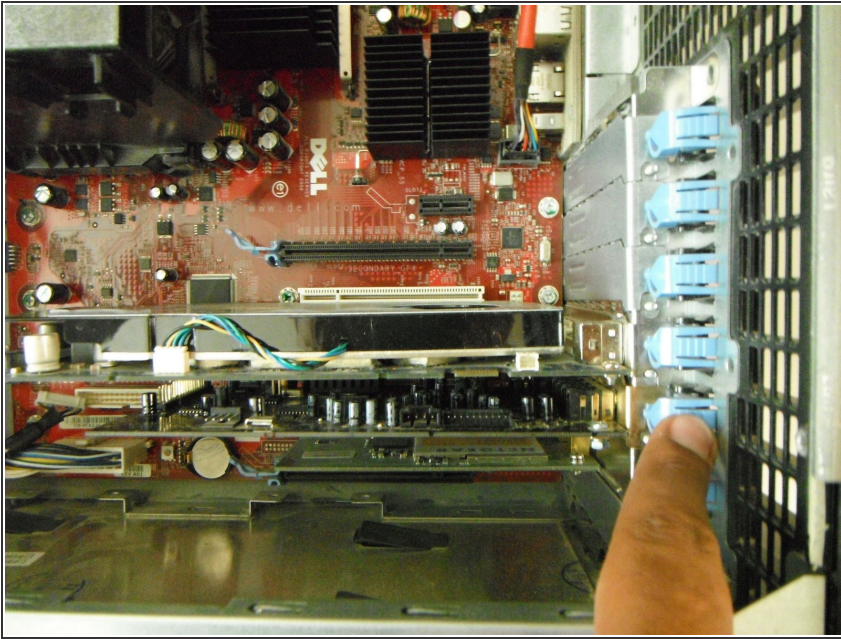

- To release the sound card from the motherboard casing: find the blue tab that is the third from the bottom (fifth from the top), and press down and to the right on the tab.

Step 6

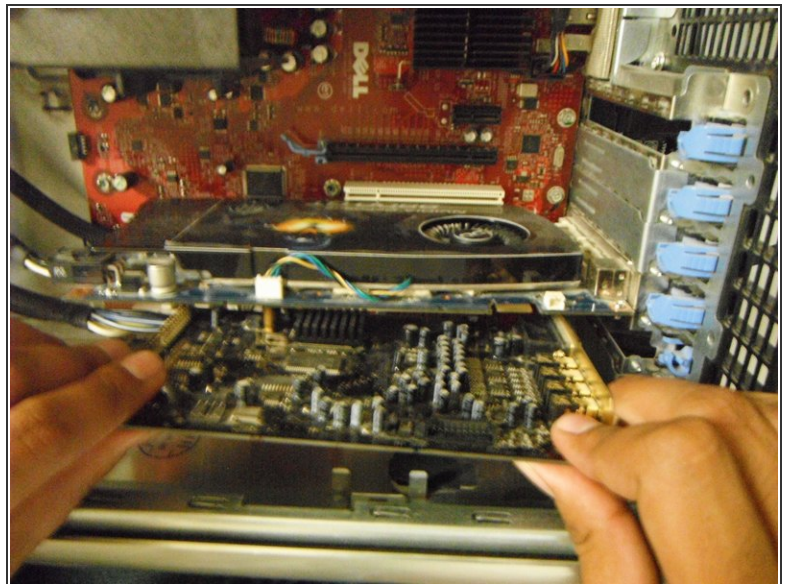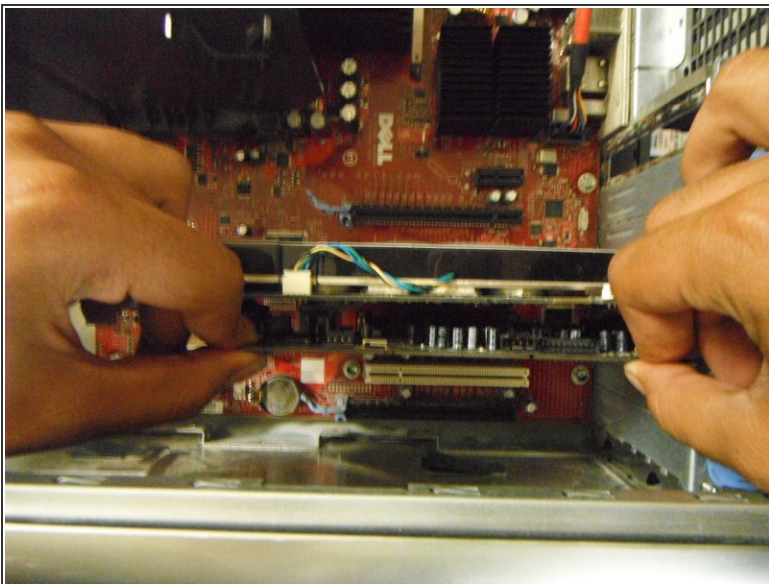

- To remove the sound card from the motherboard: gently grasp the sound card and pull directly outward, towards yourself.
- ⓘ Again, this may appear to be stuck in place. Slightly increase your pulling force until the card releases from the motherboard.

To reassemble your device, follow these instructions in reverse order.