



Acer Iconia W4-820 Battery Replacement

Written By: TechVid



Step 1 — Flip tablet upside down



- Flip the tablet over so that the screen is facing down

Step 2 — Remove back cover



 
 
- Use a [plastic card](#) or guitar pick to remove the back panel

Step 3 — Remove LCD connector



- Use your finger, spudger, guitar pick, or card

Step 4 — Remove Battery connector

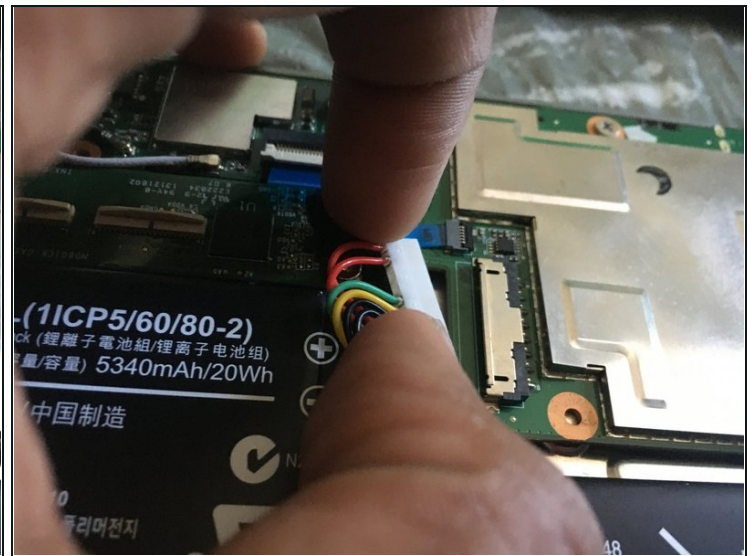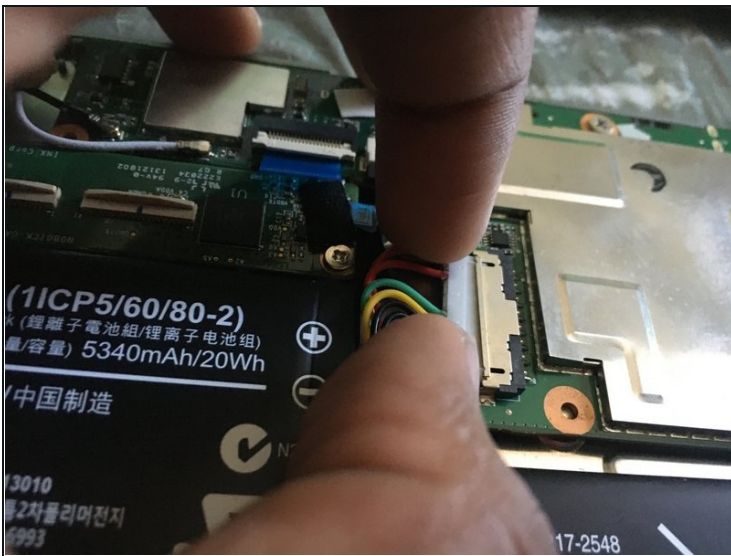

- Use the same tools as before to remove the connector

Step 5 — Remove battery



- Gently remove battery as there is adhesive on the back

To reassemble your device, follow these instructions in reverse order.