

iPhone 5 Vibrator Replacement

prereq for removing vibrator—after logic board, before front clips and rear case.


Written By: Andrew Optimus Goldheart





Phillips #00 Screwdriver (1)

Step 1 — Vibrator

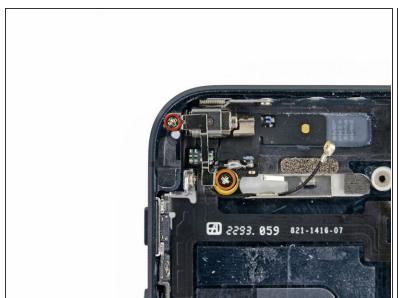



- Remove the following screws securing the vibrator bracket and motor to the rear case:
 - One 2.3 mm Phillips screw
 - One 1.7 mm Phillips screw
 - One 1.6 mm Phillips screw in the top of the rear case

Step 2



Remove the vibrator bracket and motor from the rear case.

To reassemble your device, follow these instructions in reverse order.