



Nintendo DS Lite Battery Disconnect

Prerequisite-only guide to disconnect the...

Written By: Brittany K



INTRODUCTION

Prerequisite-only guide to disconnect the Nintendo DS Lite battery before further disassembly.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:

- [Replacement Battery for Nintendo DS Lite](#) (1)

Step 1 — Nintendo DS Lite Battery Disconnect



- Place your device upside down and locate the battery compartment.
- Find the Phillips head screw securing the battery cover in the bottom right hand corner of the device.
- ✦ Loosen the screw enough to remove the battery cover but leave the screw in the cover for reassembly.
- ❗ Use only a Phillips screwdriver to remove screw.

Step 2



- Slowly remove the battery cover with the iFixit opening tool.
- ⚠ Make sure to remove the cover carefully to keep from losing Phillips screw in the cover. It will be needed for reassembly.

Step 3



- Use the iFixit opening tool to carefully pry the battery out of the case.
- After the old battery is removed replace it with a new battery facing the same direction as when the cover was opened.
- ① For some devices, you may be able to remove the battery by flipping the DS over and letting the battery fall into your hand.

To replace battery and reassemble your device, follow these instructions in reverse.