



TI-84 Plus Silver Edition Backup Battery Replacement

This guide shows you how to replace the backup...

Written By: Agustin



INTRODUCTION

This guide shows you how to replace the backup battery on the TI-84 Plus Silver Edition. The backup battery is located on the back side of the calculator above the main batteries.



TOOLS:

- [iFixit Opening Tool](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [SR44SW](#) (1)

Step 1 — Main Battery



- Push firmly down on the tab located on the back of the calculator near the center.
- Pull the tab up, lifting it off of the calculator and exposing the batteries.

Step 2



⚠ Removing the AAAs and the back up battery will clear the calculator's memory. Make sure you have backed up any important data prior to performing this step.

- Push the positive (+) side of the batteries to remove them

Step 3 — Backup Battery




- Using the Phillips #00 Screwdriver, unscrew the 15 mm screw holding the backup battery cover, located above the main battery area.

Step 4



- Grab the plate and lift gently upward, to remove the backup battery cover.

Step 5

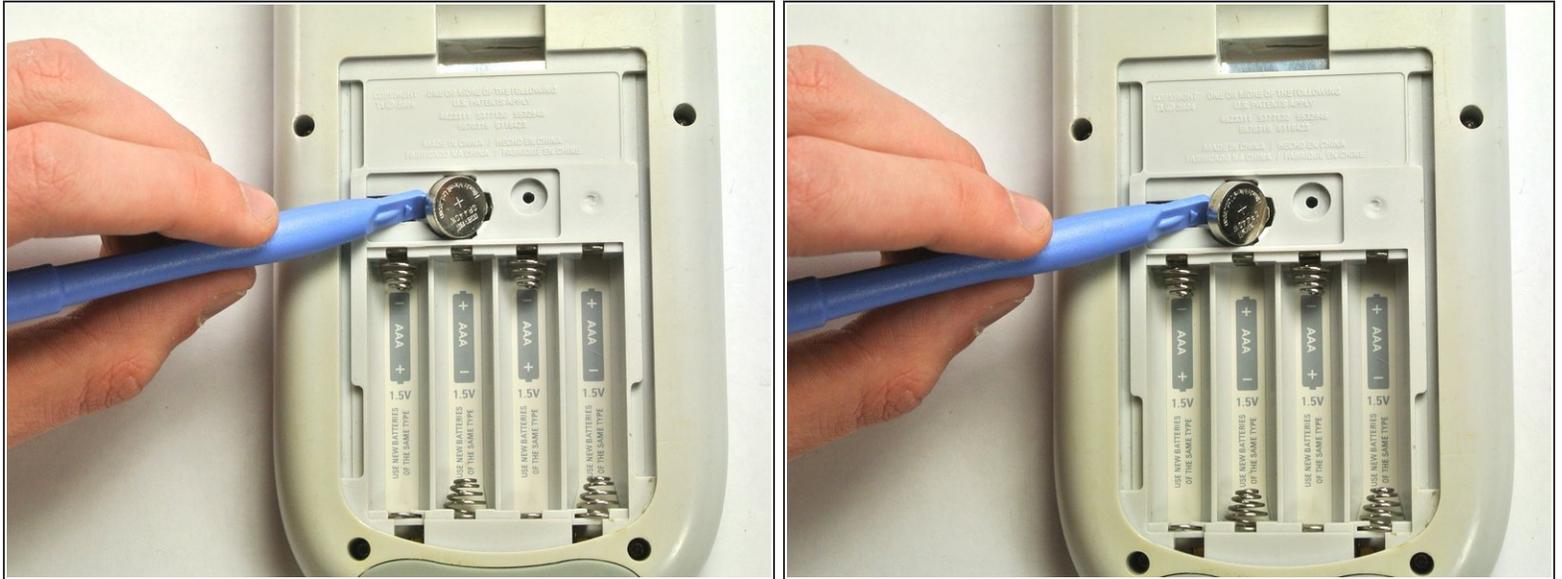

- Wedge the small plastic opening tool under the backup battery in the gap to the left of the backup battery.
- ⓘ The backup battery is an SR44SW coin cell battery. You can also replace it with a size 357/303 or LR44 battery.
- Push gently downward until the backup battery pops out.

To reassemble your device, follow these instructions in reverse order.