




Disassembling Insignia NS-B2110 Bottom Panel

This guide shows you how to disassemble the outside case to the Insignia NS-B2110. You may need this step as a prerequisite for other other replacement guides.

Written By: Nikki

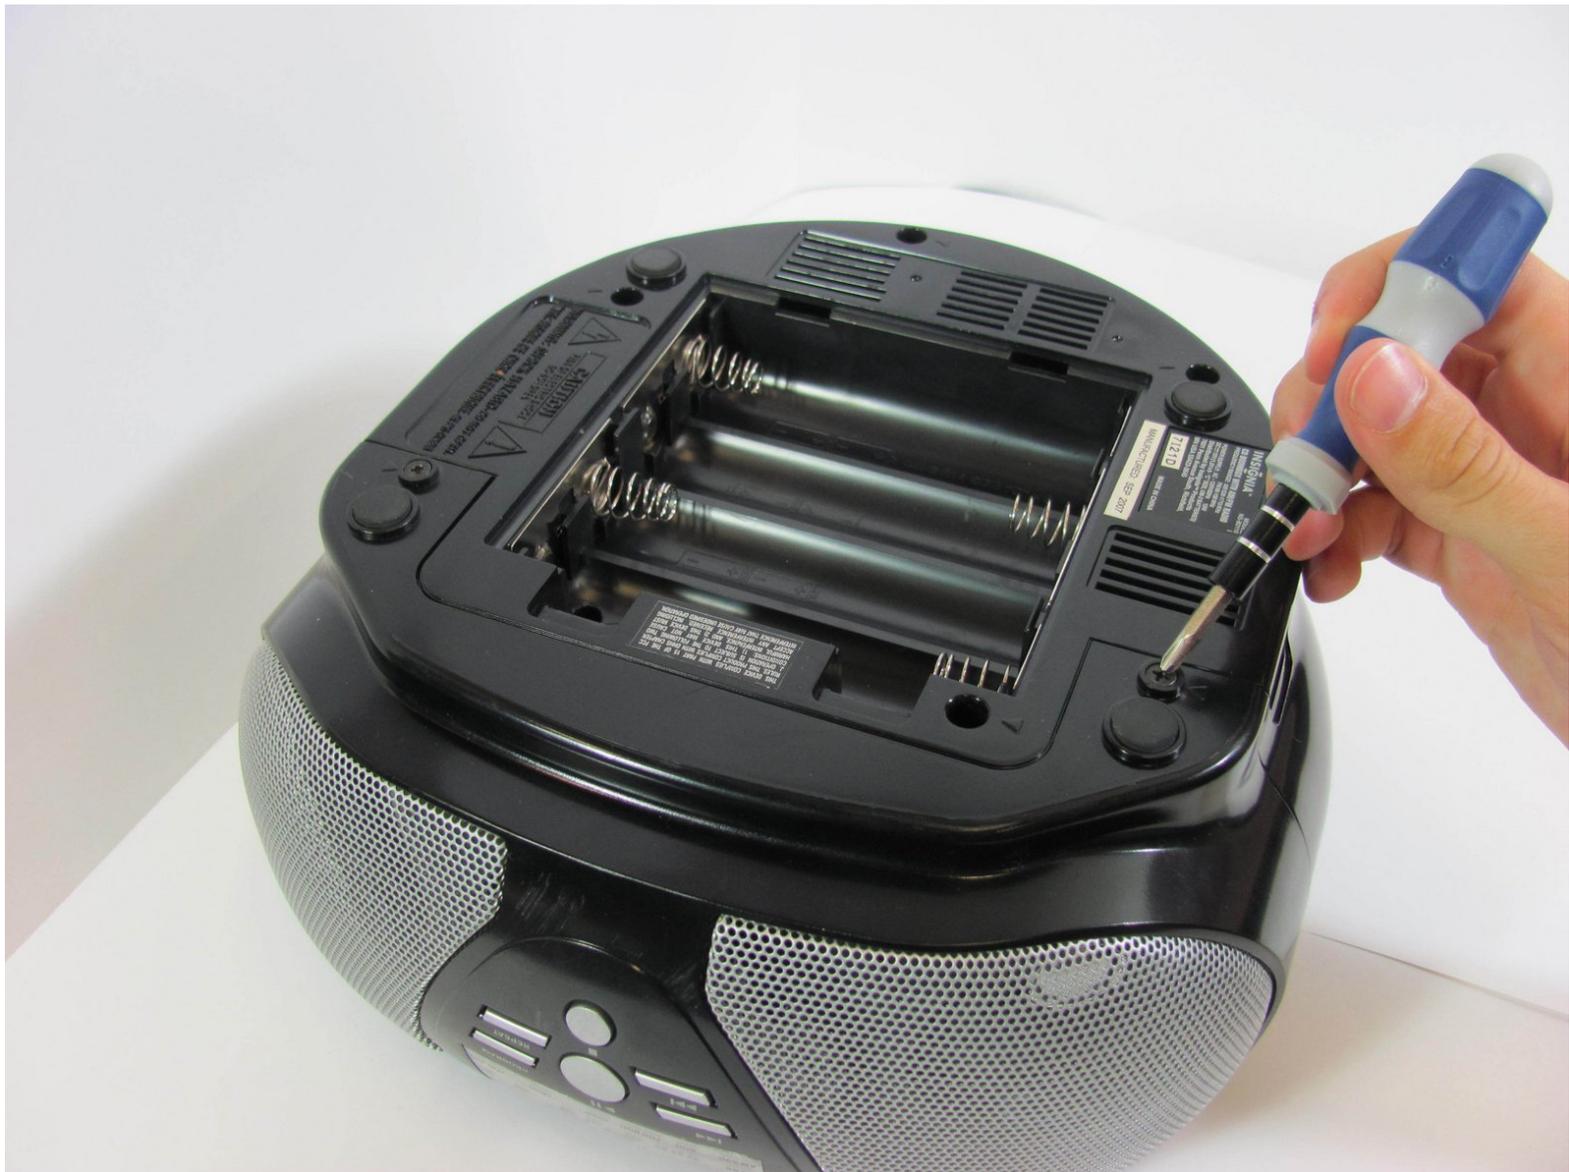

INTRODUCTION

For most of the fixes to this stereo, you must open up the device. To do so, you must remove the bottom panel or shell to get to the inside parts.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Battery




- Flip the stereo so the CD opening is face down.
- With two fingers, pinch the tabs and lift up to open the battery protection cover.

Step 2



- Using a spudger or your fingers, push up against the positive end of the battery. Once it is loose, lift the battery out.
- Repeat until all eight batteries are removed.
- ☞ Make sure the batteries are facing the right direction. If the device does not turn on, you may have the batteries in the opposite orientation.

Step 3 — Bottom Panel

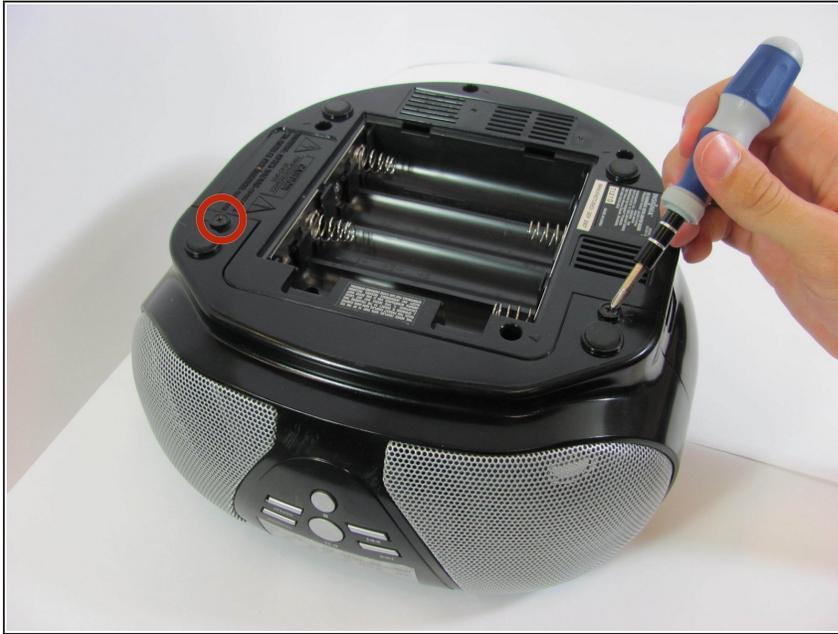

- With a Phillips #2 screwdriver, remove two 2mm screws.

Step 4



- Using a long Phillips #2 screwdriver, remove one 6mm screw located inside the battery compartment.
- Use the same screwdriver to remove four more 6mm screws along the outside of the case.

Step 5



- With a plastic opening tool, wedge the bottom shell from the main speaker face along the edge.
- ⚠ The bottom cover has two red and two yellow wires attached to it that you don't want to pull off. Handle the casing carefully.
- Once the pieces are separated, pull them apart and place the bottom cover aside, near the stereo.

To reassemble your device, follow these instructions in reverse order.