

# iPad Wi-Fi Display Assembly Replacement

The clips holding the front panel to the backplate break/bend very easily, especially if you have not opened an iPad previously. Buying the full set of 14 replacement clips is highly recommended.

Written By: Miroslav Djuric



## **INTRODUCTION**

Use this guide to remove your iPad's display.



## **TOOLS:**

- iPad Display Clip Set (1)
- Metal Spudger (1)
- iFixit Opening Tools (1)

#### Step 1 — Display Assembly








- If your display glass is cracked, keep further breakage contained and prevent bodily harm during your repair by taping the glass.
- Lay overlapping strips of clear packing tape over the iPad's display until the whole face is covered.
  - This will keep glass shards contained and provide structural integrity when prying and lifting the display.
- Do your best to follow the rest of the guide as described. However, once the glass is broken, it will likely continue to crack as you work, and you may need to use a metal prying tool to scoop the glass out.

Mear safety glasses to protect your eyes, and be careful not to damage the LCD screen.





- In this guide you will be prying the iPad's display assembly away from the aluminum body. Read ahead and follow the directions closely to avoid damaging the display assembly or the fragile clips holding it in place.
- There are 14 metal clips holding the display assembly in place, shown at left. As you pry in the following steps, do your best to pry around these clips and not slice through them with your opening tool.
  - (i) If you do happen to break some clips, you can buy replacements <u>here</u>.

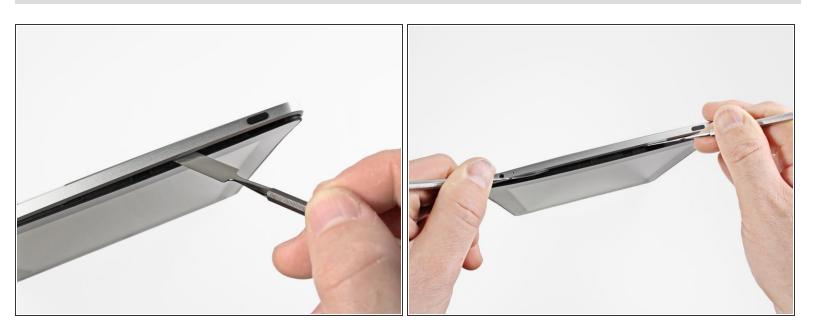

- Insert a metal spudger between the top edge of the display assembly and the rear panel assembly.
- Rotate the spudger away from you to release the tabs along the top edge of the display.
- Insert a second metal spudger between the top edge of the display assembly and the rear panel assembly to keep the tabs from snapping back into place.




- With one spudger, work your way along the right edge of the iPad.
- The front panel is held to the aluminum back by metal clips on the top, bottom, and left sides. The right side has plastic tabs which slide into recesses in the backplate.
- Once the clips are released, lift the left side of the front panel up and slide it to the left to clear the tabs from the aluminum backplate.

Pry carefully and gently—if you feel resistance, stop and pry at another spot.



- Lift the display assembly away from the rear panel assembly by its bottom edge.
- ♠ Do not attempt to remove the display at this time, as it is attached to the rear panel assembly.

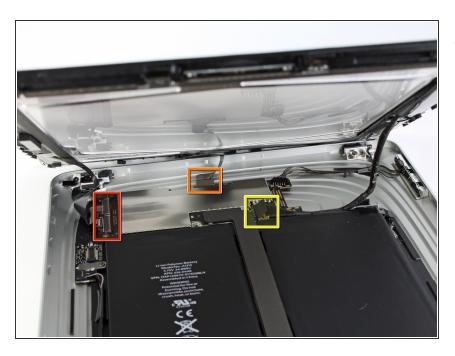

- In the following steps, you will disconnect the three cables attaching the display assembly to the logic board. The cables are for the following components:
  - Digitizer
  - Ambient Light Sensor
  - Display Data Cable








- Use the edge of a plastic opening tool to flip up the retaining flaps holding the digitizer ribbon cables in their sockets on the logic board.
- A Be sure you are flipping up the retaining flap, **not** the socket itself.
- Pull the digitizer ribbon cables straight out of their sockets.




 Use a plastic opening tool to remove the ambient light sensor connector from its socket by gently prying upward.

## Step 9

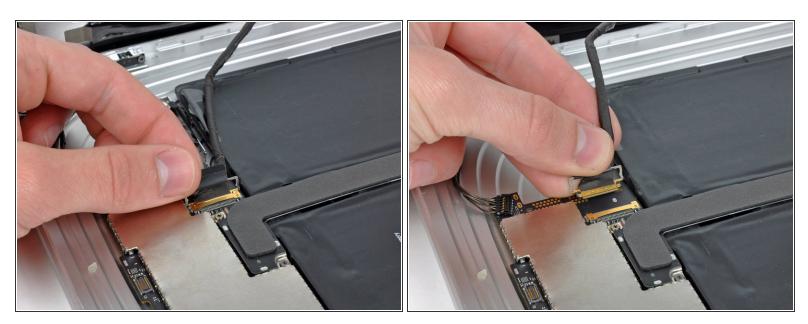

- Disconnect the display data cable from the main board by flipping up the metal retainer by its black plastic pull tab.
- Pull the cable connector away from its socket.
- Pull the connector parallel to the face of the logic board.

This document was generated on 2020-11-28 01:43:20 AM (MST).

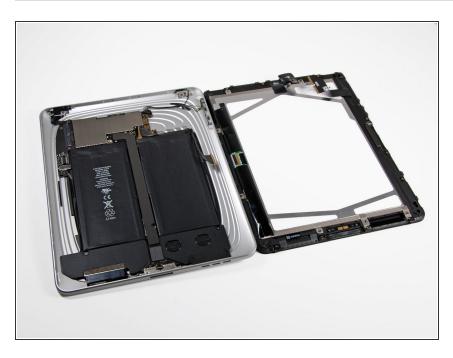

 Remove the display assembly from the rear panel assembly.

To reassemble your device, follow these instructions in reverse order.