



Uniden TCX905 Back Speaker Replacement

This guide will show the user how to access and remove the back speaker.

Written By: Gary Pence



INTRODUCTION

The back speaker is where the ring of the phone comes from.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Flush Wire Cutters](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery Cover



- Starting from the top of the cover, slide down and away from the phone with your thumb
- Lift battery cover off of batter and place it to the side

Step 2 — Battery Pack

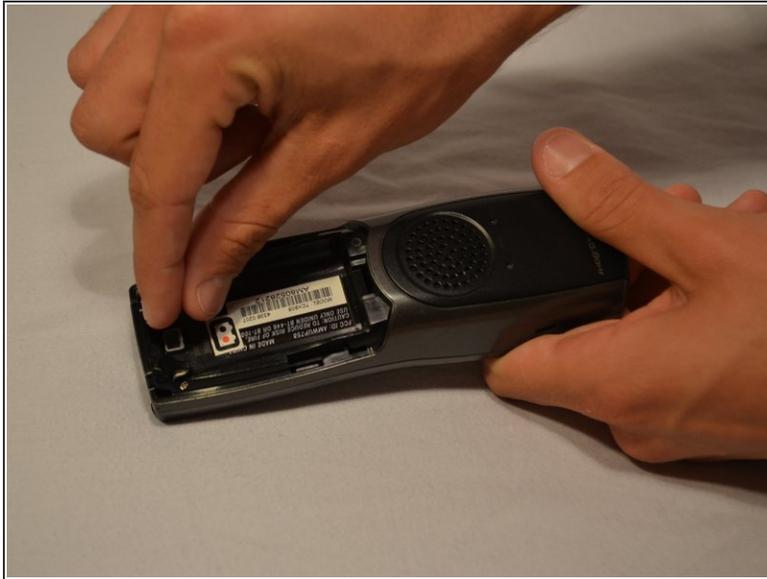



- Once battery cover is removed, place your thumb and index fingers on the the wires near the receptacle
- Gently pull straight up on the wires until a click is heard which signifies the battery is completely disconnected
- Place battery pack to the side

Step 3 — Back Shell



- Remove the two 11mm screws inside the battery storage compartment using Phillips #1 screwdriver (located near the very bottom of the phone)

Step 4

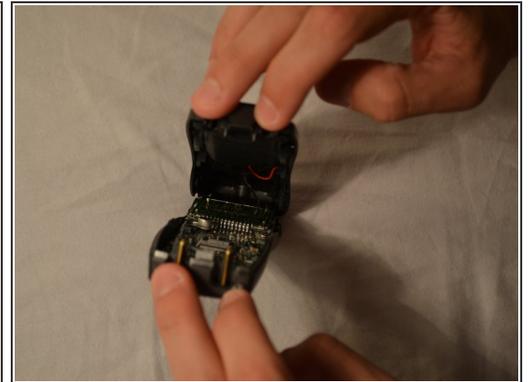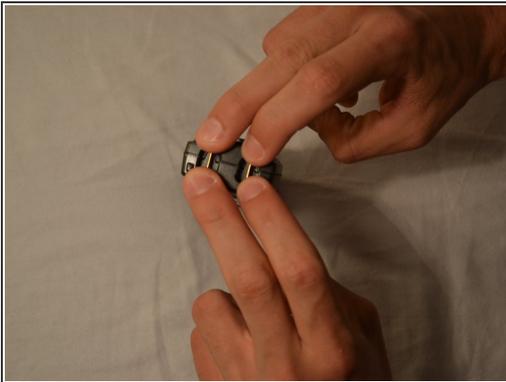


- Gently open phone casing along the seam at the bottom of the phone using index and middle fingers of both hands

Step 5



- Ensure that wired connection between circuit board and back shell is not strained
- Fold the back shell underneath the front shell and circuit board

Step 6 — Back Speaker

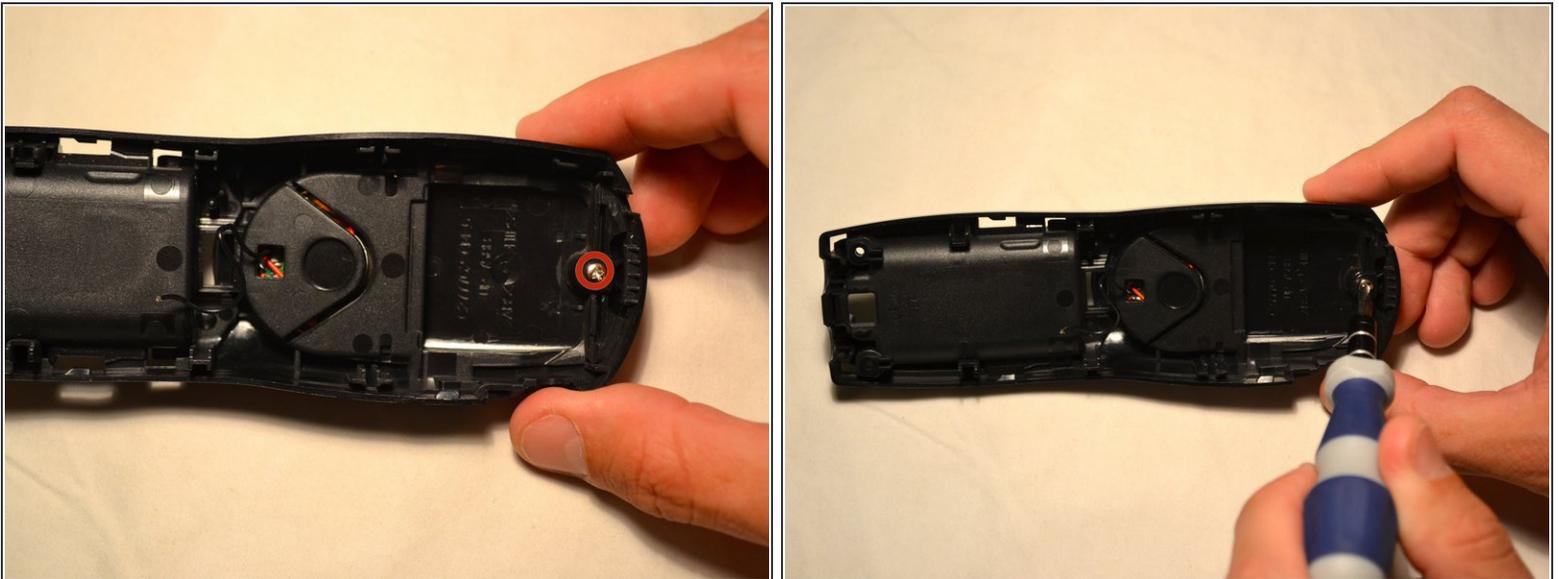

- Lay the back shell with the inside facing up
- To remove the speaker guard, first remove the 7mm screw from inside the back shell

Step 7



- To access the speaker, flip the back shell over and use a plastic opening tool to pop open the black cover
- Gently push the speaker guard out of place with your thumb
- Carefully slide the speaker out from its setting and place speaker guard aside

Step 8



- With speaker exposed, remove the speaker by cutting the red and black wires near their contact location

To reassemble your device, follow these instructions in reverse order.