




iHome iH5 Dials Replacement

Use this repair guide to replace the dials on a iHome iH5.

Written By: Maggie Hill

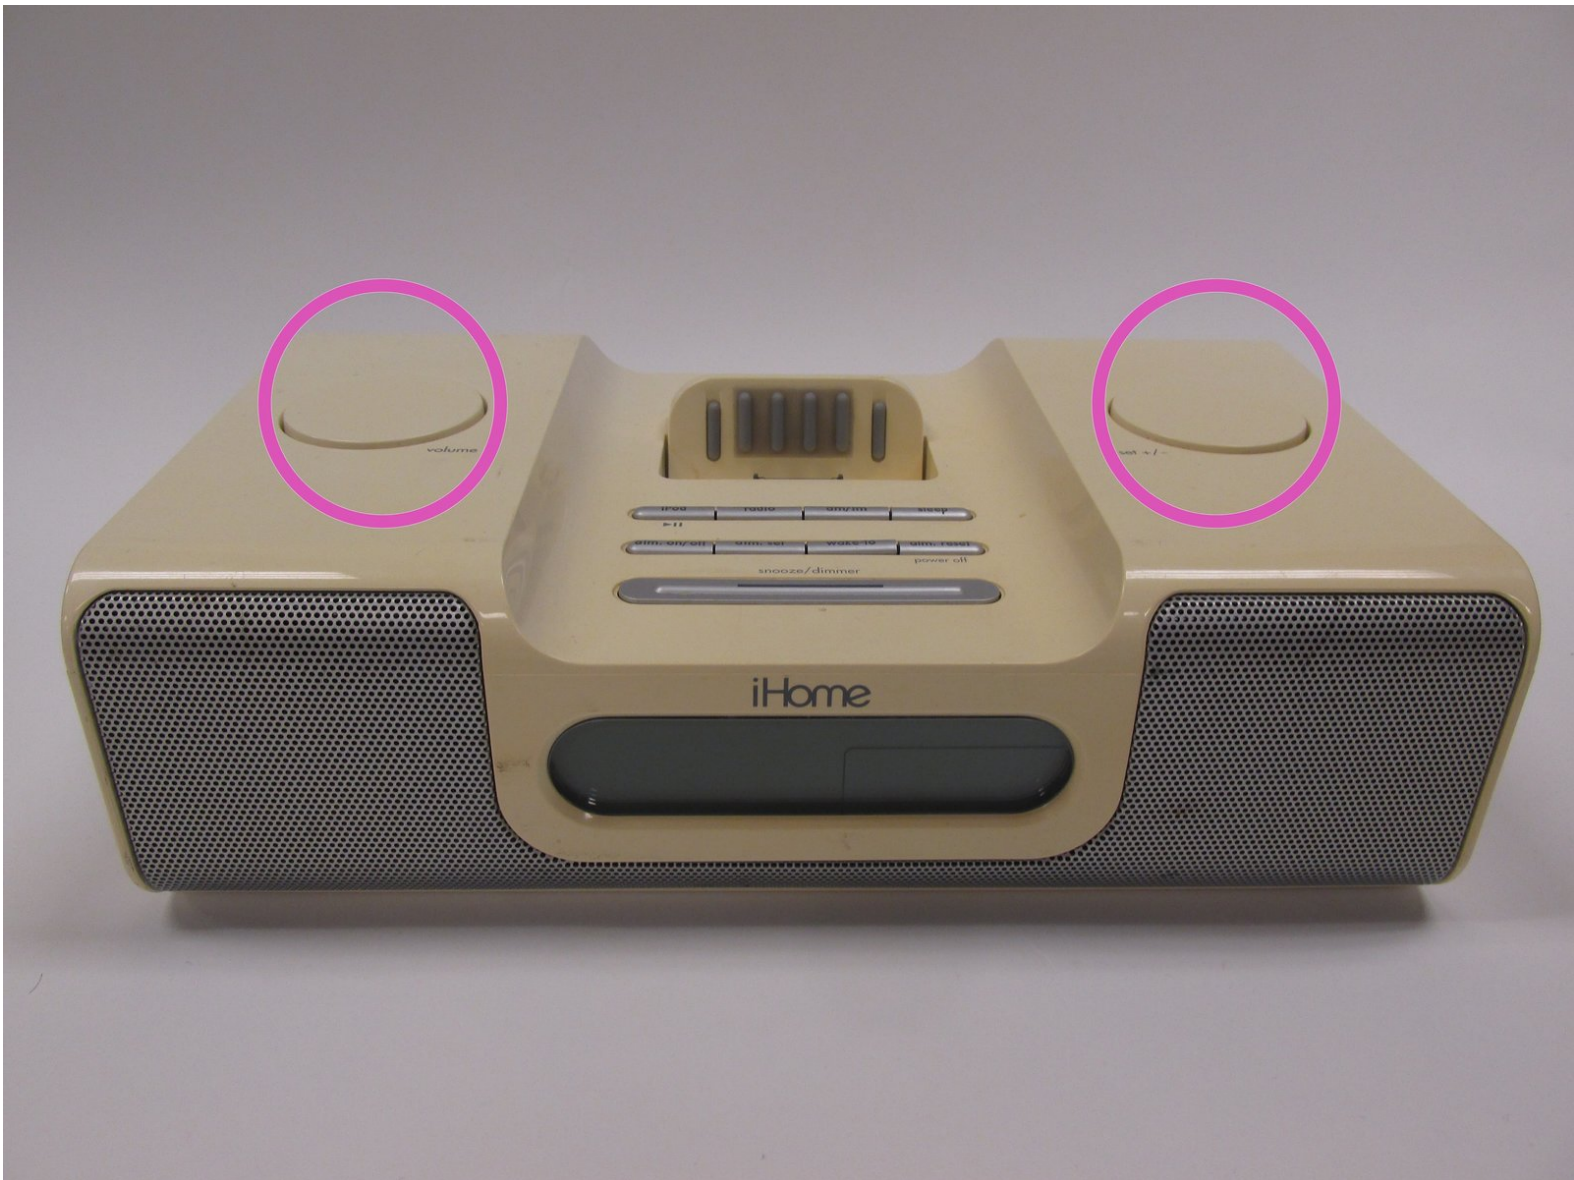

INTRODUCTION

This is a cleaning and replacement guide for the iHome iH5.




TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Tweezers](#) (1)


8" Needle Nose Pliers can also be used.

Step 1 — Dials

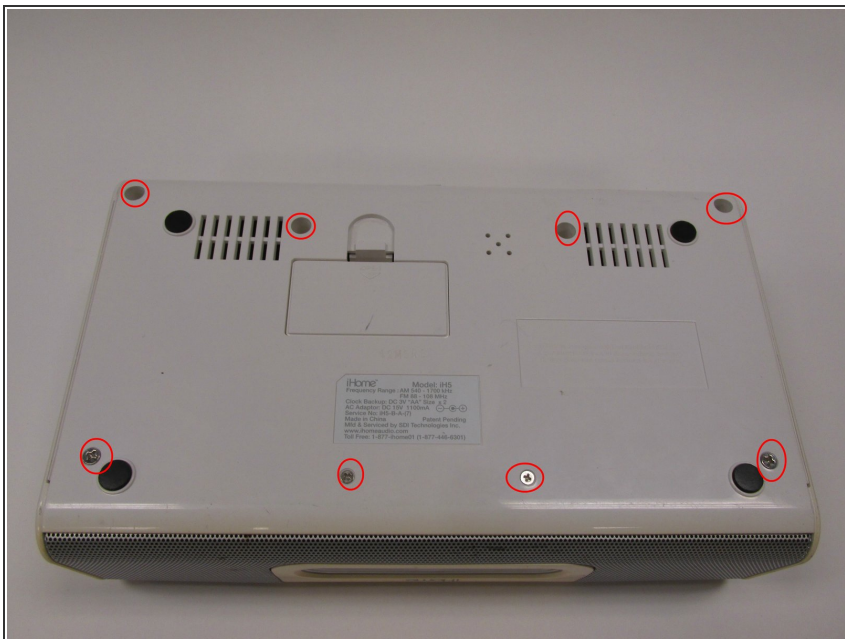


- Remove the eight screws from the bottom side of the iHome.

Step 2

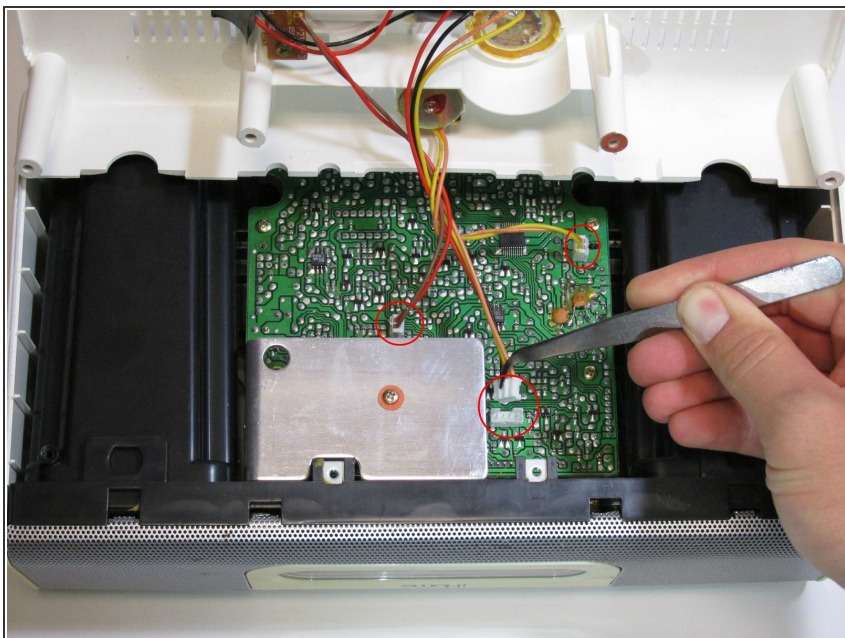


- Remove the cover to expose the inside.
- With pliers, or tweezers, if needed, remove the three wire harnesses by gently pulling straight up on them.

Step 3

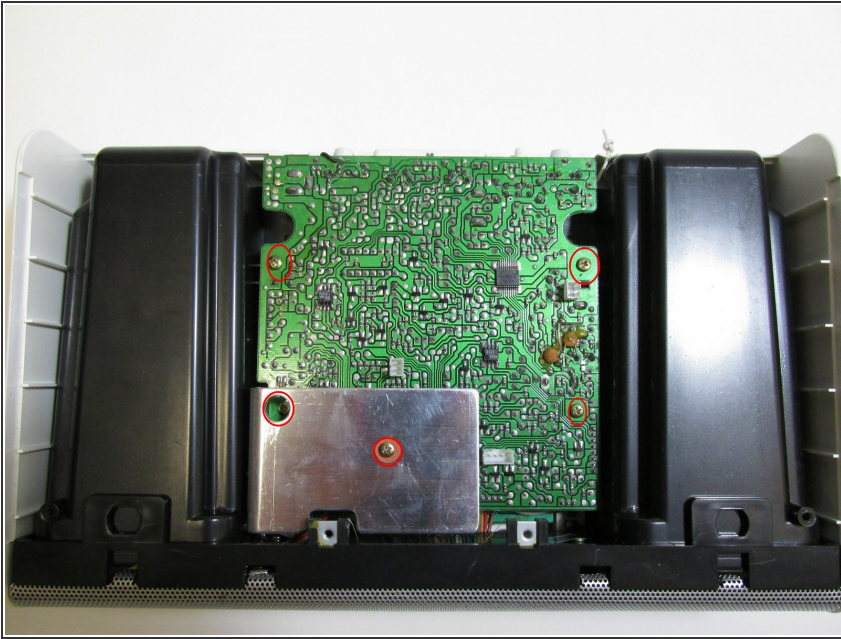



- Remove the 5 screws with a #2 Phillips screwdriver.

Step 4

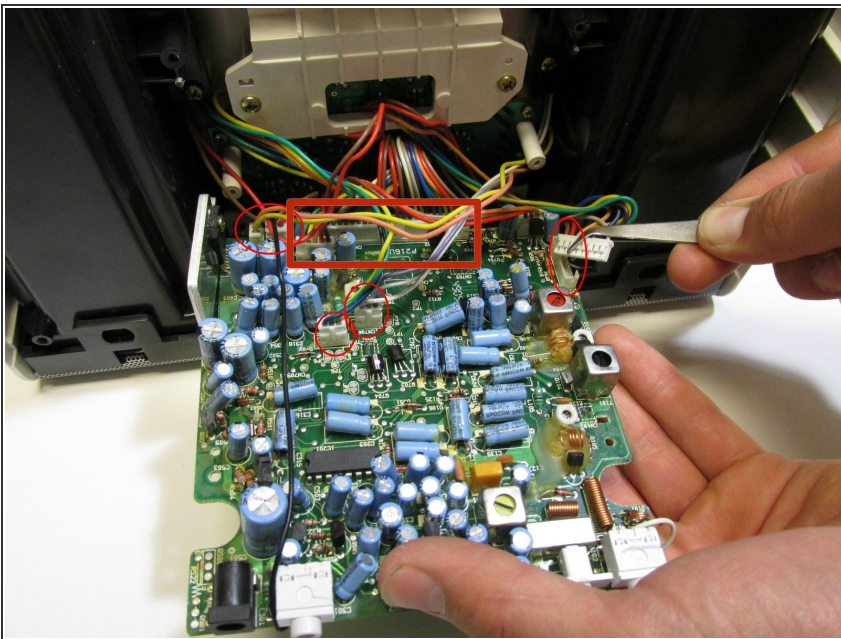


- Remove all wire harnesses from the bottom of the board. There eight wire harnesses.
- ⚠ There are capacitors all over the back side of the board. Be careful not to touch these capacitors (blue cylinders) as they can discharge—giving you a shock.

Step 5

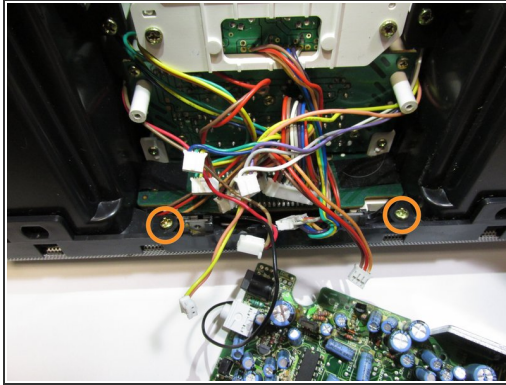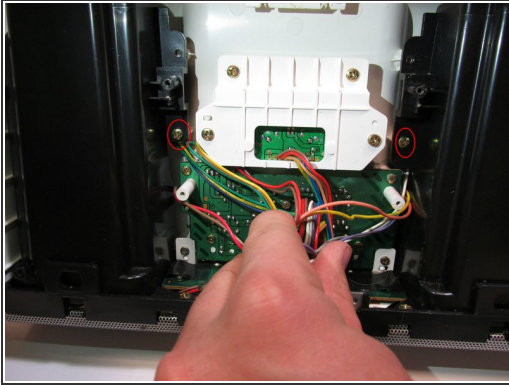


- Remove the two screws from the speakers with a #2 Phillips screwdriver.
- Turn the device on its front side and remove the two screws with a #2 Phillips screwdriver.
- Pull the speaker up from the back as shown with the speaker on the right. Then pull the speaker straight back as shown with the speaker on the left.

Step 6

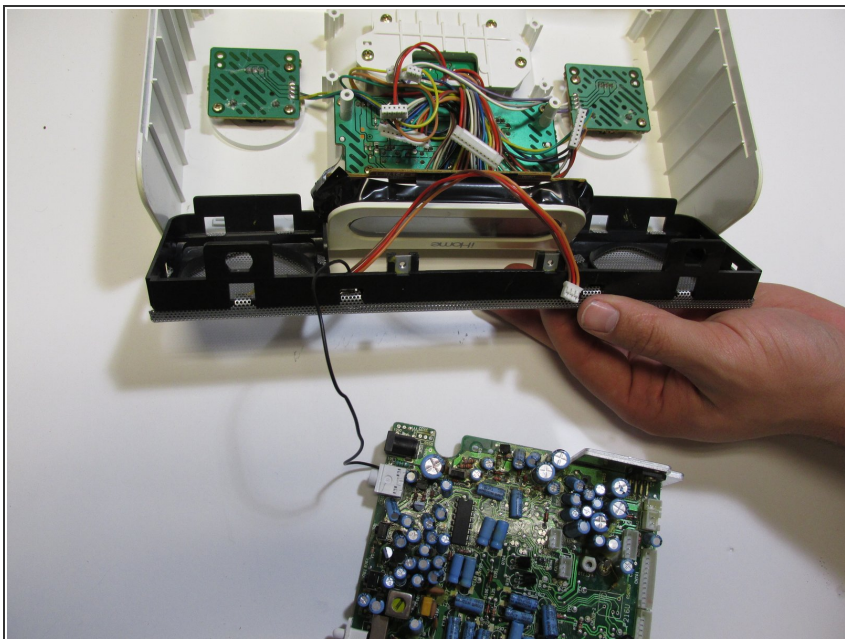


- Remove the front piece by pulling up until it hits the plastic pieces sticking out from the display screen. Then pull it out horizontally from the device.

Step 7

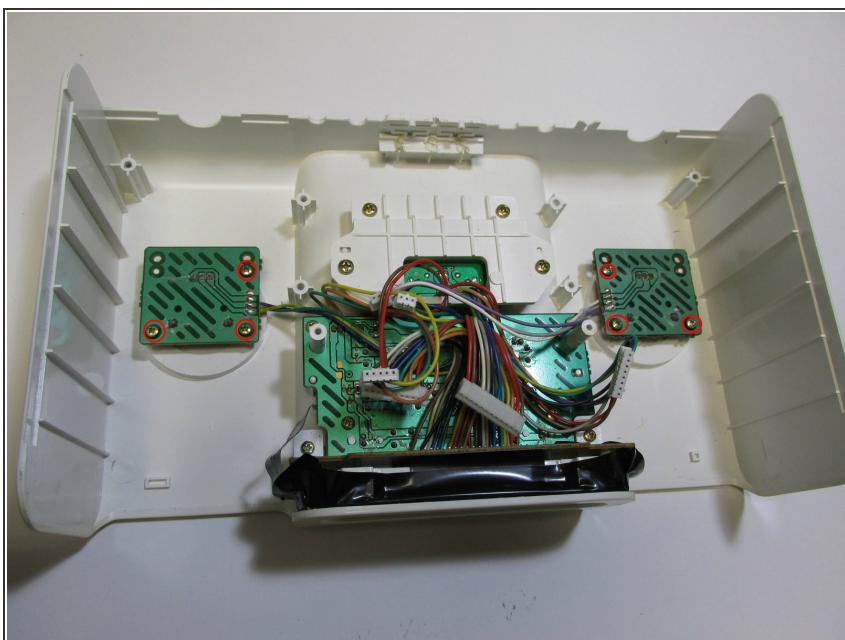

- Remove the three screws from the dial with a #2 Phillips screwdriver.

Step 8

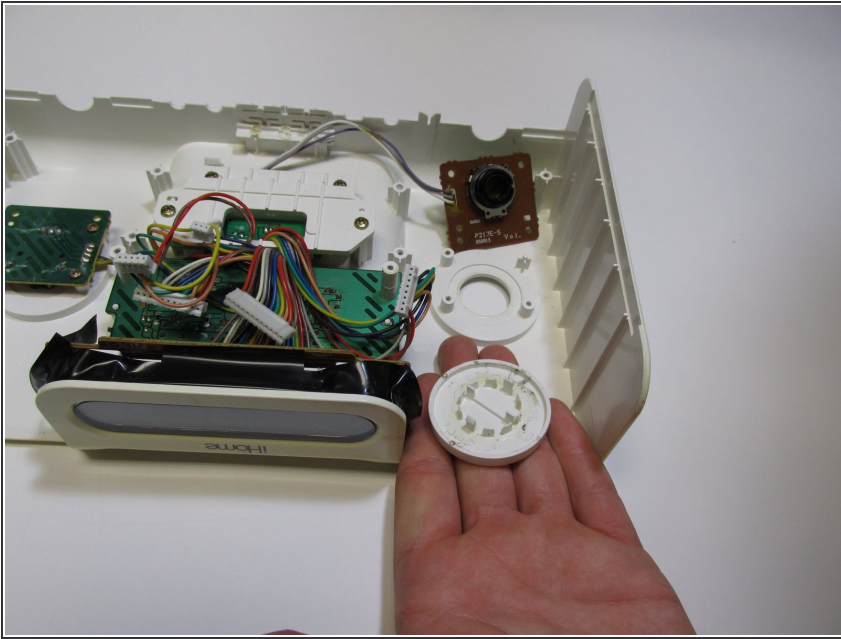

- Pull back the circuit board to access the plastic piece.
- Lift to separate the plastic piece from the dial.
- Replace the broken piece.

To reassemble your device, follow these instructions in reverse order.