


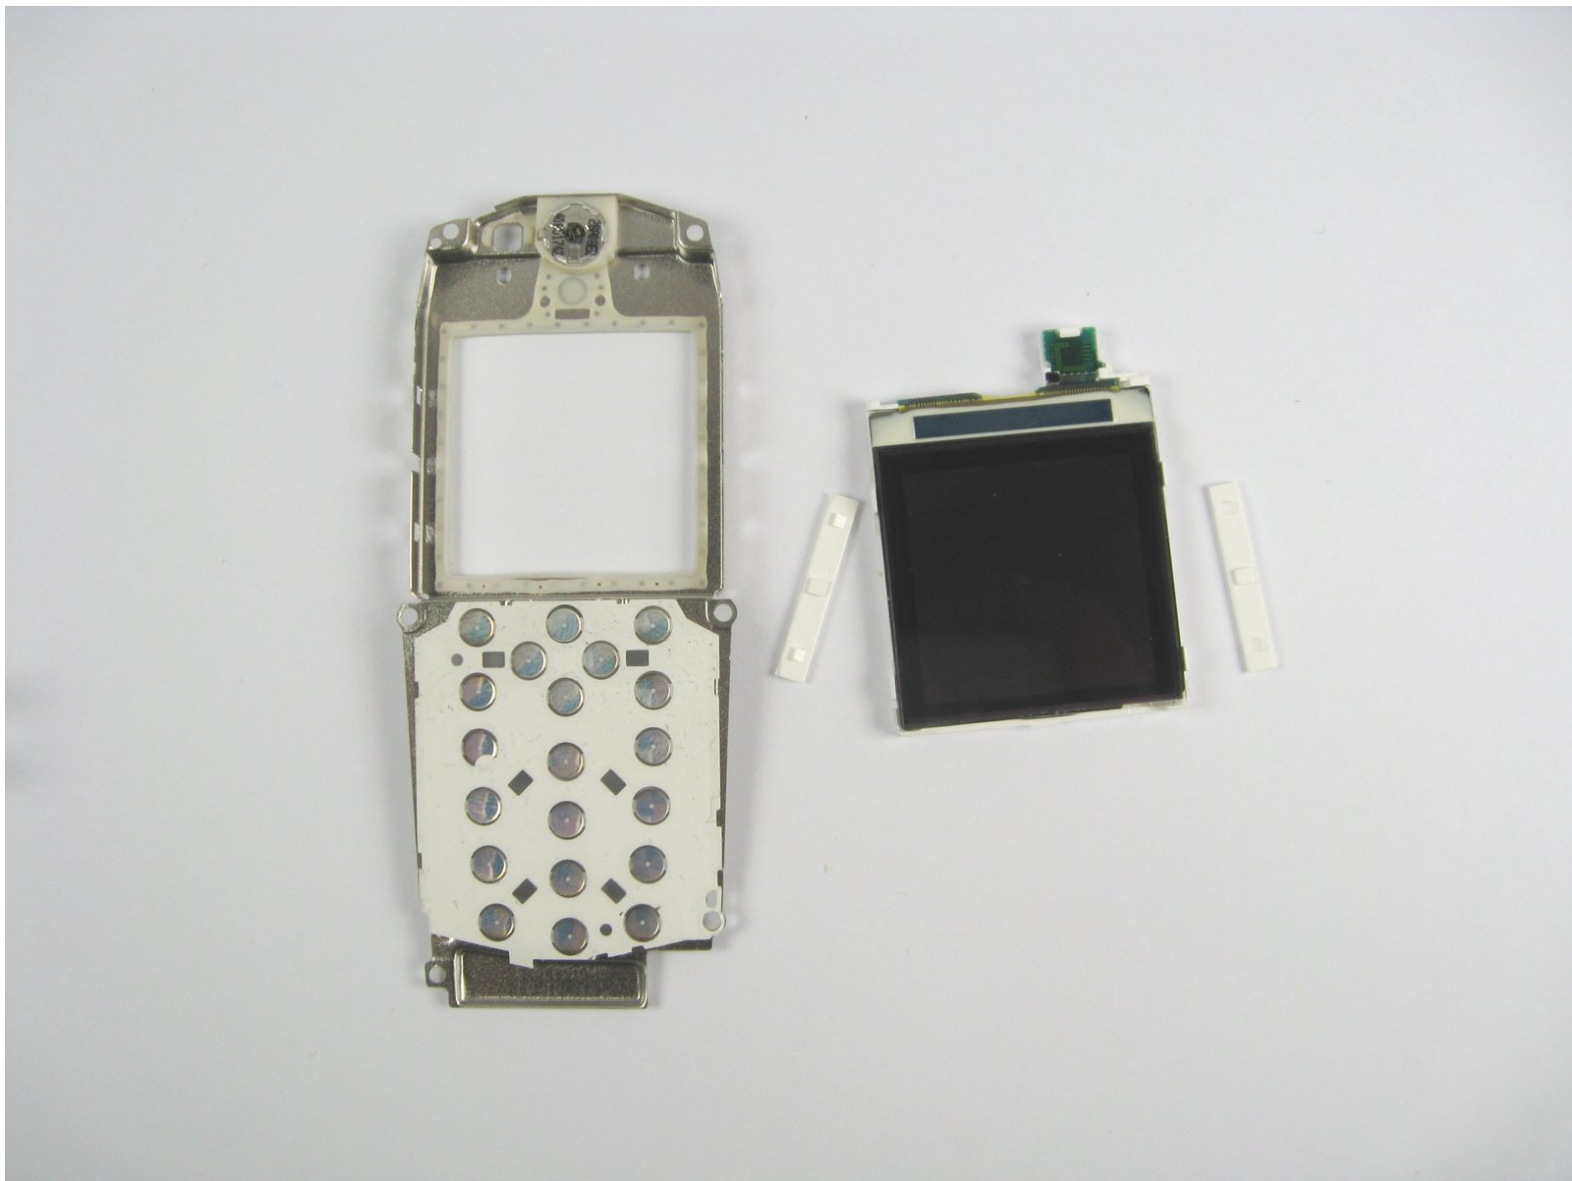

Disassembling Nokia 3100b Speaker

Written By: Sterling Fuentes



INTRODUCTION

This guide shows you how to access the speaker of your phone, the component which produces sound.



TOOLS:

- [T6 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery



- Make sure your phone is turned off.

Step 2



- Press the button on the back of the phone and slide the back panel off.
- Remove the battery by pulling it from the phone.

Step 3 — SIM Card



- Gently pull back the small metal frame holding the SIM card into place, and lift open the frame.

Step 4



- Retrieve your SIM card.

Step 5 — Screen



- Separate the front cover from the main body of the phone.

Step 6




- Remove the six screws along the edges of the phone.

Step 7



- Pull the screen assembly from the base of the phone.

Step 8

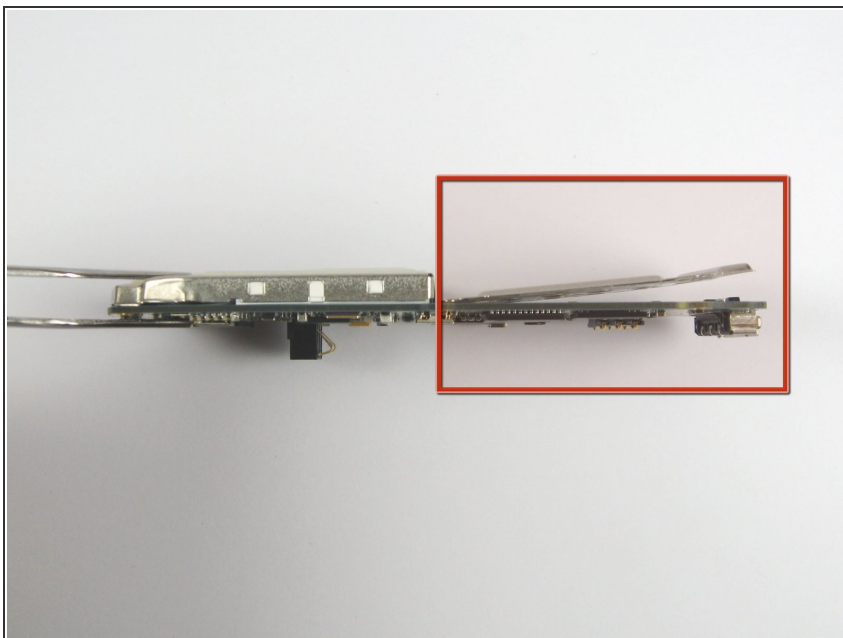

- Carefully lift the keypad portion of the screen assembly from the circuit board.

Step 9




- Separate the screen from the circuit board.
- Reconnect the ports during reassembly or the screen will not function properly.
- ☑ Remember to reconnect the screen to the circuit board when reassembling!

Step 10



- Gently push down on the screen to pop it off of the assembly.

Step 11

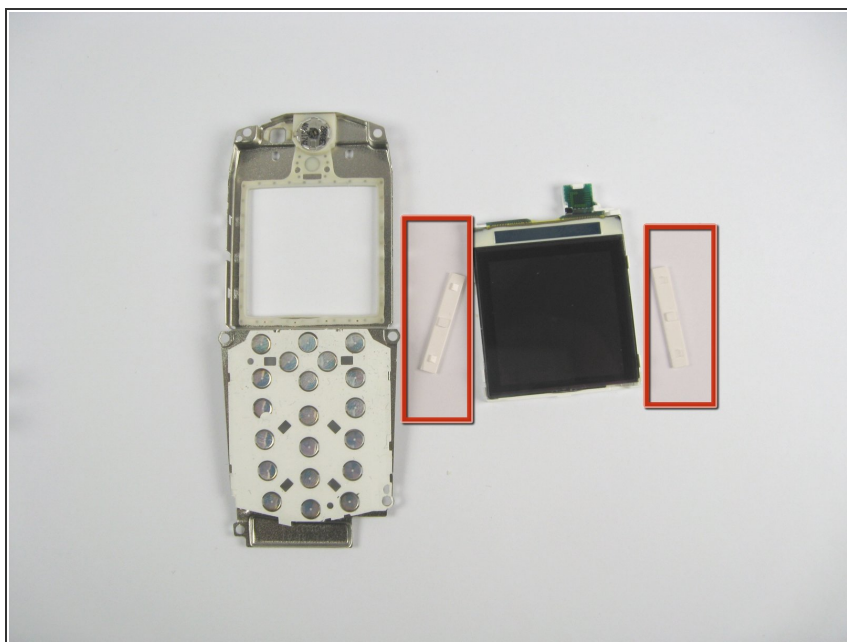


- When the screen falls out the assembly, two white tabs will fall out with it.
- ★ When reinstalling the screen, insert the tabs with the slanted side pointing upwards so they slide into the assembly.

Step 12 — Speaker




- Set the screen and the tabs aside.

Step 13

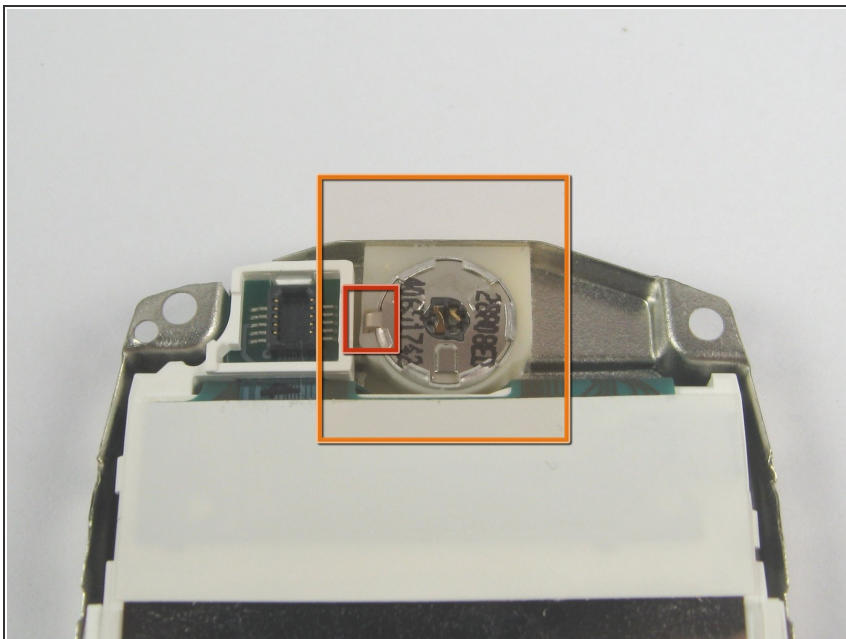

- You can now access the speaker.
- Note the tab on the end of the speaker. It must be placed in correctly in order to reinstall the speaker.

Step 14

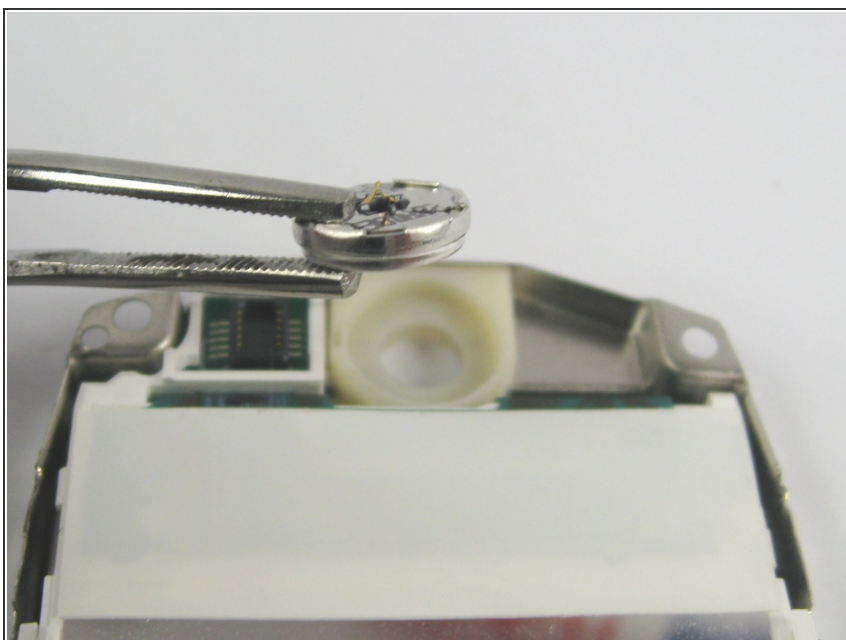

- Remove the speaker from the assembly.

To reassemble your device, follow these instructions in reverse order.