



Panasonic Toughbook CF-29 RAM Replacement

Written By: Devon Augustus



INTRODUCTION

This guide will show you how to add or replace the RAM in your Toughbook CF-29.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Locate the bay door for the battery on the left side of the laptop.

Step 2



- Slide the latch to the right and then down to unlock it.
- Pull out the battery.

Step 3 — RAM



- Use a Phillips size 0 screwdriver to remove the 4 screws holding down the ram cover.

Step 4



- Pull the clips aside to release and remove the RAM.

To reassemble your device, follow these instructions in reverse order.