



# LG TP 1100 Microphone Replacement

How to replace a LG TP 1100 microphone.

Written By: Johnny Inlow



---

# INTRODUCTION

This guide provides instructions for replacing the microphone on the LG TP 1100 flip phone.

---



## TOOLS:

- [Heavy-Duty Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Microphone



- Hold antenna between your fingers and unscrew in a counterclockwise direction.

## Step 2



- You will remove antenna by pulling it in an upward motion away from the socket.

### Step 3



- Turn phone so that the back is facing you.

### Step 4



- Use your thumb to pull the tab in an upward motion to release the battery.



## Step 5



- Hold phone securely in one hand and pull the battery away from the phone with your other hand.

## Step 6



- Use your screwdriver to unscrew the four screws from the back plate.

## Step 7




- Turn phone to the side as indicated in the picture.

## Step 8





- Remove the back cover that you just unscrewed and set aside.

## Step 9

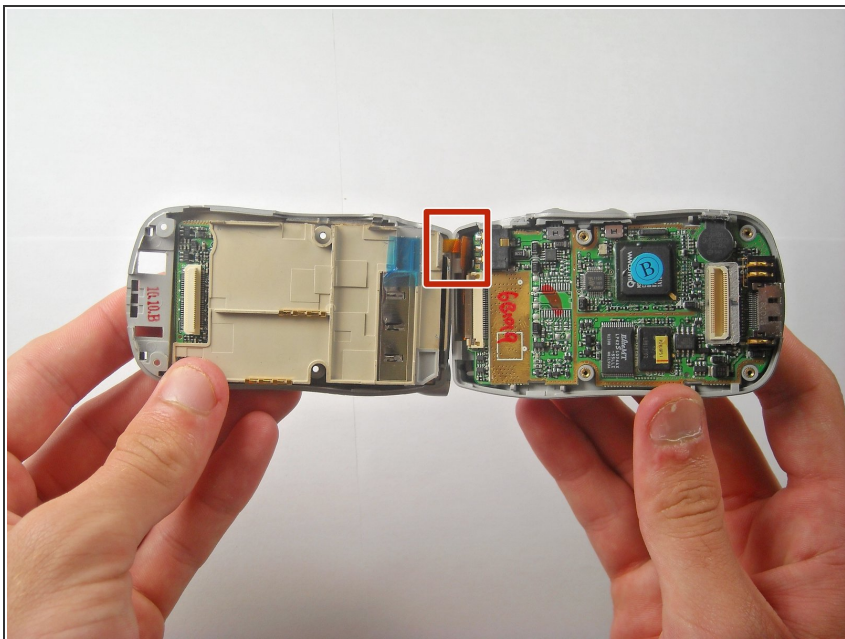

- Open the remaining parts like a book but do not separate the two pieces.
- ⓘ Do not tear the tape connecting the two pieces.


## Step 10

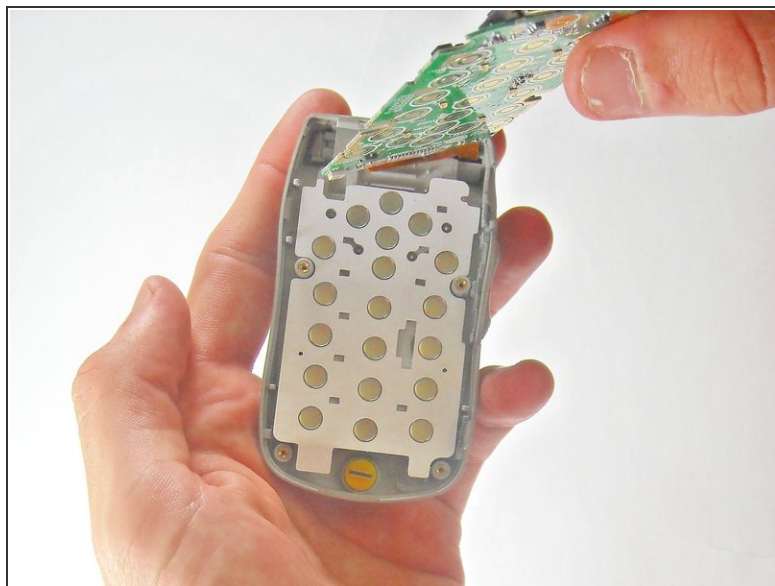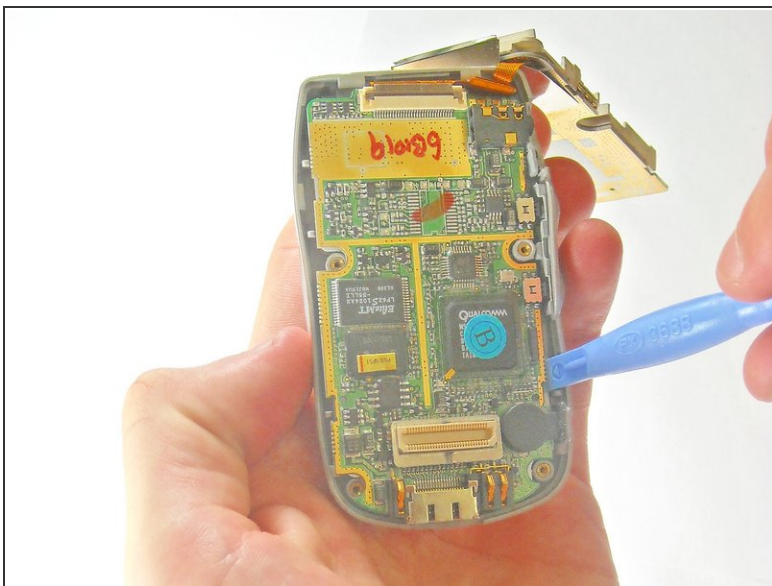

- Rotate the phone so that the circuit board is in the palm of your hand and the part connected with tape hangs behind.
- Use your opening tool to pry the circuit board from the front cover. Do not let the number pad to fall out.



## Step 11

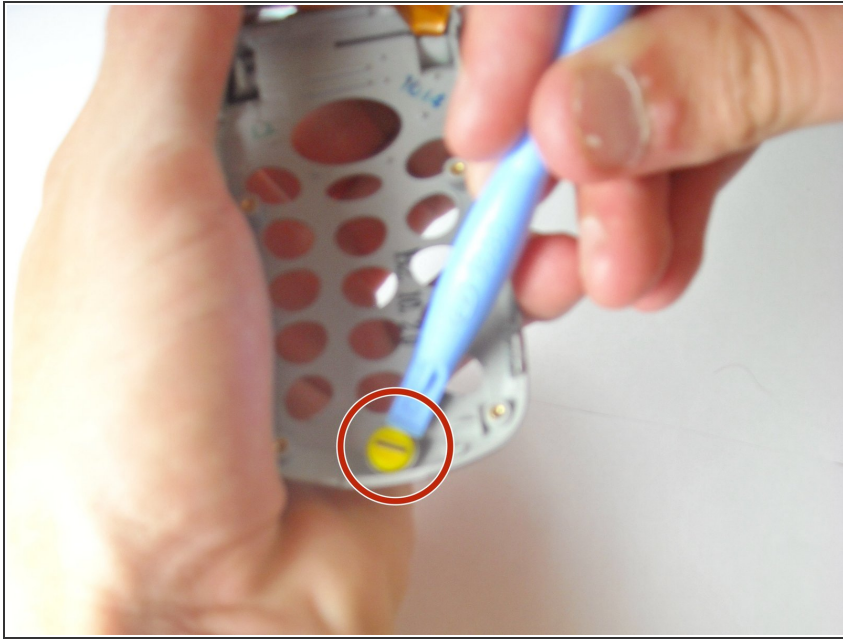

- To remove the microphone, insert your opening tool under microphone and push upward to pry microphone away from the front cover.

To reassemble your device, follow these instructions in reverse order.