


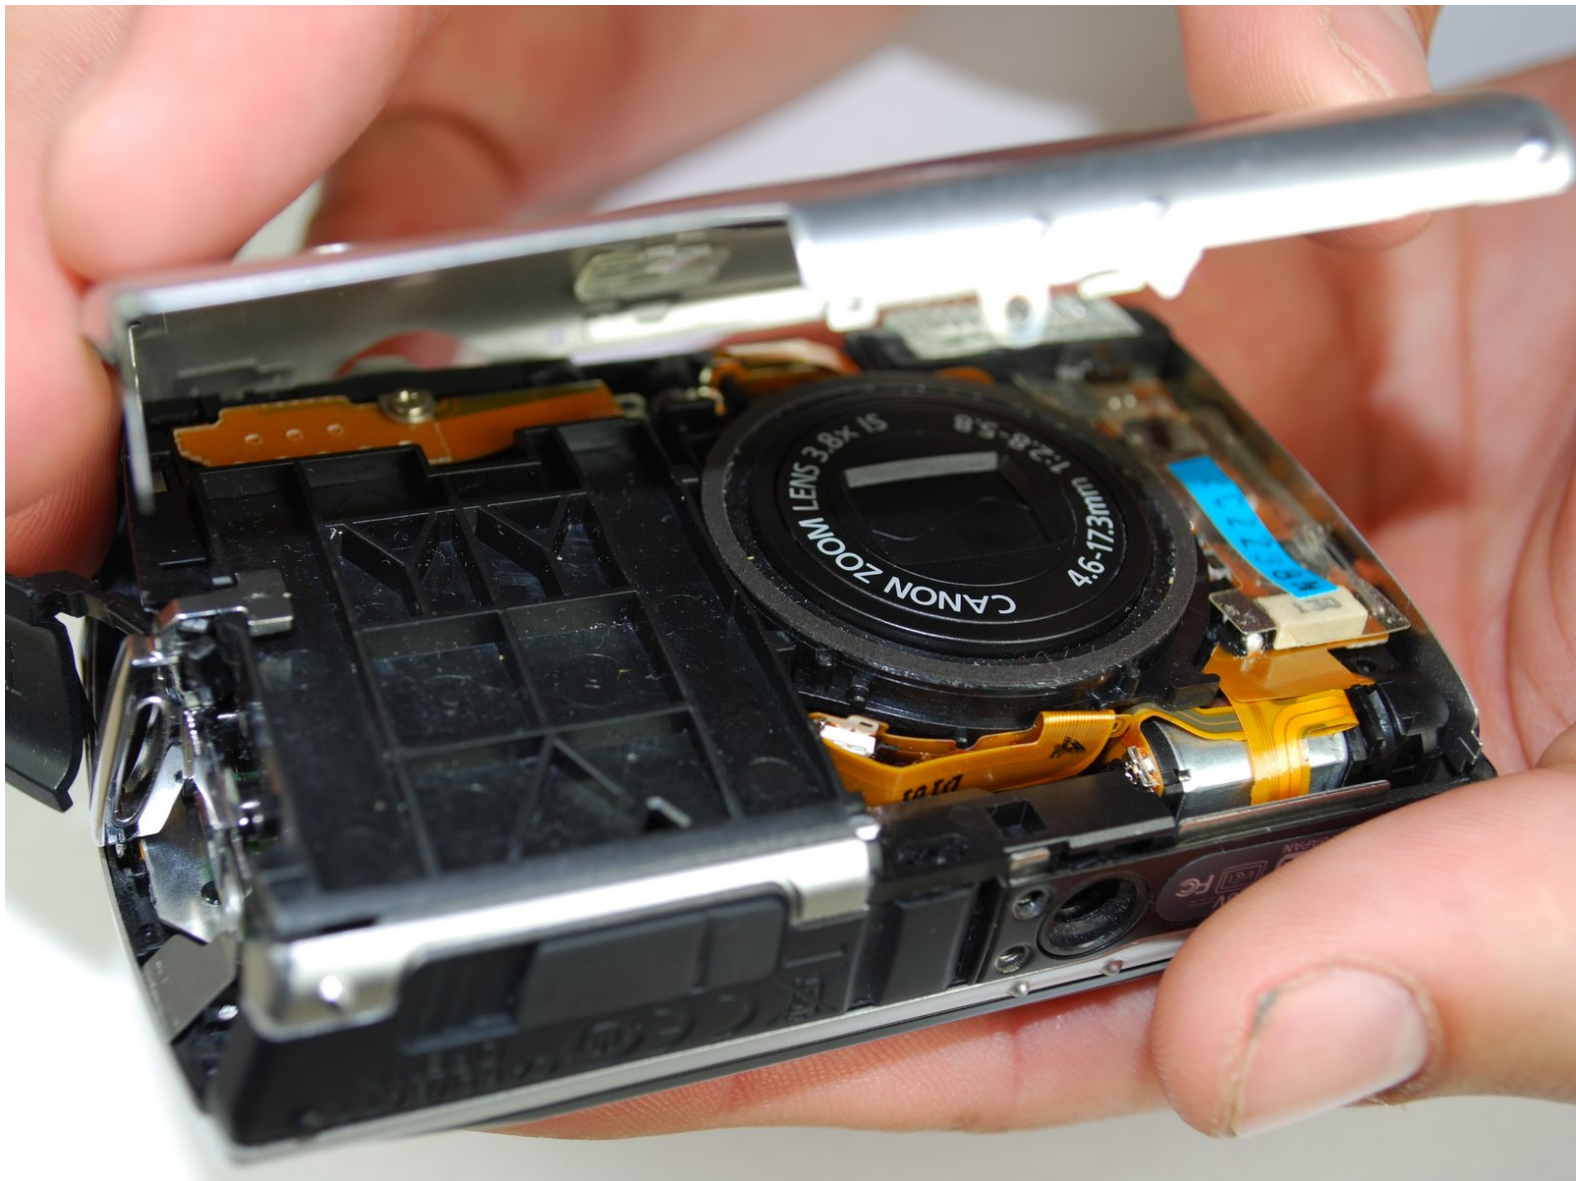

Canon PowerShot SD870 IS Outer Case Replacement

Replace the outer case.

Written By: Zach pelley



INTRODUCTION

How to remove the outer casing of your Canon PowerShot SD870 IS.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Outer Case



- Remove the wrist strap, if present.
- Remove the lithium-ion battery.

Step 2





- Remove the two 4 mm Phillips #00 screws on the bottom of the camera.
- Remove the screw next to the wrist strap attachment.
- Pull up the “A/V OUT DIGITAL” cover and remove the screw above the USB port.

Step 3




- Carefully unhook the “A/V OUT DIGITAL” cover from the hinge.

Step 4

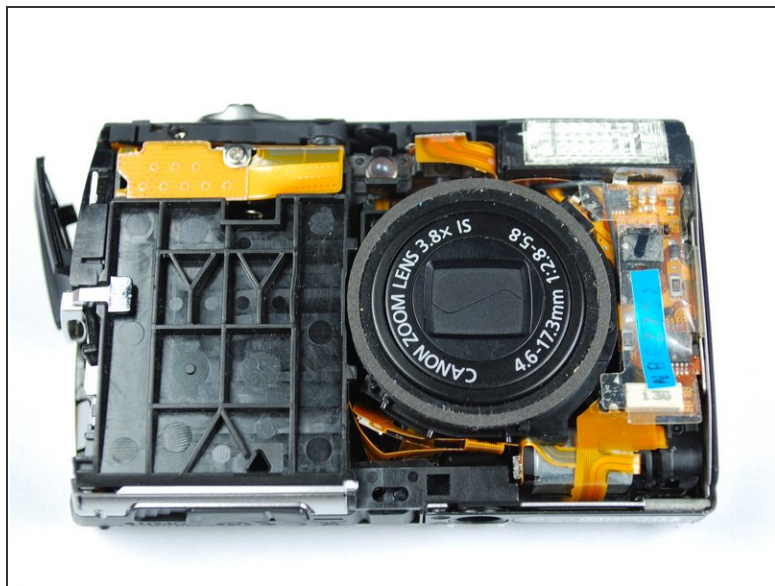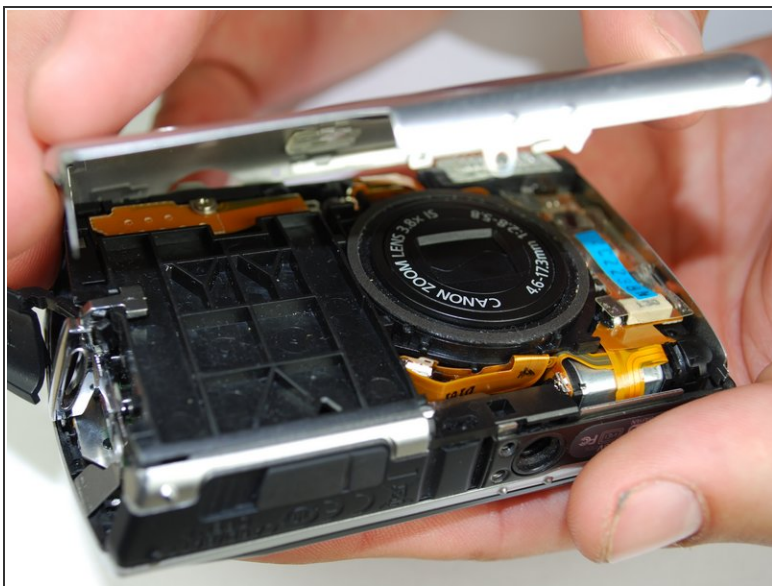

- Pull the front cover from the camera by using gentle upward pressure.

Step 5

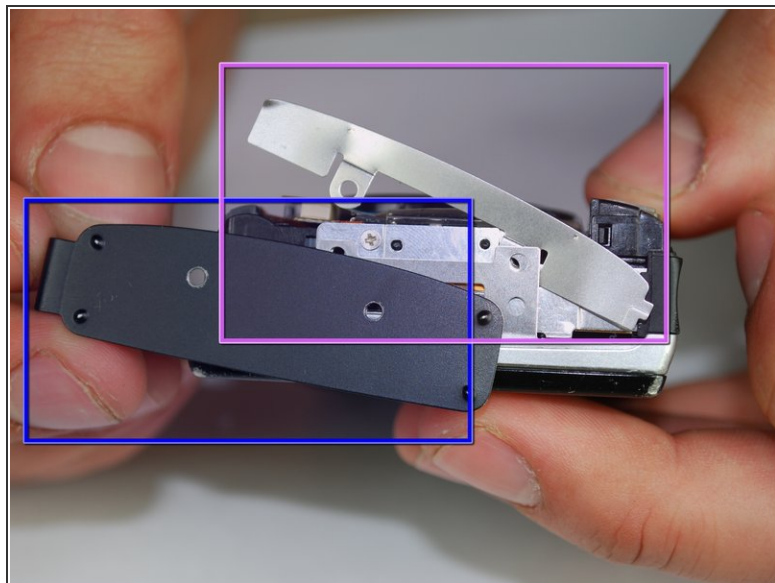

- Remove the two Phillips #00 screws from the flat end of the camera.
- Remove the black L-shaped side cover plate.
- Remove the silver u-shaped retainer plate.

Step 6



- Slide the back casing off.

To reassemble your device, follow these instructions in reverse order.