



# Repairing Acer Ionia B1-A71 Touch Screen Digitizer

Repairing Acer Ionia B1 (Tablet) - Touchscreen problem

Written By: ZFix



---

## INTRODUCTION

Very often problem with this model. In 60% it can be resolved only with reconnecting the Touchscreen flex / ribbon cable.

If this solution not helped you then you must to change your Touchscreen.

[Acer Iconia B1-A71 Touchscreen Replacement](#)

[Please SUBSCRIBE to my channel ツ](#)


[video: [http://youtu.be/\\_WkFaGAdS9g](http://youtu.be/_WkFaGAdS9g)]

---

## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
-


## Step 1 — Repairing Acer Iconia B1-A71 Touch Screen Digitizer

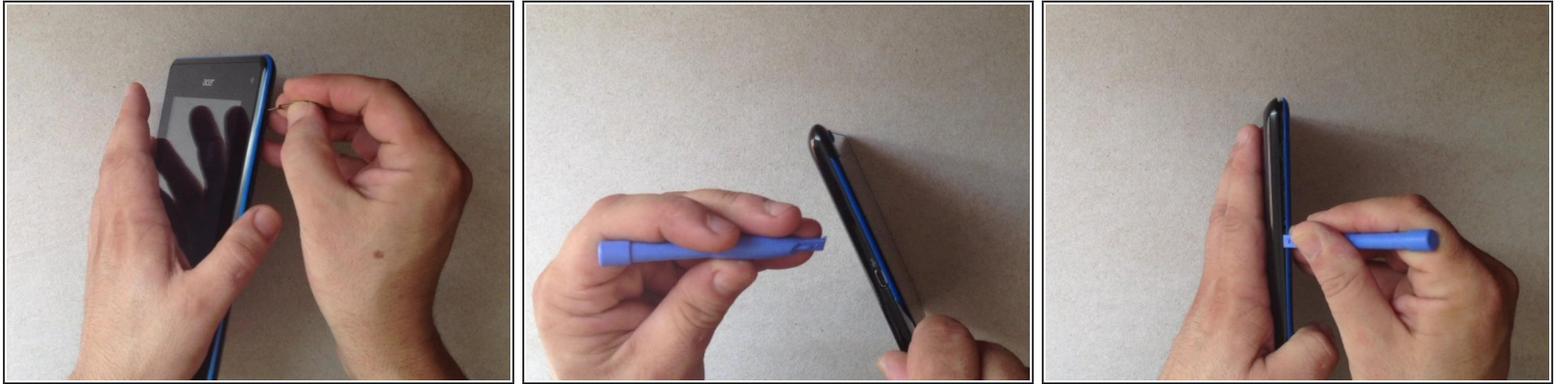

- Because I can't switch-off the tablet, I'm using the reset button to do this.
- Now, remove the back cover.

⚠ If you have a memory card inside, don't forget to remove it!

## Step 2

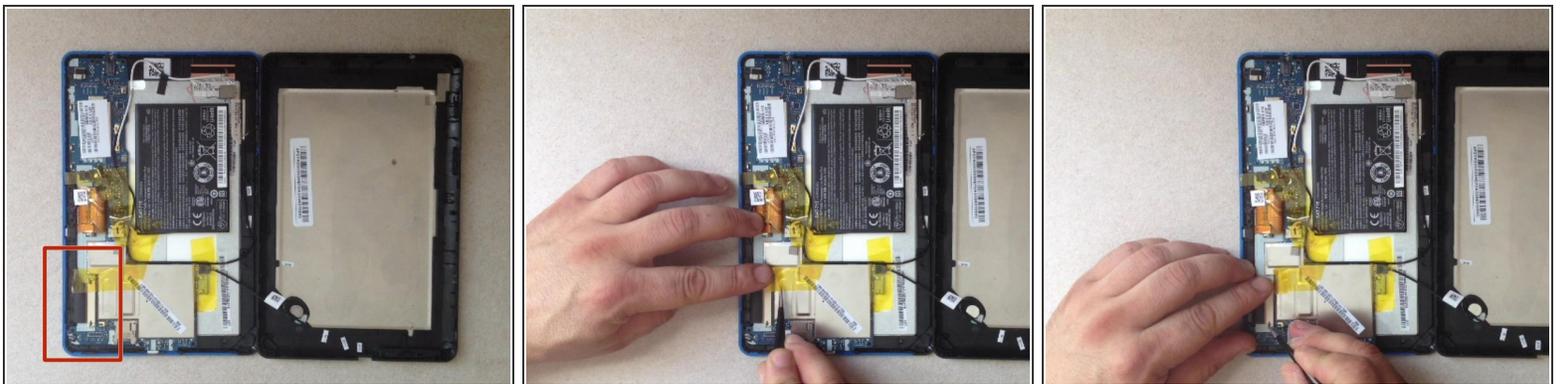

- Open the touchscreen flex cable connector and reconnect the cable.

● .

**i** Did you do it successfully?

● .

**👉** [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.