



# Sony Vaio PCG-981L Keyboard, Speakers, and Speaker Panel Replacement

Is the keyboard or speaker on your Sony Vaio...

Written By: Pat Link



# INTRODUCTION

Is the keyboard or speaker on your Sony Vaio PCG-981L laptop not working correctly? Are the keys sticking or not computing when you press them? Are your speakers crackling or sounding fuzzy?

In this guide, you will learn how to replace both the keyboard and speakers on your Sony Vaio PCG-981L laptop to give you a better, quality experience. This will save you from spending a fortune by having someone else fix it for you or having to buy a new laptop altogether.

## TOOLS:

[Large Needle Nose Pliers](#) (1)

[Tweezers](#) (1)

[Phillips #0 Screwdriver](#) (1)

## Step 1 — Keyboard, Speakers, and Speaker Panel



- Turn the laptop off and unplug it.
- Remove the screw on the left-hand side of the computer towards the back using a small Phillips #0 screwdriver.

## Step 2



- Open the laptop with the screen facing you.
  - Carefully lift the left side of the panel and unhook the right side. Do not pull beyond the length of the ribbon cable that secures it to the motherboard.
- ⚠ If the ribbon cable is not properly separated from the motherboard irreversible damage will occur.**
- To separate the ribbon cable from the motherboard, grip it near the base and gently pull.
- ⓘ If you do not want to replace the keyboard skip to step 5.**

## Step 3




- To remove the keyboard, lift it a few inches from the computer, taking care not to pull beyond the length of the ribbon cable that secures it to the motherboard.

**⚠ Forcefully removing the ribbon cable can cause irreversible damage.**

- Separate the ribbon cable from the motherboard by placing your fingers at the base and pulling gently.

## Step 4

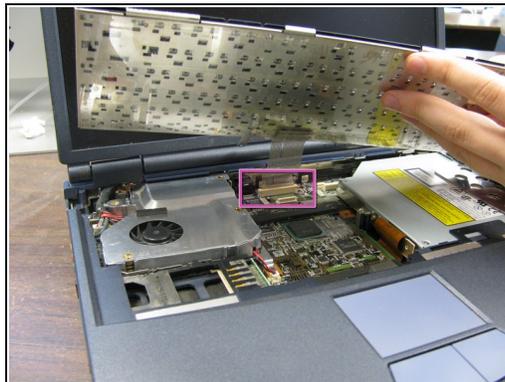


- Attach the new keyboard's ribbon cable to the motherboard by carefully inserting it into the white plastic outlet located at the top center of the motherboard.
- Set the keyboard in place.

## Step 5




- There are two speakers on the underside of the speaker panel, one on each end. Unplug both sets of the black and red wires from the circuit board by gently pulling at the base.
- Remove the screws (two per speaker) with the Phillips #0 screwdriver. Then remove the metal brackets holding the speakers in place.
- Remove the adhesive tape securing the speaker wires to the panel.

## Step 6

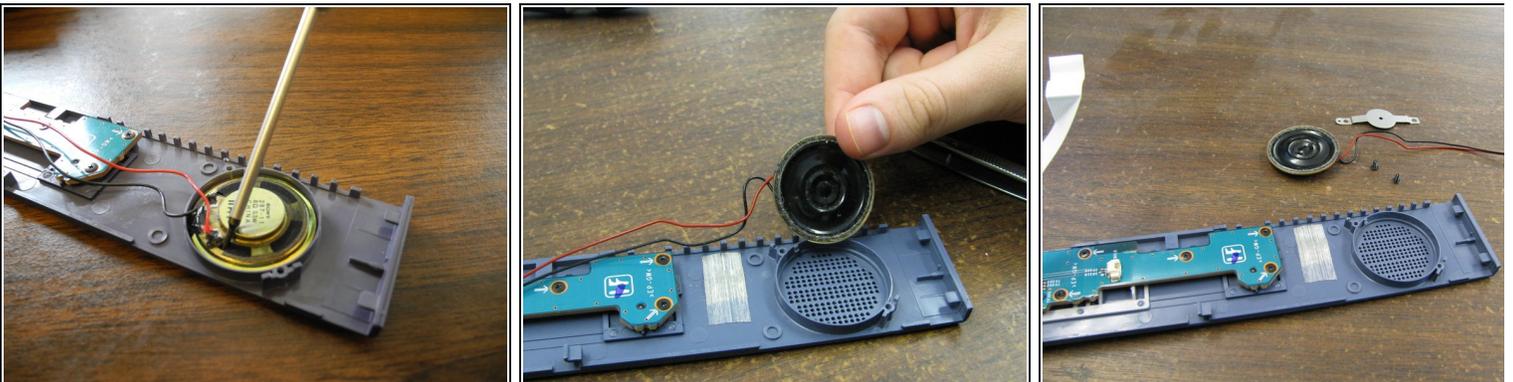

- The speakers are cemented to the panel. To remove the speakers from the panel, place either the screw driver or tweezers in the hole on the outer edge of the speaker and pry it off.
- ⓘ When replacing the old speakers, make sure to align the notch inside the molds with indents on the outer rim of the new speakers.

## Step 7

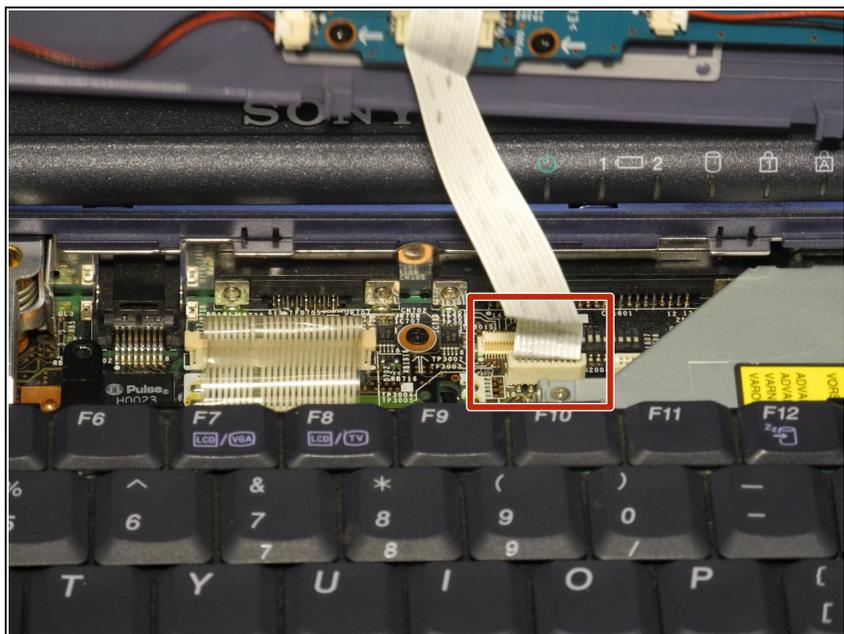

- Put the speaker panel's ribbon cable back in place.