




Toshiba Satellite A215-S7425 Optical Drive Replacement


Written By: Marianne

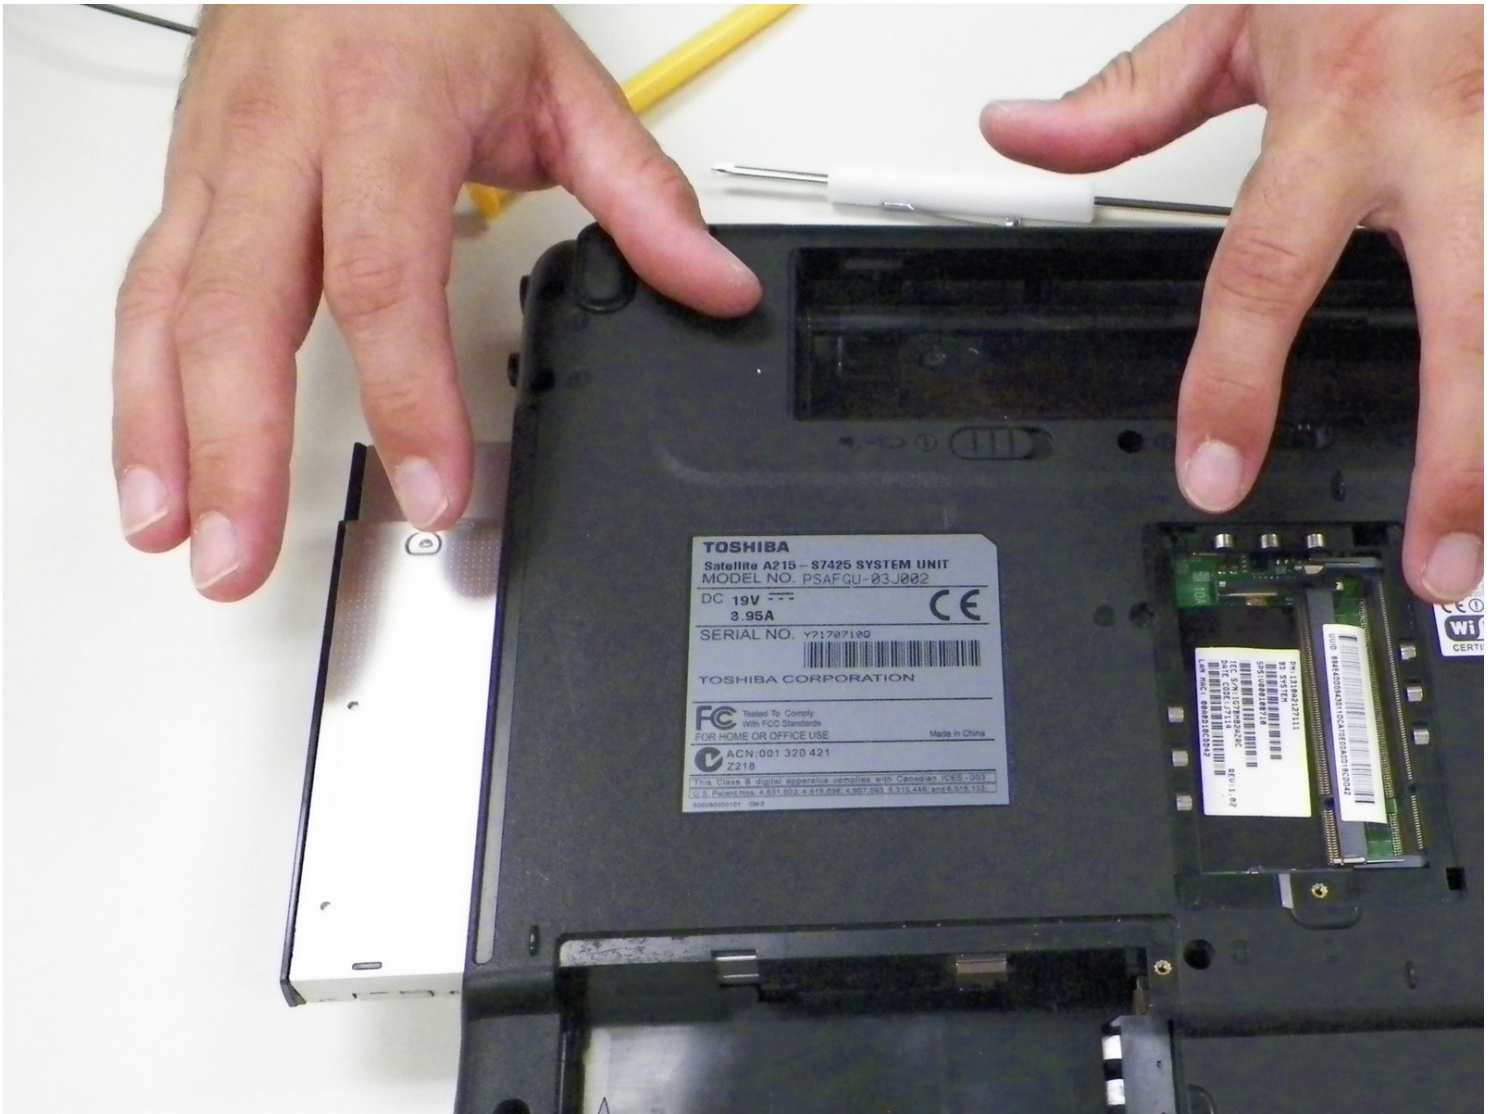

TOOLS:


Phillips #1 Screwdriver (1)

Step 1 — Battery

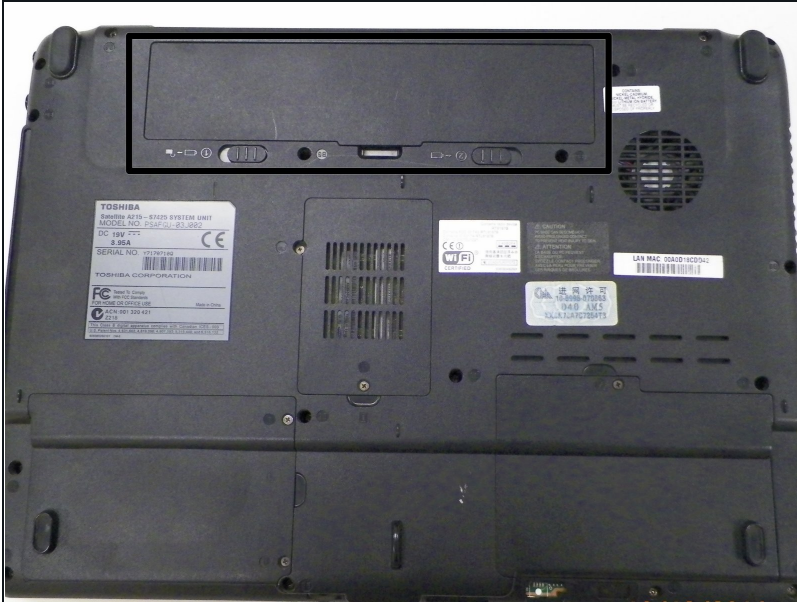

- Turn off the computer.
- Disconnect the charging cable from computer.
- ⚠ Failure to unplug the cable could result in electric shock.
- Flip the computer upside down.

Step 2

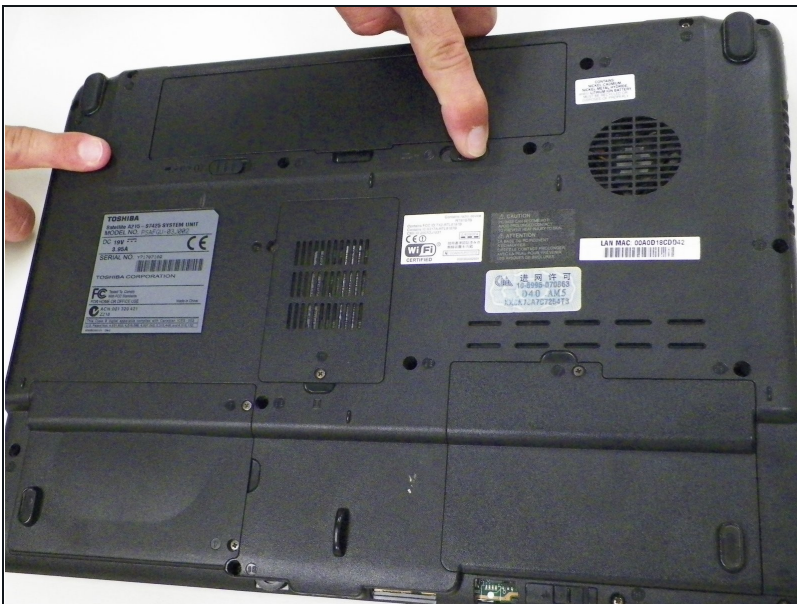


- Slide latches labeled #1 and #2, located outside the battery cover, away from each other.
- ⓘ Latch #1 will click over and stay while latch #2 will have to be held for battery to release.

Step 3




- Gently lift and pull the battery out of the device.

Step 4 — RAM

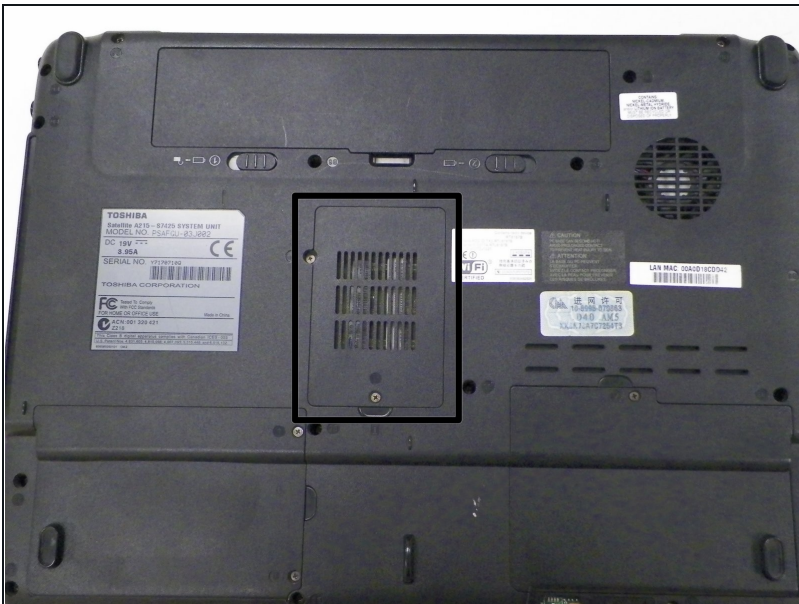


- Locate the RAM vented plastic cover in the center of the device.

Step 5

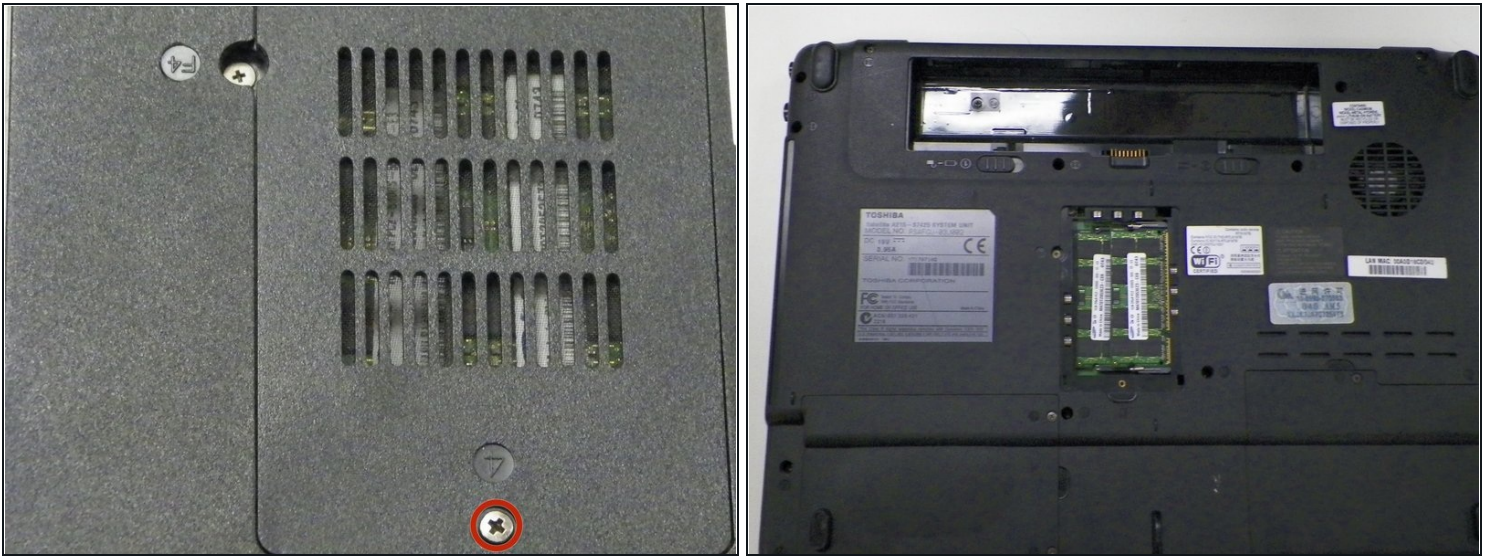

- Loosen 1 Phillips 4.2 mm size captive screw and lift cover off device to expose 2 RAM sticks.


Step 6

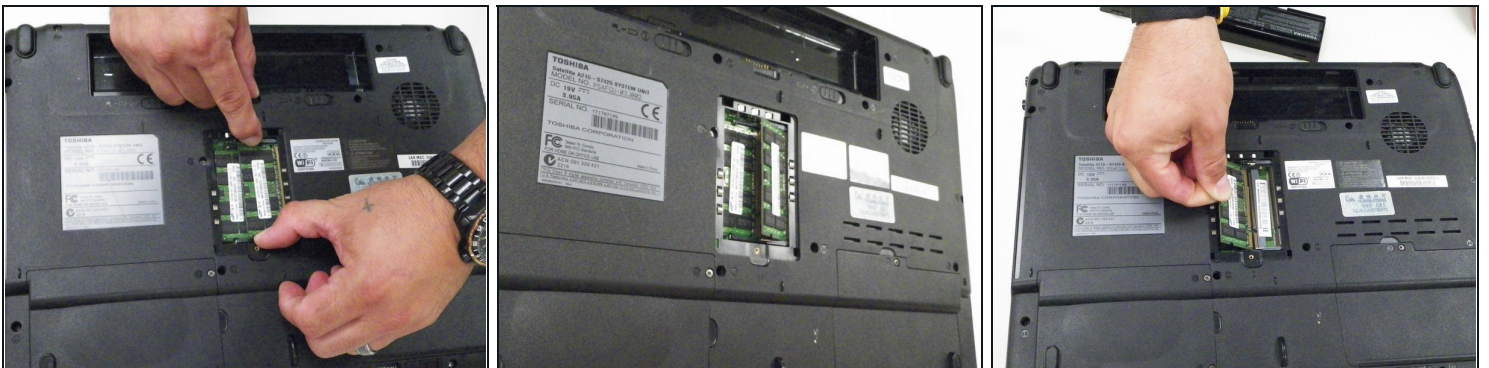

- Locate 2 metal pinchers on either side of the 1st RAM stick.
- Use a finger from each hand to push the 2 pinchers simultaneously away from the stick of RAM and towards the exterior of the case.
- The RAM stick will automatically rise up. Gently pull out the RAM stick with one hand.


⚠ The use of a [anti-static wrist strap](#) while working with the RAM is advise to prevent electrostatic discharge(ESD) from damaging the RAM.

Step 7

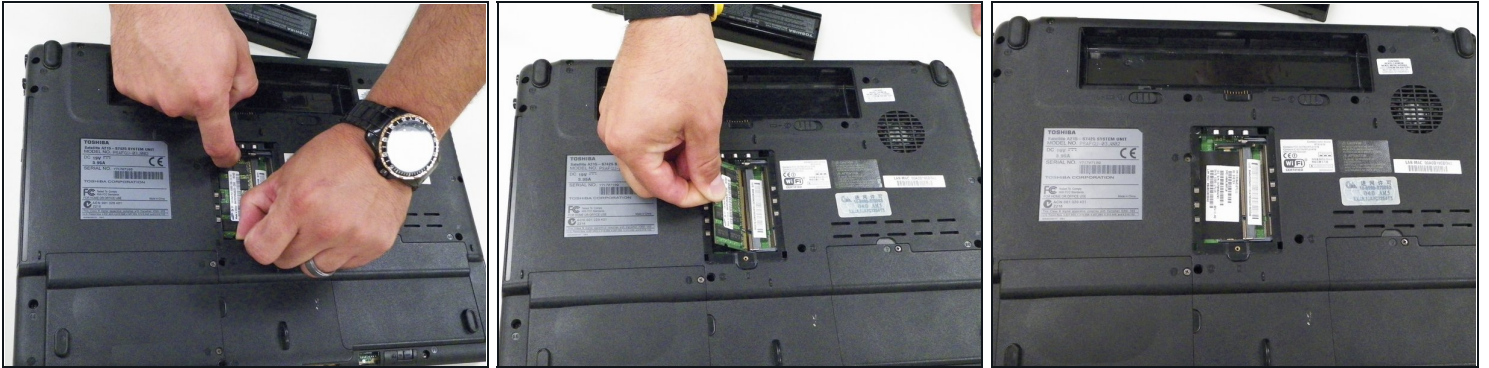

- To remove the 2nd RAM stick, repeat previous steps.
- ⓘ You will be unable to remove 2nd RAM stick if the first one is not removed first.

Step 8 — Optical Drive

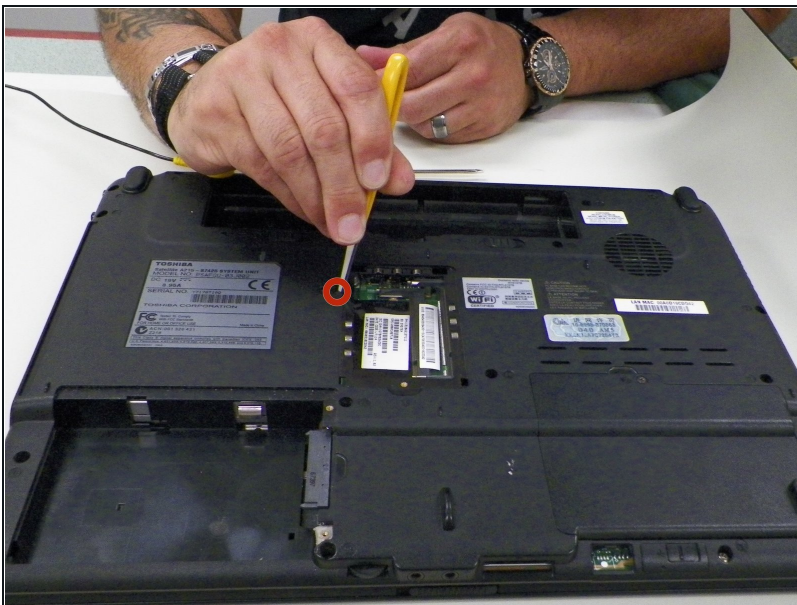

- Locate and remove **1** Phillips 4.2 mm size screw along right side of RAM container.
- ⓘ [Tweezers](#) may be needed to lift out the screw.

Step 9



- Push down metal rod until optical drive pops out from its container on the side of the device.

⚠ To avoid damage to your RAM, make sure RAM is removed and out of the way before beginning this step.

To reassemble your device, follow these instructions in reverse order.