



Waring Pro SB30 Plastic Leg and Rubber Stoppers Replacement

Removal of the plastic leg and rubber stopper on the underside of the burner.

Written By: Sun Fai Lau



INTRODUCTION

Located on the back panel of the burner are four rubber stoppers on each corner. Be sure to have remove to back panel before beginning and be careful to not lose the small nuts and washers holding the screws in place.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Smart Wrench](#) (1)
-

Step 1 — Back Panel




- Remove the screws on the back panel with the #1 Phillips screwdriver bit.
 - The screws in the rubber legs of the burner do not need to be removed.
- ⓘ If the back panel has never been opened before, the screws may be more difficult to unscrew.

Step 2



- Using a wrench, remove the bolt from the center of the back panel.

Step 3

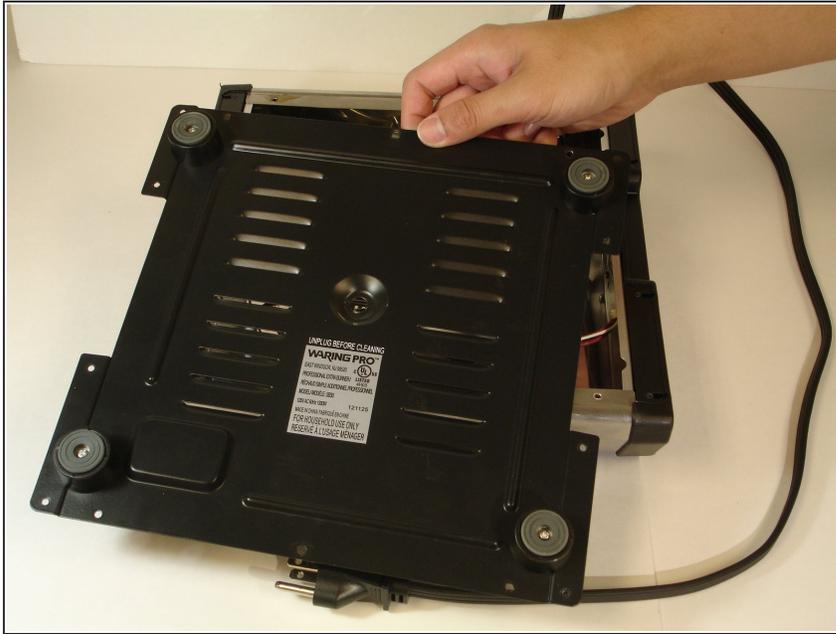

- The back panel can now be easily lifted off.

Step 4 — Plastic Leg and Rubber Stoppers



- While using the wrench to hold the bolt, use the screwdriver to remove the screw.
- The leg is two separate pieces, the plastic leg and rubber stopper.
- ⓘ Careful not to lose the bolts and washers as they are very small.

To reassemble your device, follow these instructions in reverse order.