




Sun King Solo Solar Lantern Battery Replacement

This guide will walk you through replacing the battery.

Written By: Anna

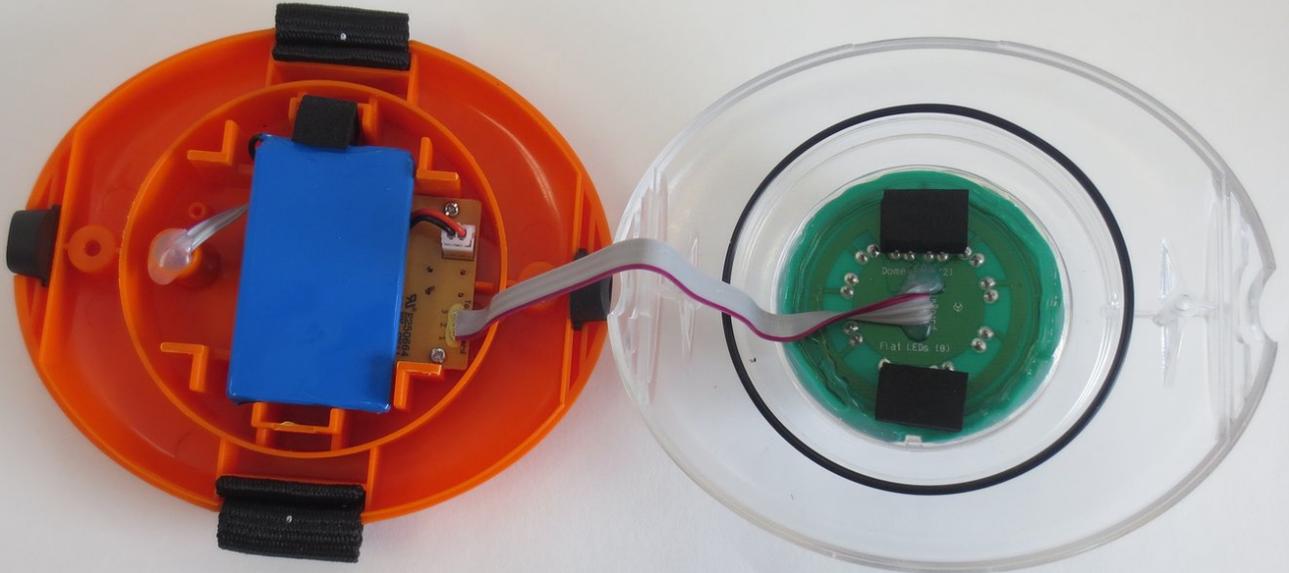

INTRODUCTION

All that is needed to replace the battery is a screwdriver.

TOOLS:


- [Tweezers](#) (1)
-

Step 1 — Locate and Remove the Screws





- Place the lamp *LED side down* on a clean workspace.
- Remove the screws holding the casing together using a Phillips #1 Screwdriver.

Step 2 — Separate the Device

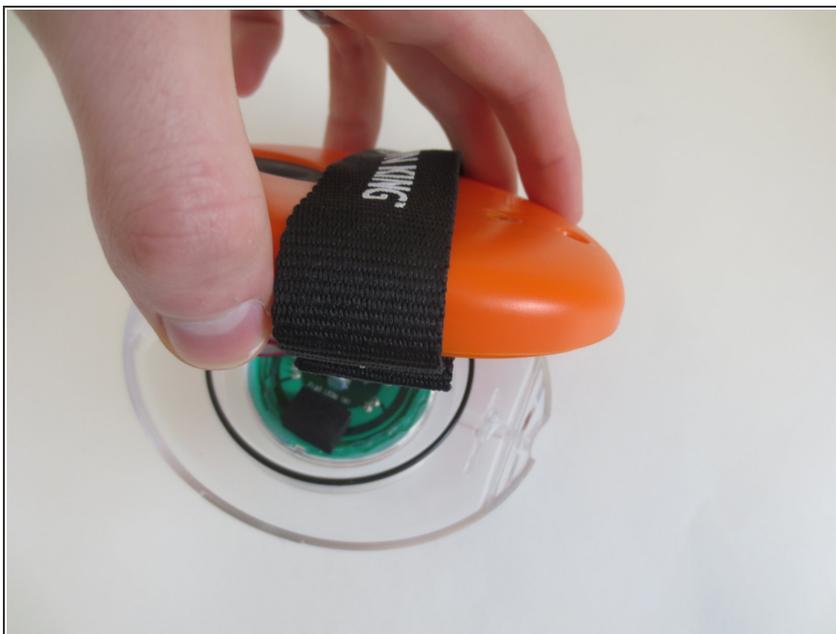


- Gently pull the two halves of the lamp apart.

Step 3 — Isolate the Battery

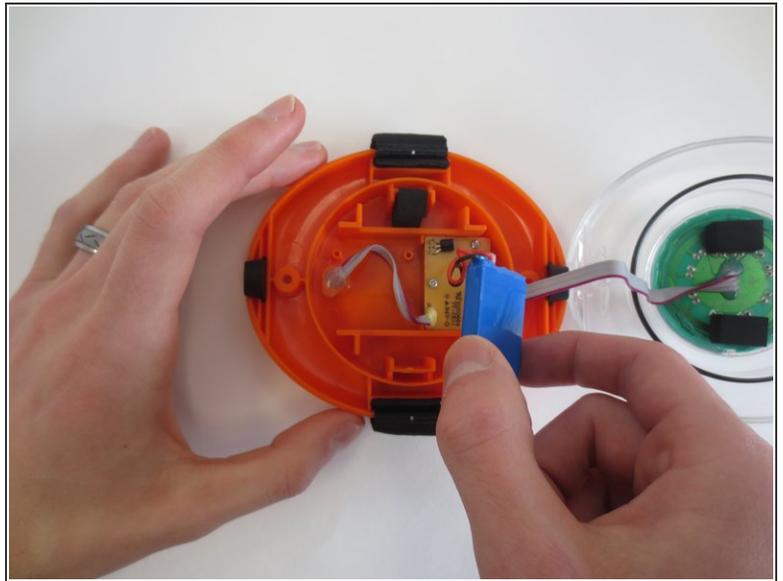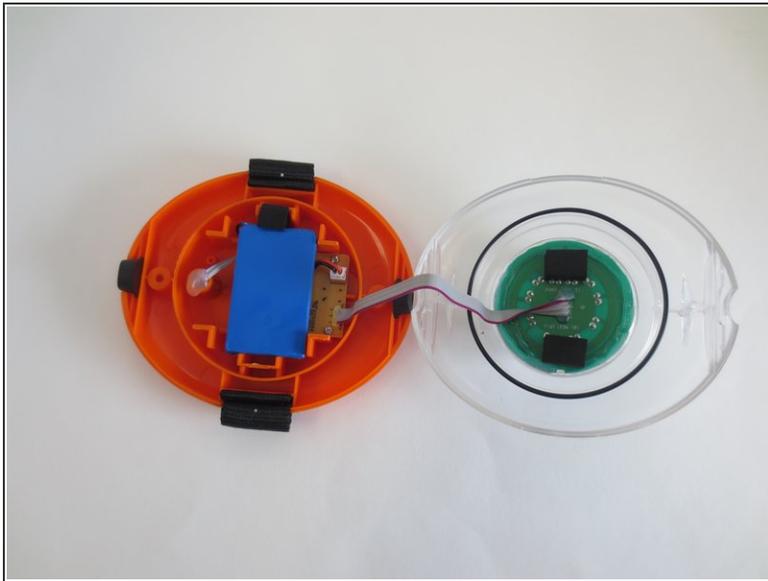


- Locate the battery.
- Gently lift the battery from the device.

Step 4 — Remove the Battery

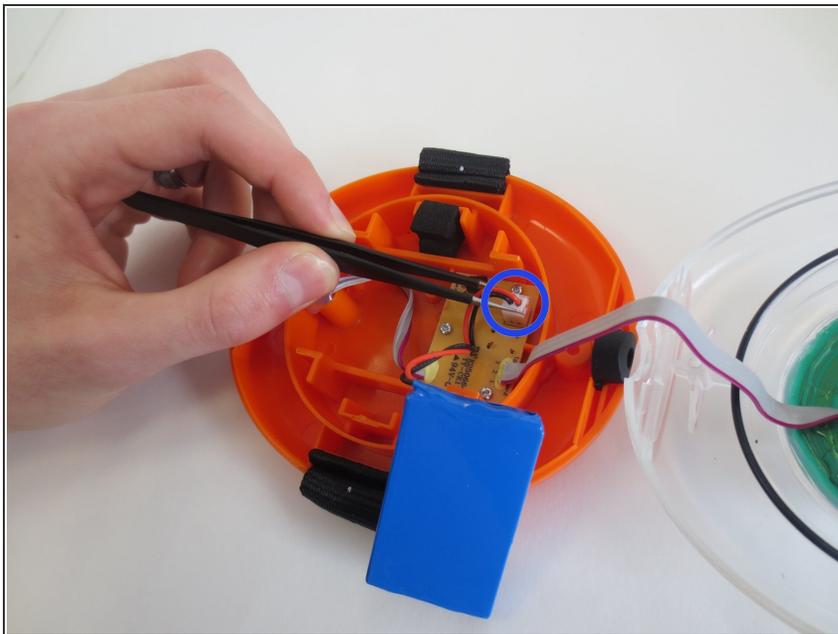


- Locate the clip attaching the battery pack to the circuit board.
 - Use tweezers to remove the portion of the clip attached to the battery.
- ⚠ Do not pull directly on the wires!
They can easily be damaged.

Step 5 — Replace the Battery

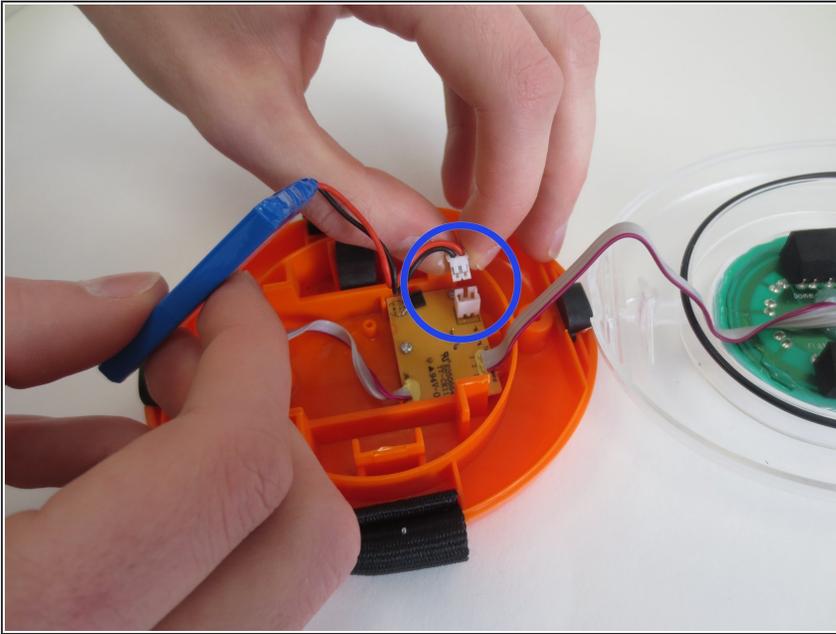

- Align the black wire of the new battery towards the center of the device.
- Press down firmly on the clip to insure that it is properly connected.
- ★ Properly dispose of the Lithium-Ion Battery. [Lithium Battery Disposal](#)

Step 6 — Reseat the Battery

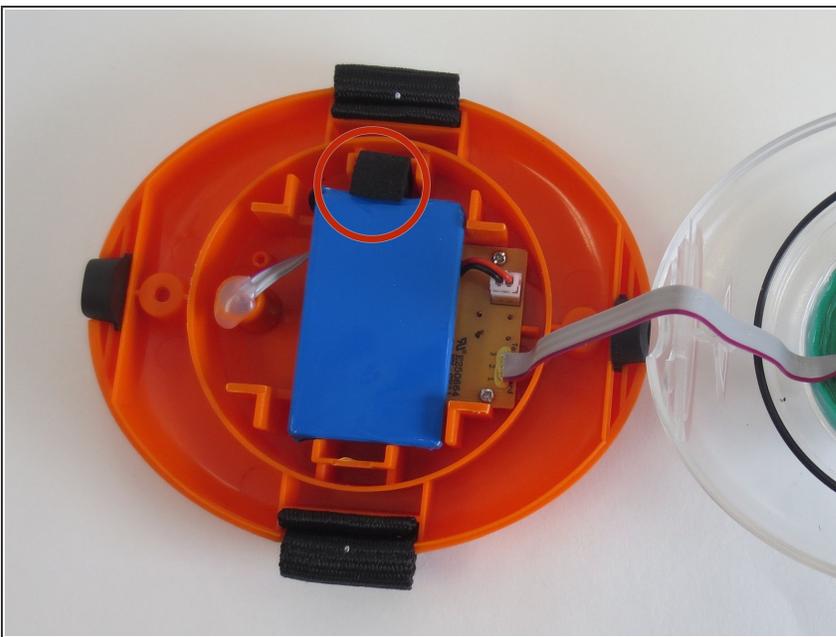

- Seat the battery in the orange component so that the short end of the battery pack is touching the foam bumper.

To reassemble your device, follow these instructions in reverse order.