



# LG Optimus L7 P705 Home Button Replacement

Replacing the LG Optimus L7 Home Button.

Written By: Bruna



---

## INTRODUCTION

The following guide explains how to replace the home button.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Home Button




- Insert a plastic opening tool between the seams of the device and pry the back cover away from the phone.
- Remove the battery and SIM card.

## Step 2




- Remove the twelve screws using the Phillips 000 screwdriver.

### Step 3

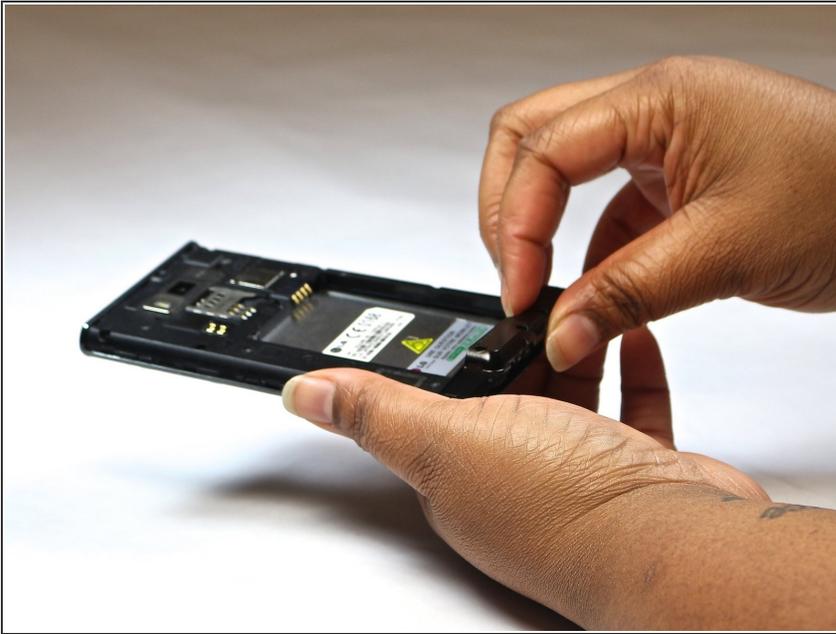

- Remove bottom plate where the charger port is located.

### Step 4

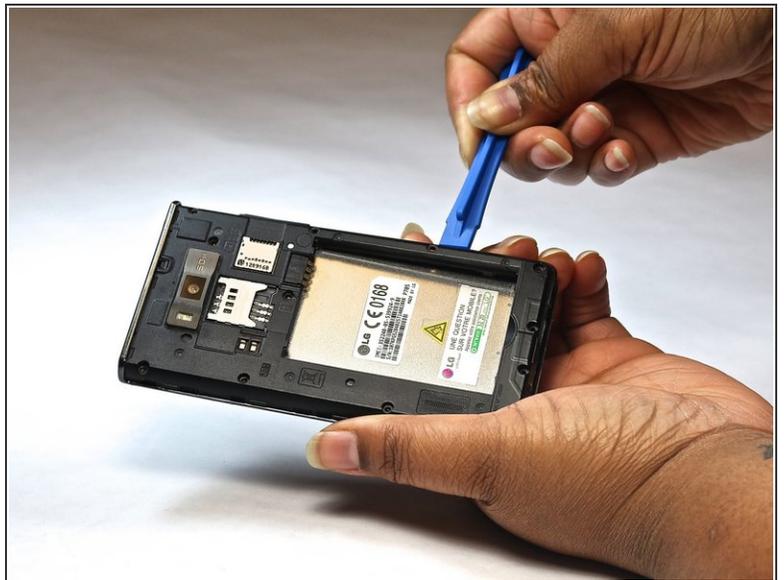

- Insert a plastic opening tool between the seams of the device and apply some pressure to lift off the cover.

## Step 5



- Flip over to the face of the device.
- Lift off the glass screen (display).

## Step 6



- Remove the home screen button.  
Replace as needed.

To reassemble your device, follow these instructions in reverse order.