




# Acer Aspire V5-572, V5-572G Battery Replacement

Acer Aspire V5-572 Battery Replacement

Written By: ZFix

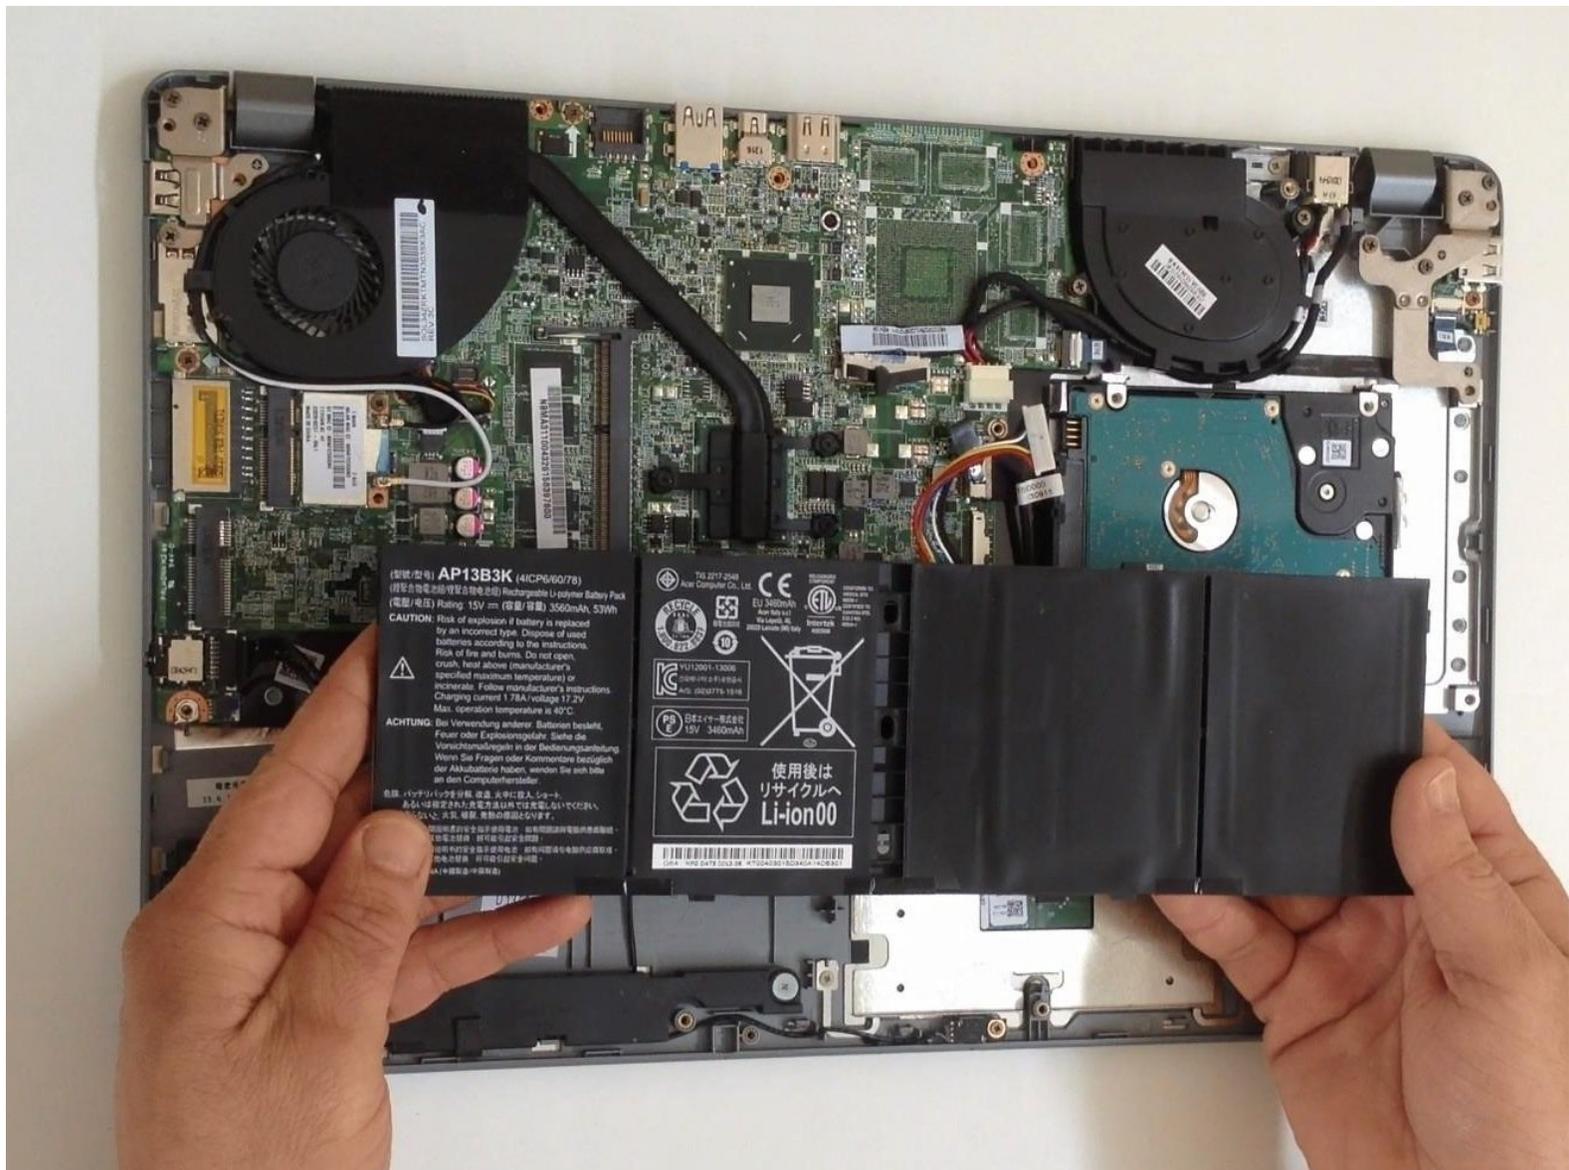

## INTRODUCTION

How to disassemble Acer Aspire - V5-572, V5-572G and replace the old Battery.

[video: <http://youtu.be/Sg8tUXZL864>]



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)
- [iFixit Opening Picks \(Set of 6\)](#) (1)



### PARTS:

- [Acer AP13B3K and AP13B8K Replacement Laptop Battery](#) (1)

## Step 1 — Bottom Cover

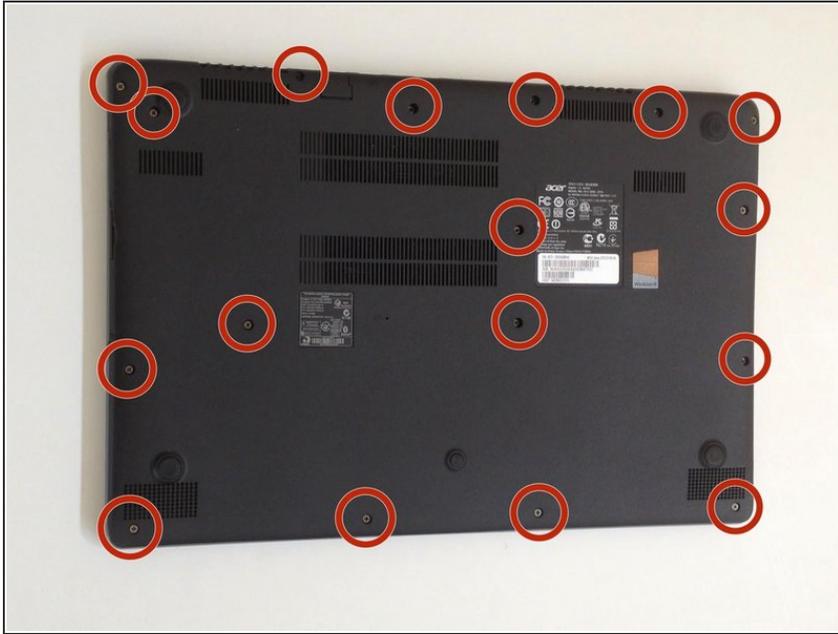

- ⓘ Switch-off the Laptop.
- Remove the seventeen Philips #0 screws.

## Step 2



- If there is a plastic storage tray in the laptop, remove it.

### Step 3



- Starting from the SD Memory Card hole, start prying between the top and bottom cases.

**⚠ Use plastic tools to avoid damaging the cover.**

- Remove the bottom case.


### Step 4



**⚠ Disconnect the battery immediately for a safer repair.**


- Pull the battery connector away from the hard drive to disconnect it.

## Step 5 — Battery

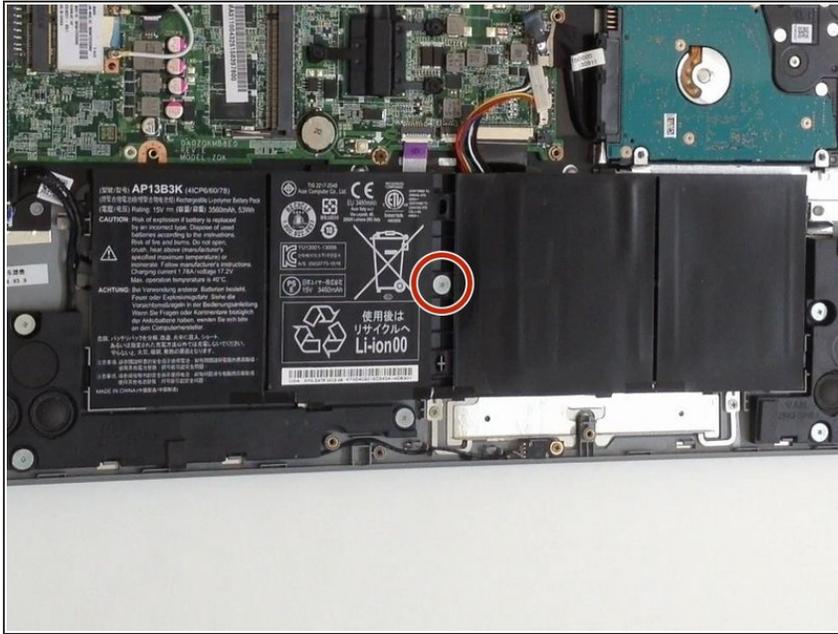

- Remove the single Phillips 0 screw securing the battery.

## Step 6

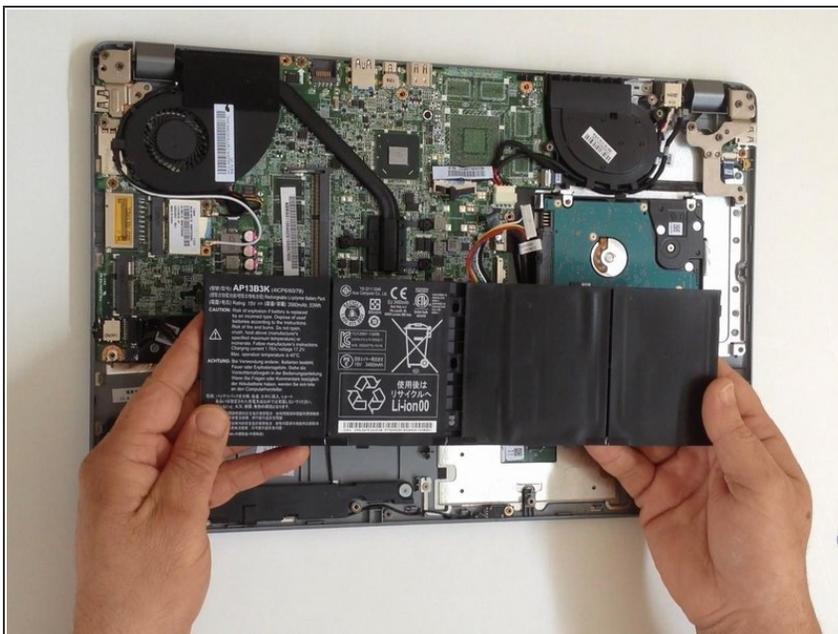

- Remove the battery

To reassemble your device, follow these instructions in reverse order.