

Canon PowerShot A590 IS Batteries Replacement

Written By: Zach





• AA Batteries (2)

Step 1 — Batteries






- (i) The battery hatch is on the bottom of the camera.
- A CAUTION: Locate the switch to open the hatch and push gently toward the front of the camera.

 Too much force can break the hatch.
- While the switch is pushed forward, pull the cover away from the camera.

Step 2

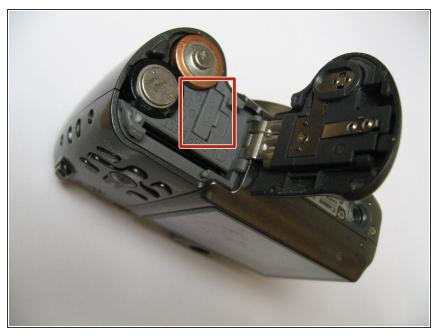

- This camera requires AA batteries.
- To remove batteries, simply allow them to fall out of the camera.
- Use a fingernail to lift the clock battery out of the camera.

Step 3



When replacing the AA batteries, verify they are oriented correctly by following the (+) and (-) signs on the camera.

To reassemble your device, follow these instructions in reverse order.