




Sony Cyber-shot DSC-W55 Lens Replacement

This guide shows step by step instructions to...

Written By: kkfong91

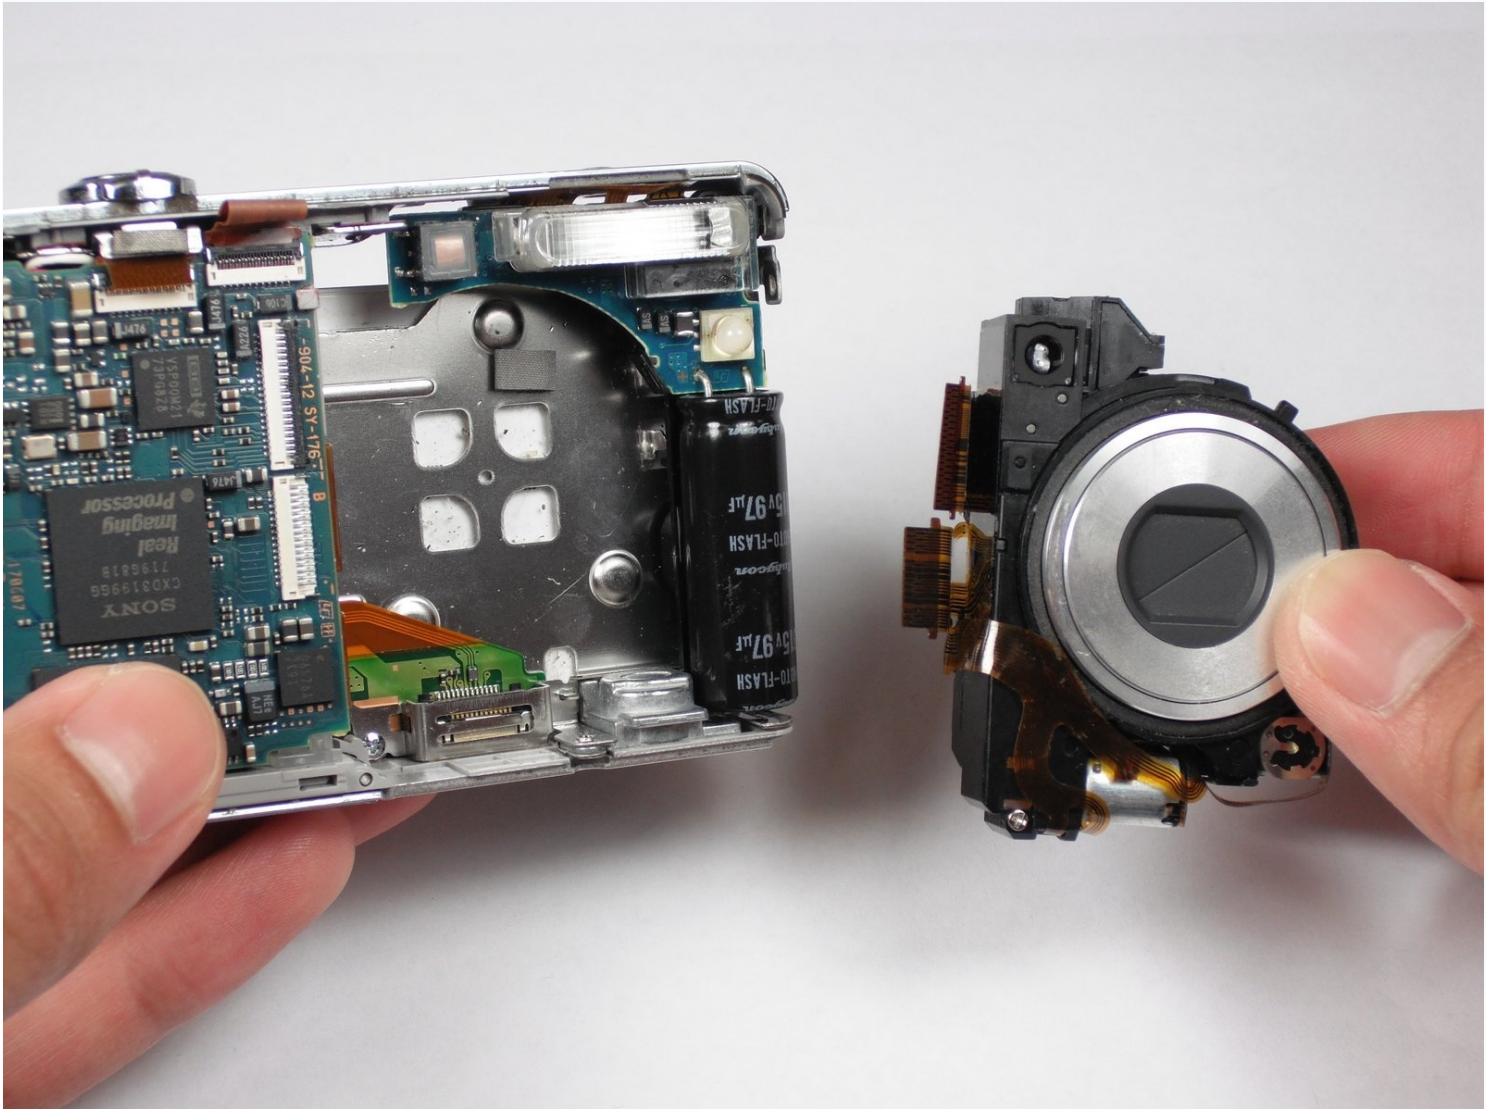

INTRODUCTION

This guide shows step by step instructions to remove the lens part of the camera.


TOOLS:

Phillips #00 Screwdriver (1)

iFixit Opening Tool (1)



Tweezers (1)

Step 1 — Battery

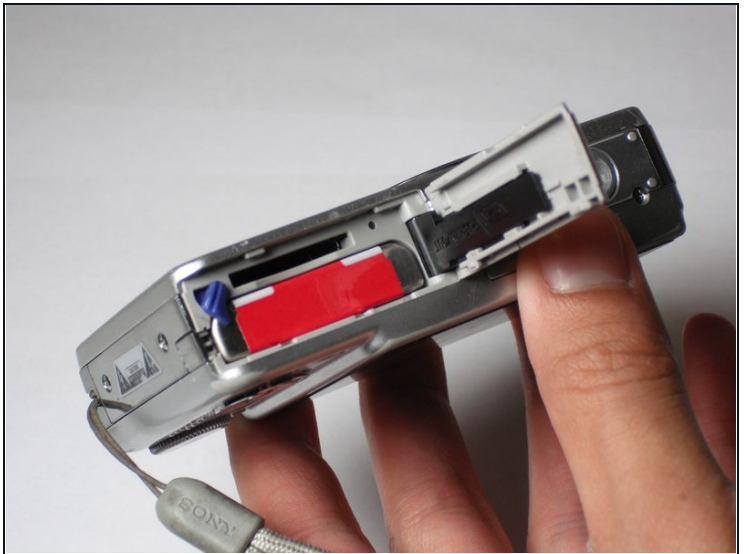



- Slide the battery cover in the direction the arrow points.
- Pull the battery cover towards you.

Step 2

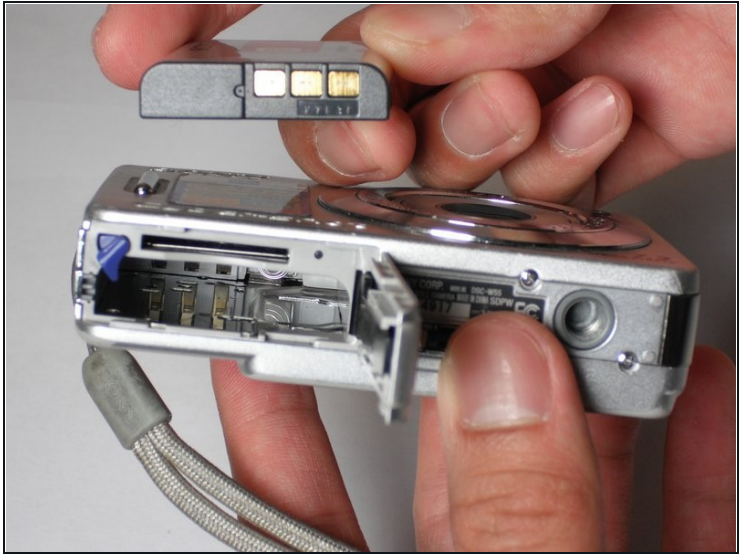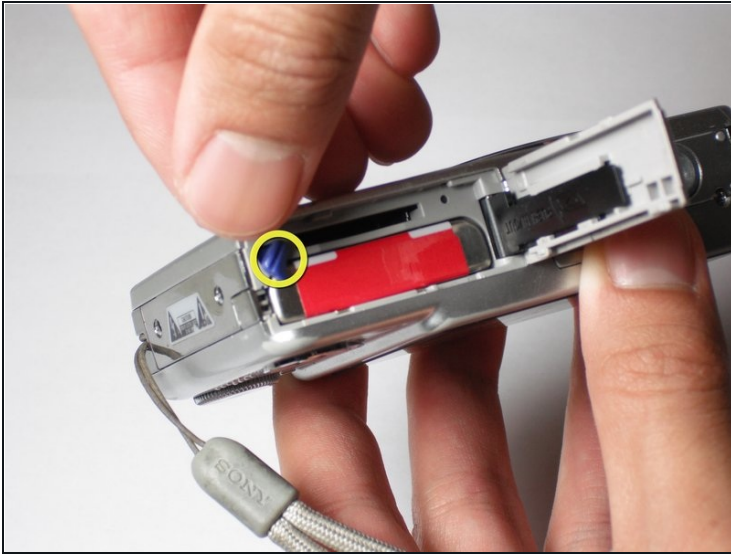

- Flick the blue switch for the battery to pop out.
- Remove the battery from the camera.



Step 3 — Back Case

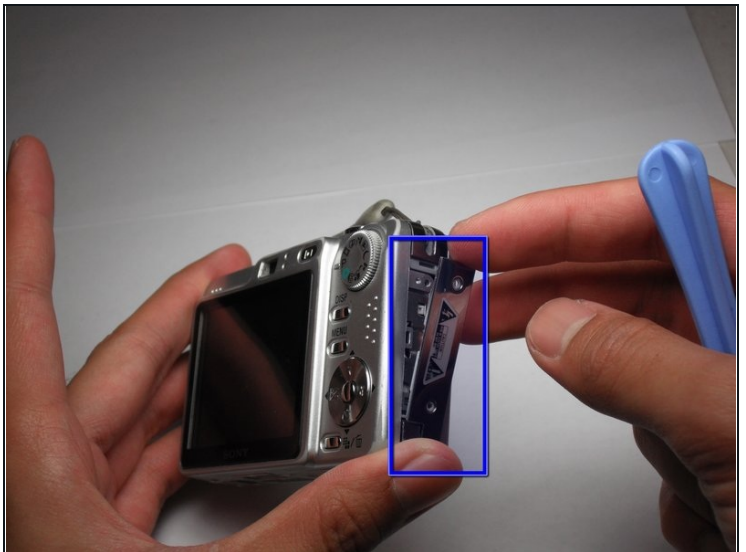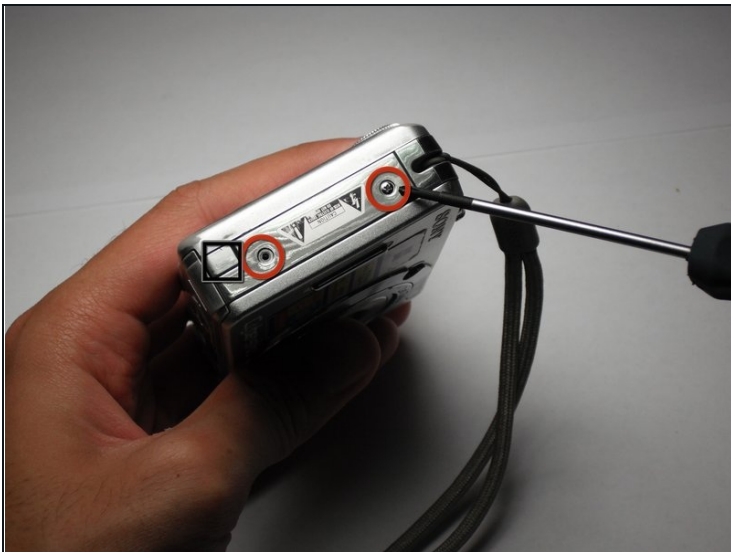

- Using the Phillips #00 Screwdriver, remove the two screws from the caution panel.
- Remove that panel.

⚠ Careful for falling pieces.

Step 4

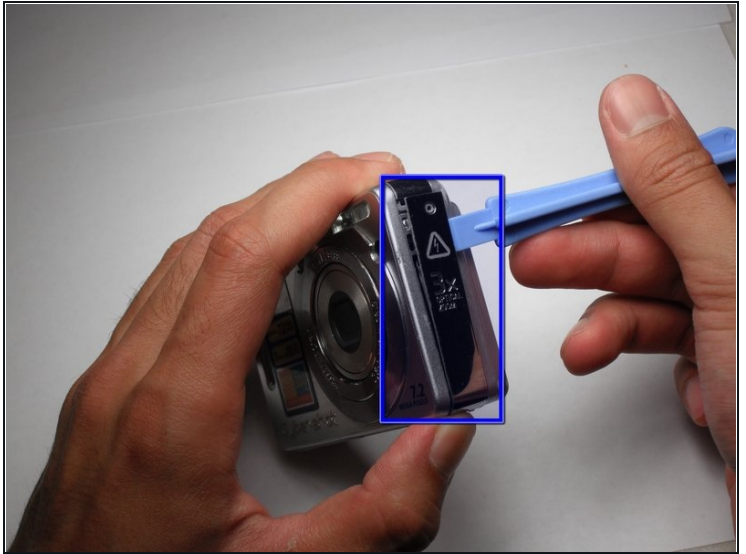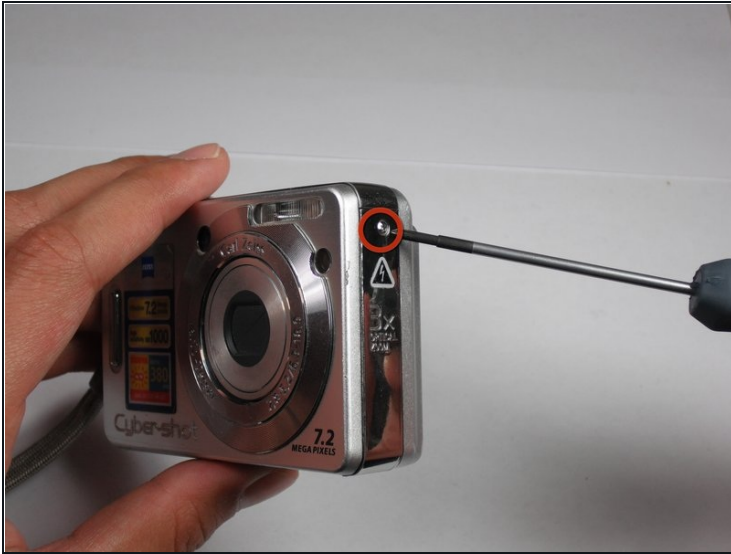


- Remove the screw with a Phillips #00 screwdriver from the left side of the camera (with '3x optical zoom' engraved on the side panel).
- Remove that panel.

Step 5



- Remove the screw using the Phillips #00 screwdriver from the bottom of the camera, closest to the back cover.

Step 6

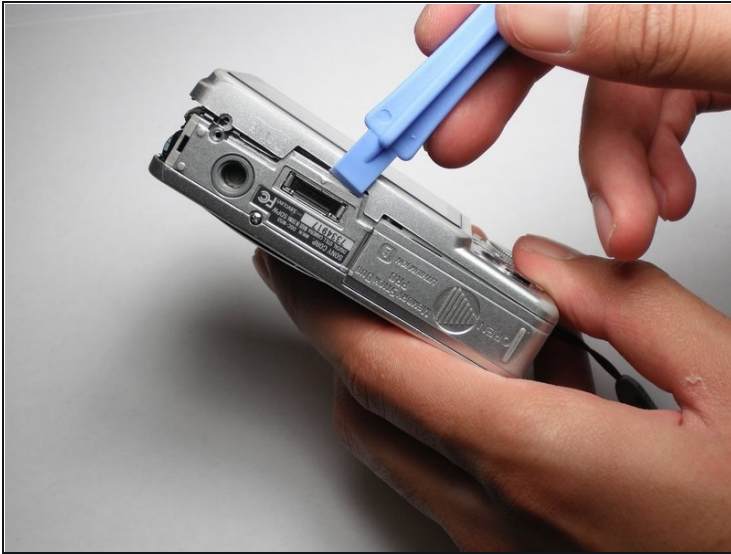

- Gently remove the back cover.


⚠ It may be a bit stiff, so use some force to remove it. Proceed with caution.

Step 7 — Front Case



- Remove the screw using a Phillips #00 screwdriver on the right side (where the caution panel used to be).


Step 8

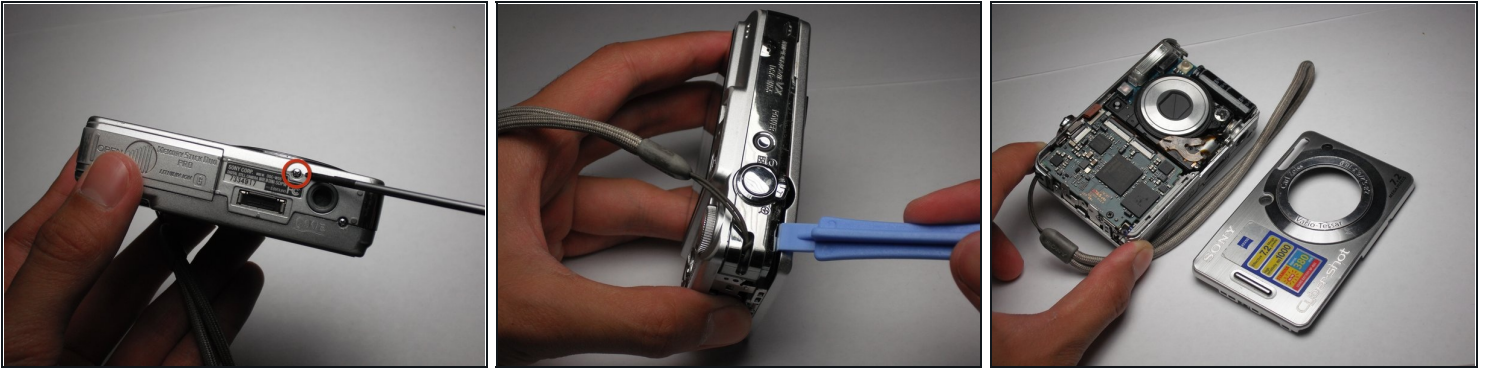

- Remove the small screw using a Phillips #00 screwdriver on the bottom of the camera attached to the front cover.
- Gently remove the front cover.


⚠ Put a little force to pop off the case. Proceed with caution.

Step 9 — Lens

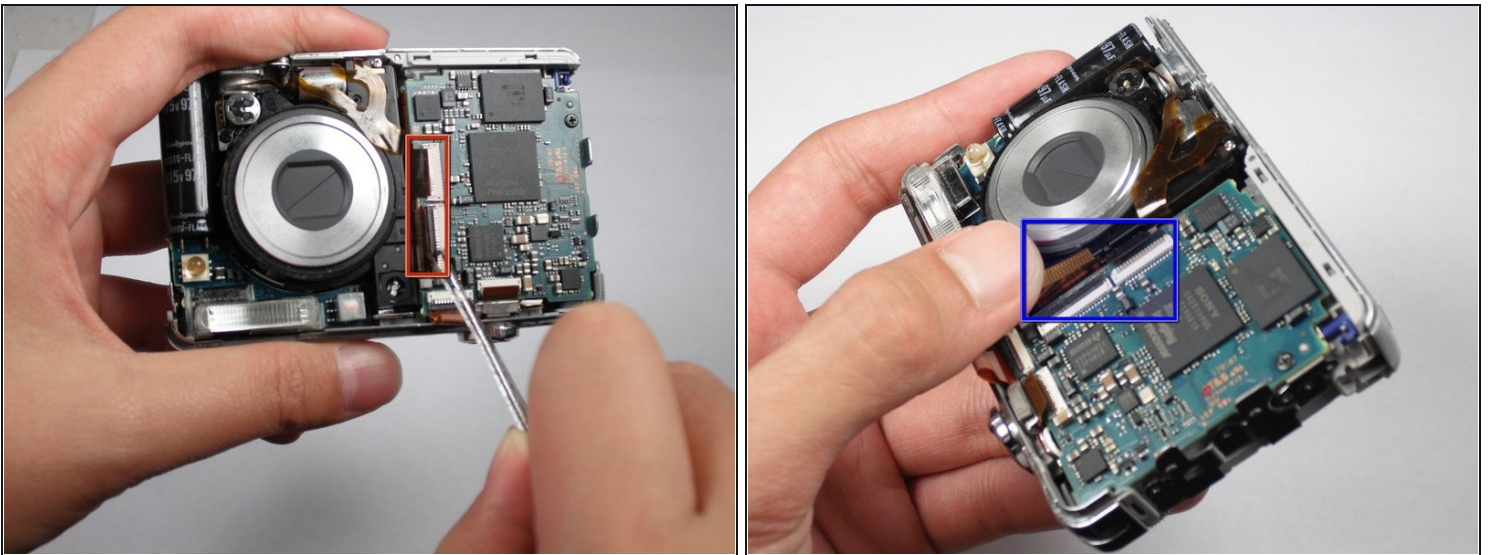

- Flip the black secure locks off. [Tweezers](#) may be necessary.
- Detach the two orange cables.

Step 10

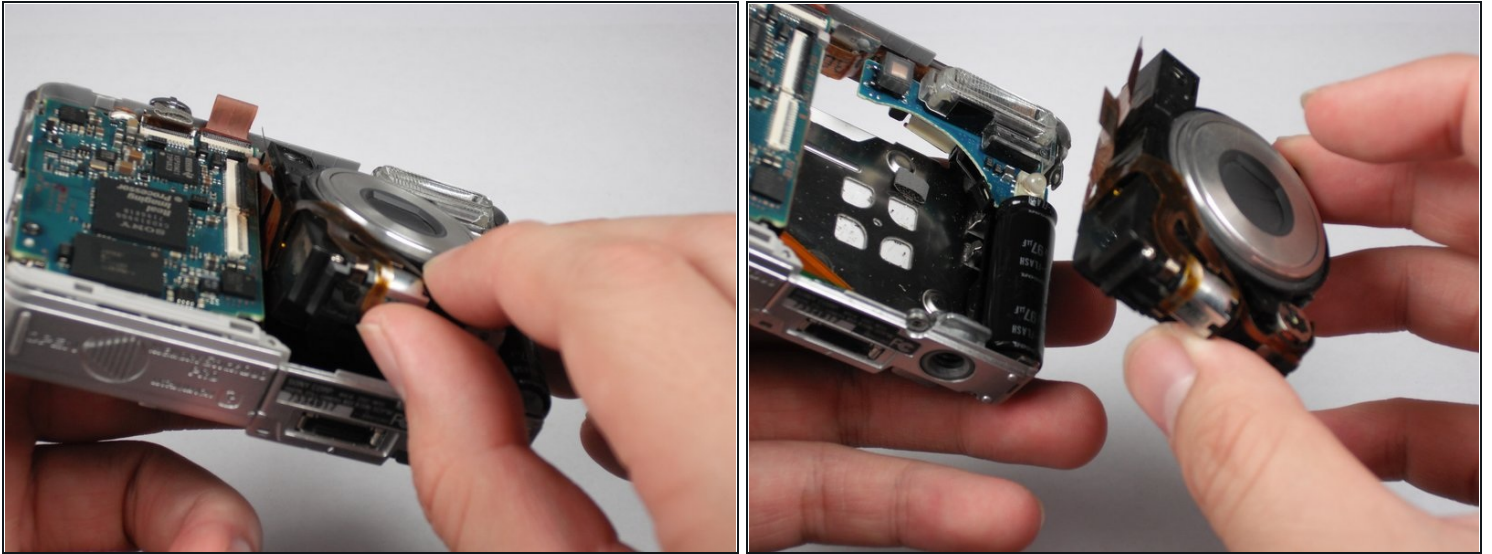

- Gently pull the lens container out of the camera.

To reassemble your device, follow these instructions in reverse order.