




Replacing the Nokia 2115i Speaker

Repairing and replacing the speaker.

Written By: Shane

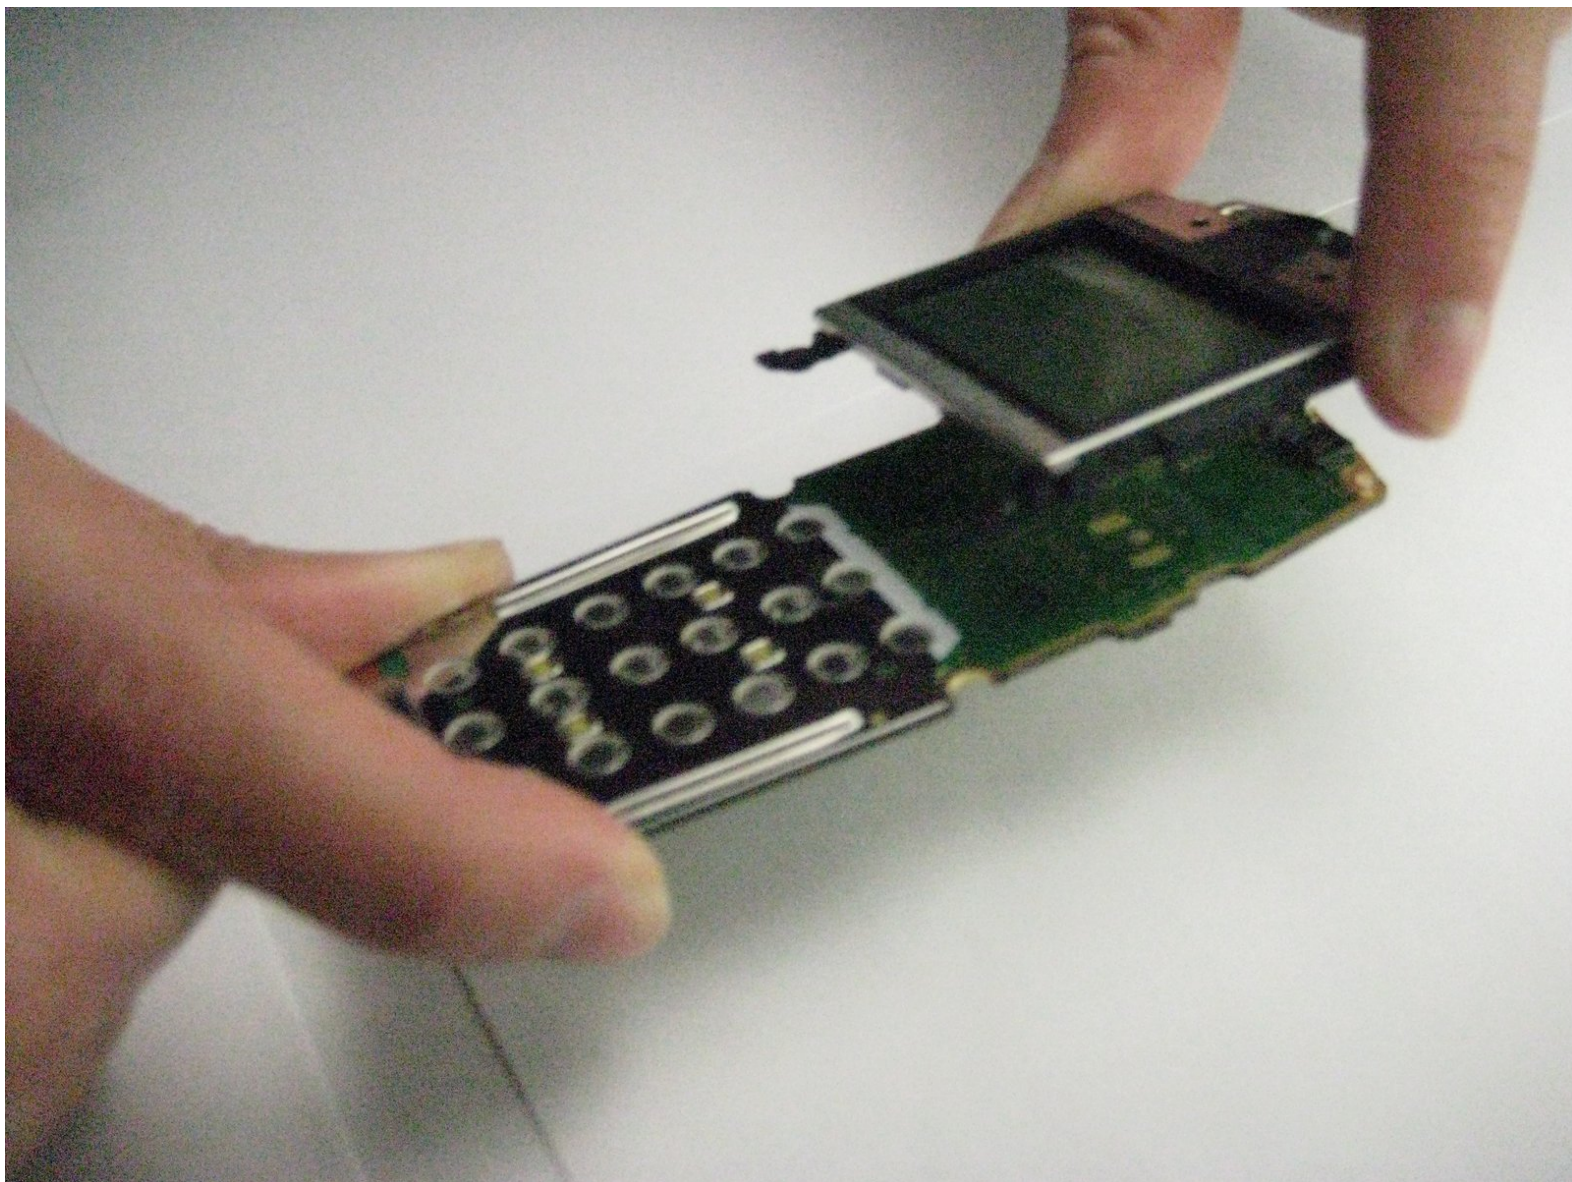

INTRODUCTION

The speaker and the screen are physically attached, so they must be replaced together.



TOOLS:

- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)




PARTS:

- [Replacement Screen Speaker assembly](#) (1)

Step 1 — Nokia 2115i Battery



 To prevent shock, press down on the power button located on the top of the phone until the phone shuts off.


- Press down on the small gray button located on the back of the phone.
- Slide the back plate down and off.

Step 2



- To remove the battery, begin by holding the phone sideways.
- Then, insert your thumb in the groove below the battery and push the battery up and out.

Step 3 — Faceplate

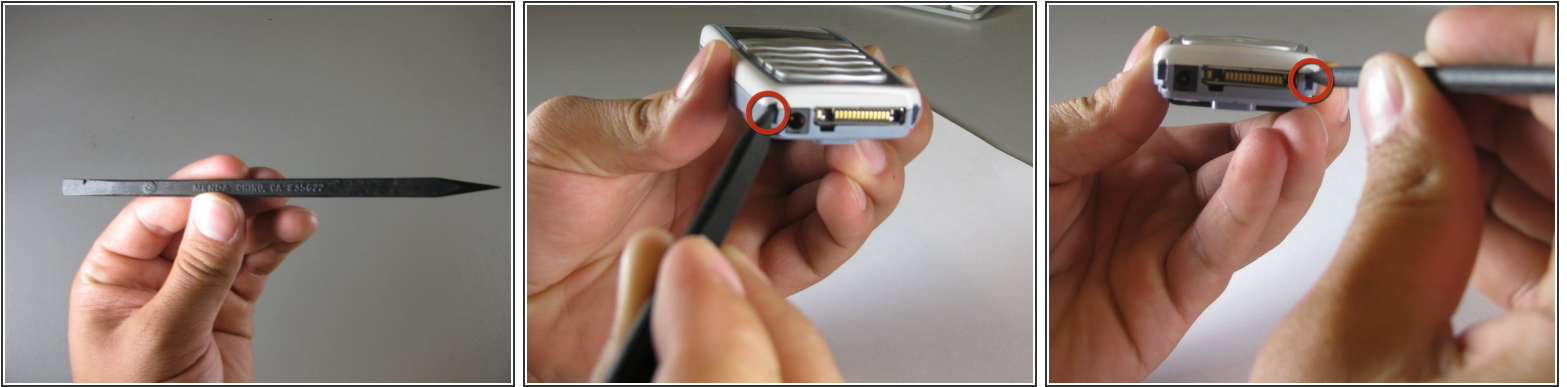

- Locate the spudger. A photo of the correct spudger is provided to the left.
- Turn the front of the phone to face you. Find the two small square holes on the bottom left and right sides of the faceplate.
- Insert the spudger into each square hole and push up to detach the face plate.

Step 4 — Removing the Keypad




- Note: The keypad will be loose and may fall off during this step.
- Pull the face plate up and off of the phone.
- To remove the keypad, simply lift it off the phone.

Step 5 — Removing the Motherboard





- Locate the 6 screws on the metallic sheet that previously held the keypad. (This sheet, shown in the pictures, is the top side of the motherboard).
- ⓘ Note: 2 of the screws are on the bottom corners, 2 are on the right and left edges of the phone below the screen, and 2 are on the very top corners of the phone, above the screen.
- Warning: The middle two screws are attached to the base of the phone with two black plastic rings. Use tweezers to remove the screws carefully to avoid breaking the plastic rings
- Use a size T6 Torx screwdriver to remove each of these 6 screws.

Step 6

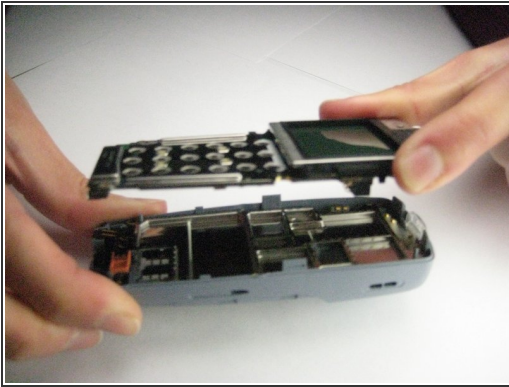



- To remove the motherboard, lift it up and off the phone.
- ⓘ Note: The screen will still be attached to the motherboard.

Step 7 — Nokia 2115i Speaker

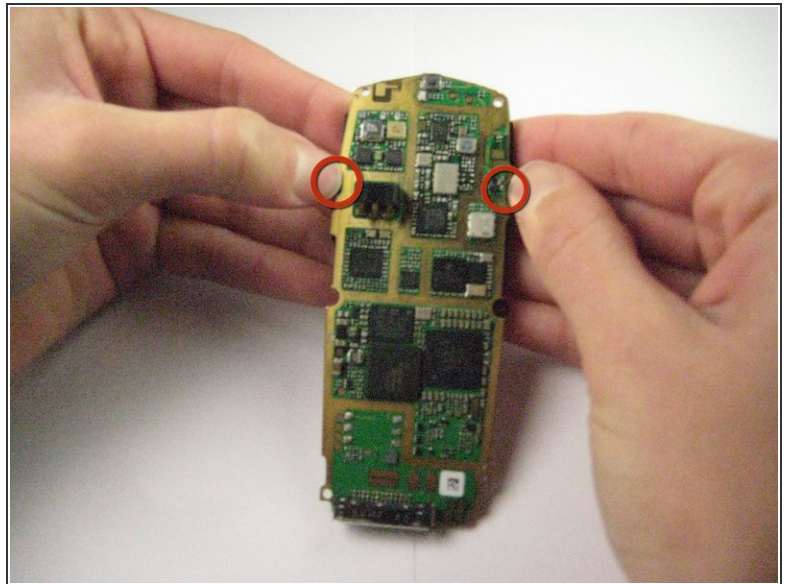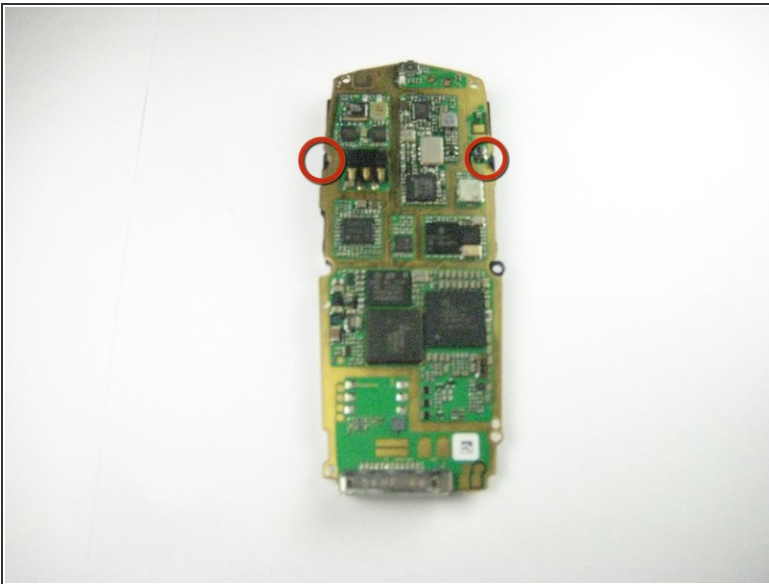

- Turn the screen/motherboard so that the screen side is facing down. The first photo illustrates this step.
- With your fingers, push the black tabs on the upper left and upper right sides of the motherboard outward. The second photo illustrates this step.
- With the tabs pushed outward, you should be able to pull the screen off.

Step 8

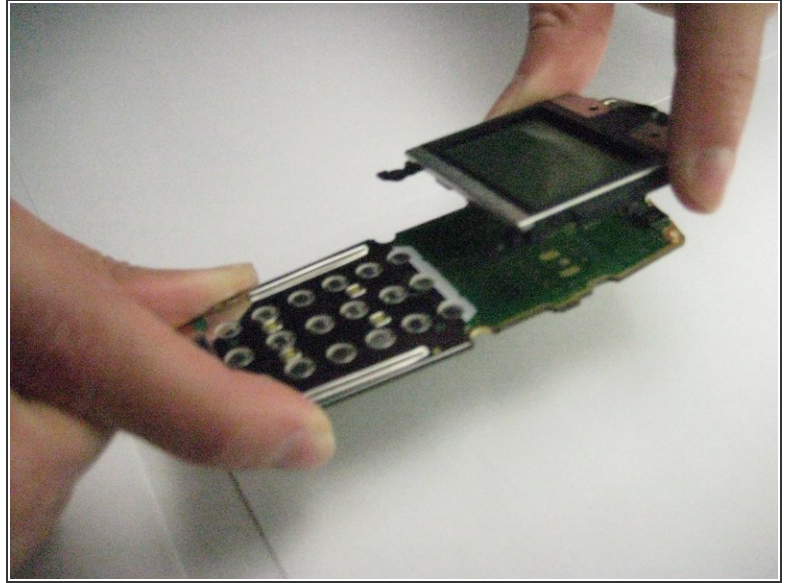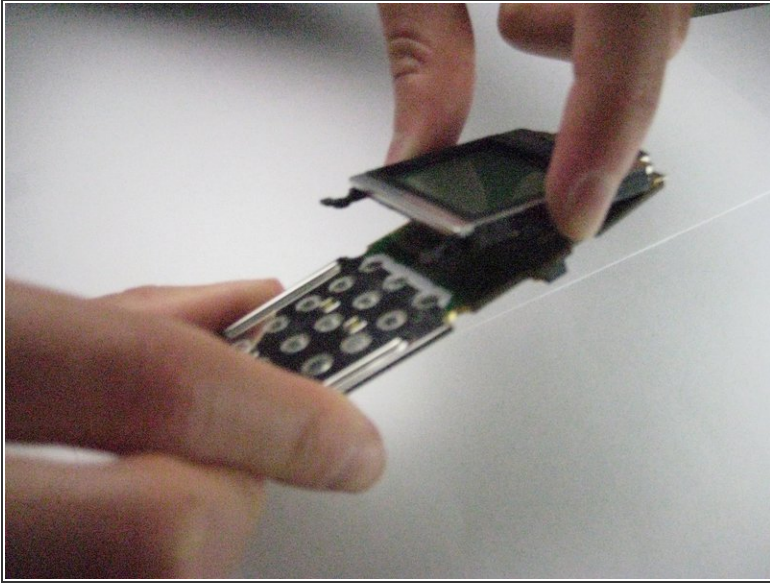

- Turn the motherboard so that the screen faces upward.
- Holding the sides of the screen, pull the screen up and off of the motherboard.
- ⓘ Note: When you remove the screen from the motherboard, resistance is normal.
- Replace old screen containing the speaker with a new screen/speaker.
- Before reassembling, identify the two black plastic tabs on the screen/speaker, as seen in the 2 photos. When replacing the screen/speaker, make sure that these tabs are properly inserted just above the keypad.
- To finish reassembly, follow the rest of the steps in reverse.

To reassemble your device, follow these instructions in reverse order.