



Disassembling Skil 88 Front Housing

Open the front housing to access the major parts of the drill.

Written By: Matt



INTRODUCTION

The front housing includes the motor, the chuck, and the gears. There's a good chance that whatever needs to be replaced will be found in here.

TOOLS:

- [Flathead Screwdriver](#) (1)
-

Step 1 — Disassembling Skil 88 Front Housing



- On the front of the drill, remove the three 2" flathead screws connecting the front housing to the rear housing.

Step 2



- Pull the front housing apart from the rear.

 The motor and gears might fall out when you are pulling it apart.

To reassemble your device, follow these instructions in reverse order.