



Canon PowerShot A540 Clock Battery Replacement

This guide will help you learn how to replace...

Written By: Cooper Hale



INTRODUCTION

This guide will help you learn how to replace the internal CR1220 battery on your Canon PowerShot A540 camera. If your camera will not power on, or shows a battery error message and you've replaced the AA batteries, the internal battery may need to be replaced.

PARTS:

[CR 1220 Battery](#) (1)

Step 1 — Clock Battery



- Turn the camera upside down.
- Press the tab to release the battery cover.

Step 2



- Remove the internal Battery from the slot right above where the AA batteries fit.
- This can be done with your fingers (as pictured) or with [tweezers](#).

Step 3



- Replace the internal battery.

To reassemble your device, follow these instructions in reverse order.

