



Comfort Zone CZ6C Switch Replacement

Replace the switch on your Comfort Zone CZ6C if you have trouble turning it on or switching speeds.

Written By: James Abundis




INTRODUCTION

Learn how to effectively replace the switch of your Comfort Zone CZ6C


TOOLS:

- [Soldering Workstation](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Flush Wire Cutters](#) (1)
 - [Lightweight Wire Strippers](#) (1)
 - [Desoldering Braid](#) (1)
-

Step 1 — Switch

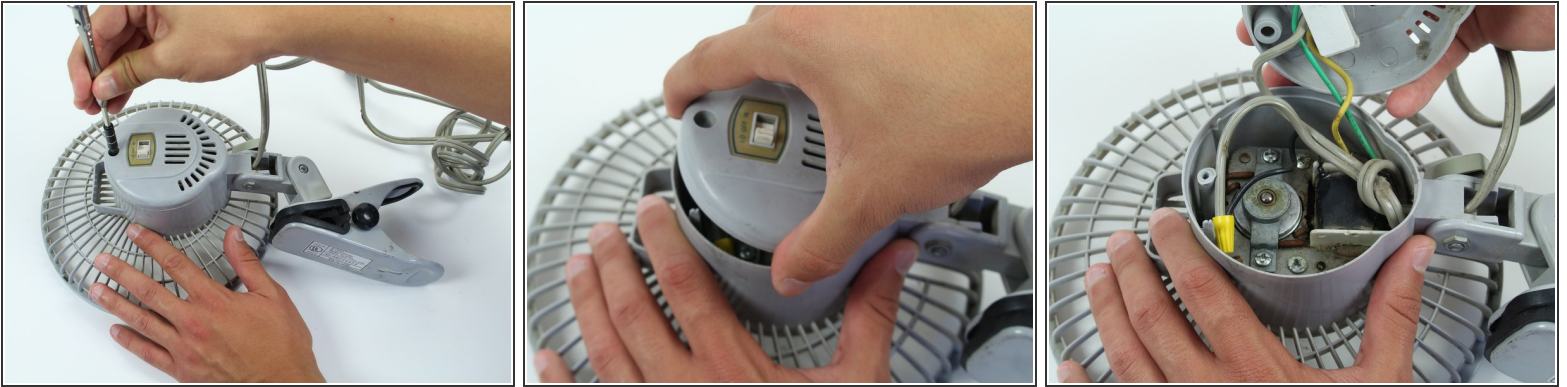


 Make sure to unplug the Comfort Zone CZ6C before cutting any wires.

 Before replacing your switch, learn how to solder using the [How To Solder and Desolder Connections Guide](#).


- Start with the fan on its back. Unscrew the back panel to expose the internal wiring.

Step 2

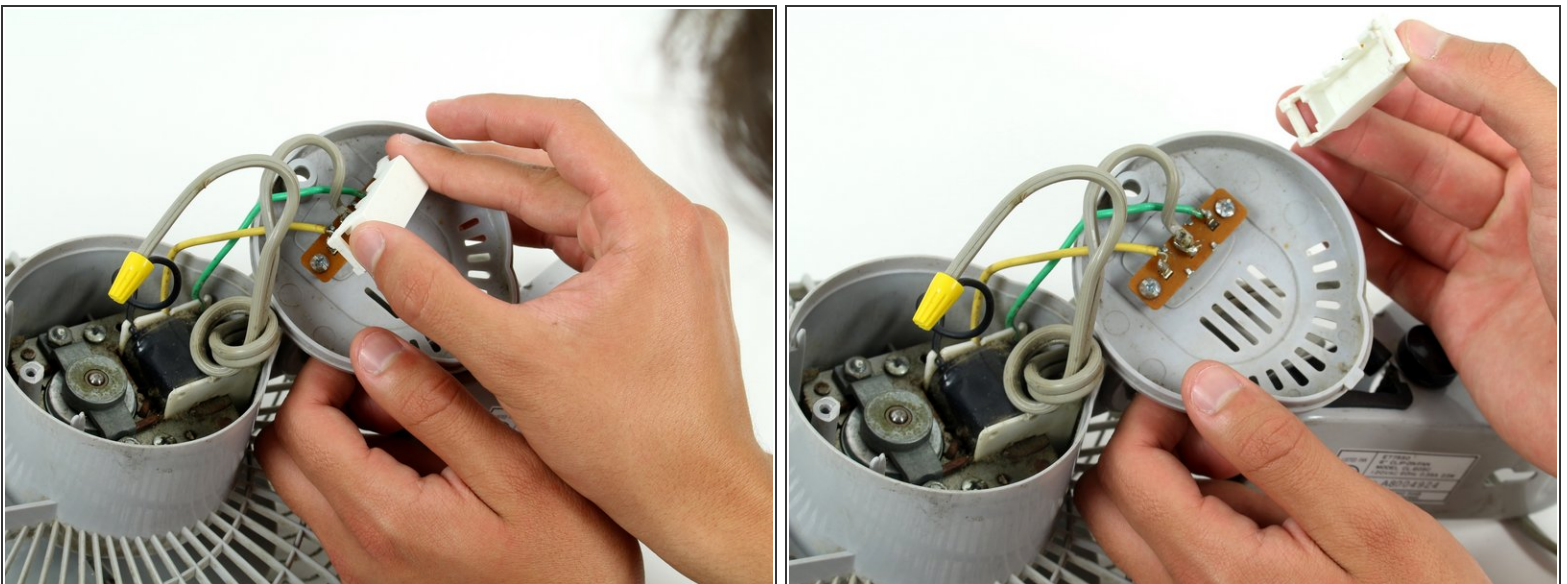



- Remove the plastic cover on the switch by pulling it apart from the the back panel.

Step 3

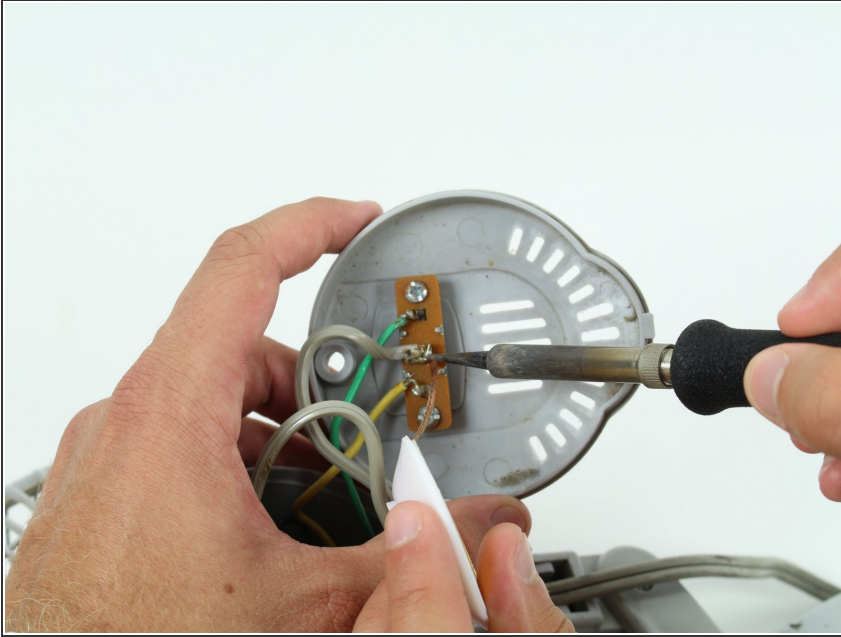


- ⚠ Use the soldering iron with caution. Don't touch the tip of the soldering iron to avoid the risk of injury.
- ℹ This step can be made easier with the help of a partner to hold the wiring while you desolder the connection.
- Disconnect the gray power wire from the switch by desoldering the connection.

Step 4

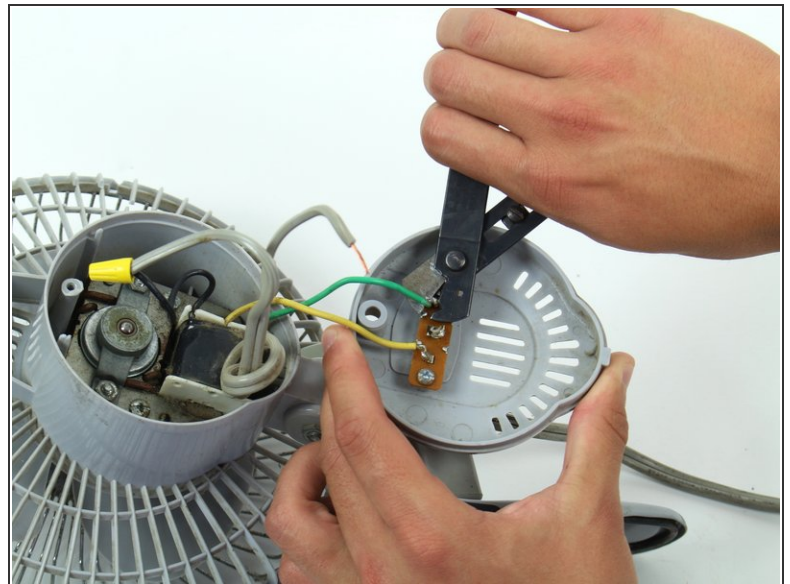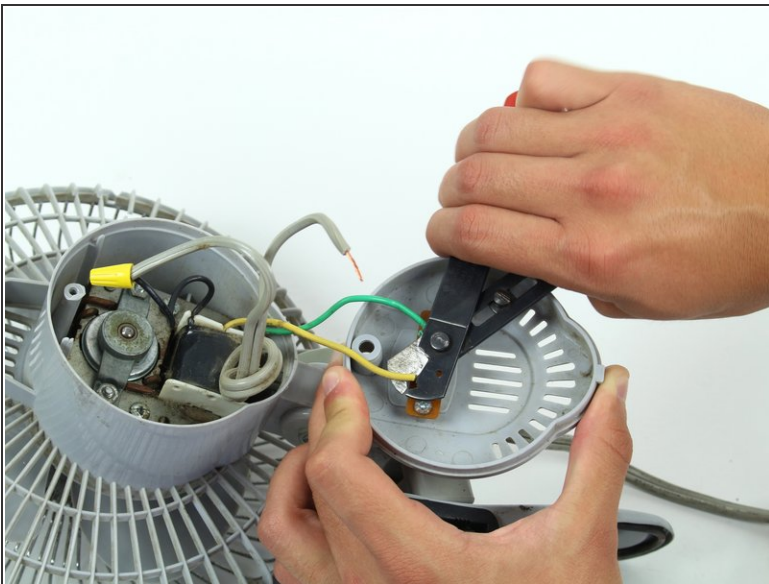


- Cut the green and yellow wire as close to the switch connection as possible.

Step 5

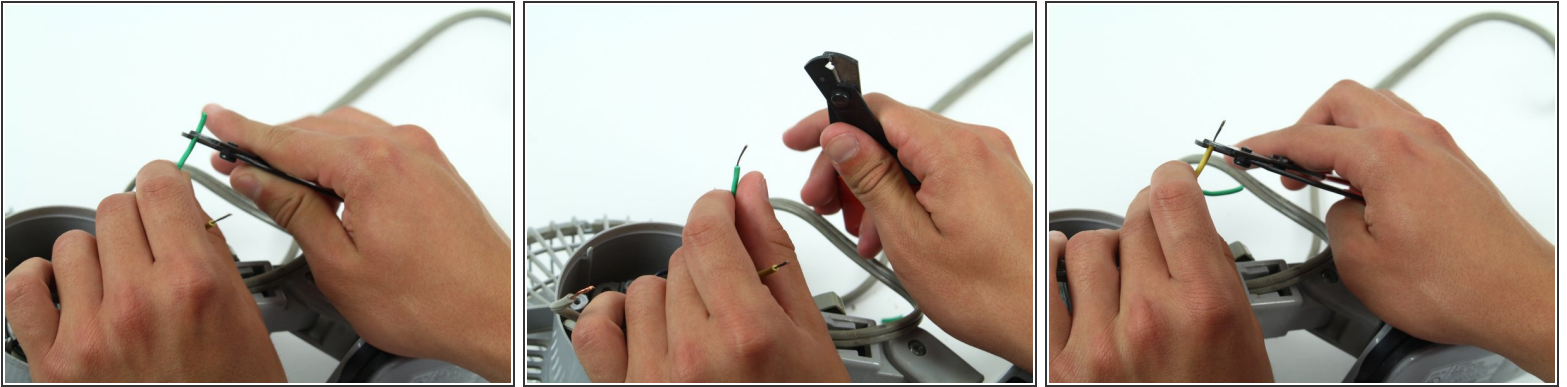

- Strip the green and yellow wire about two centimeters from where it was just cut.

Step 6

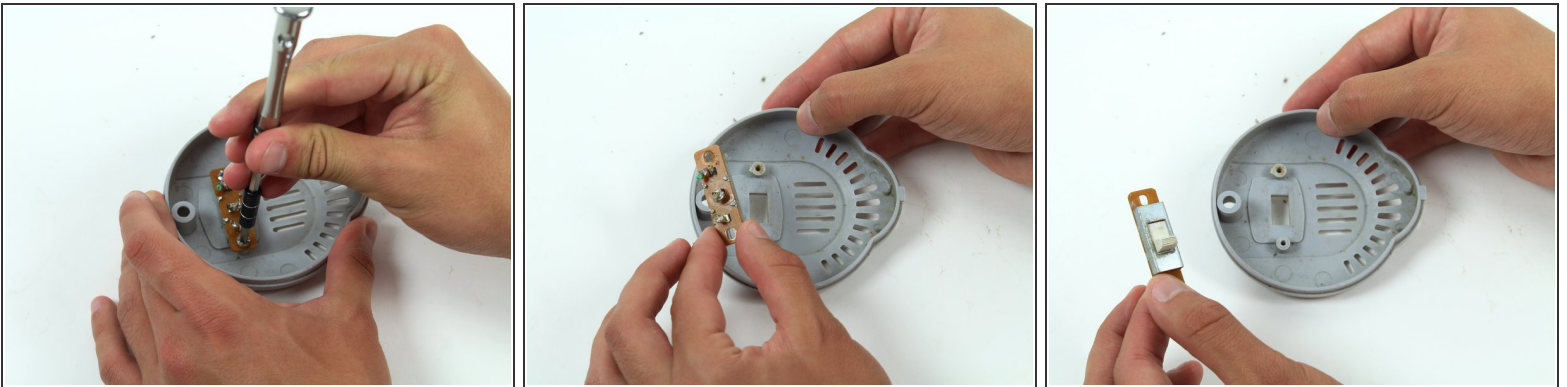

- Unscrew the switch from the back panel and remove it.

Step 7



- After replacing the switch, resolder the gray power cord, the green wire, and the yellow wire.

To reassemble your device, follow these instructions in reverse order.