




Sony VAIO VPCF 132FX Bottom Case Replacement

This will guide you in replacing the Bottom Case of a Sony Vaio VPCF 132FX

Written By: trickster

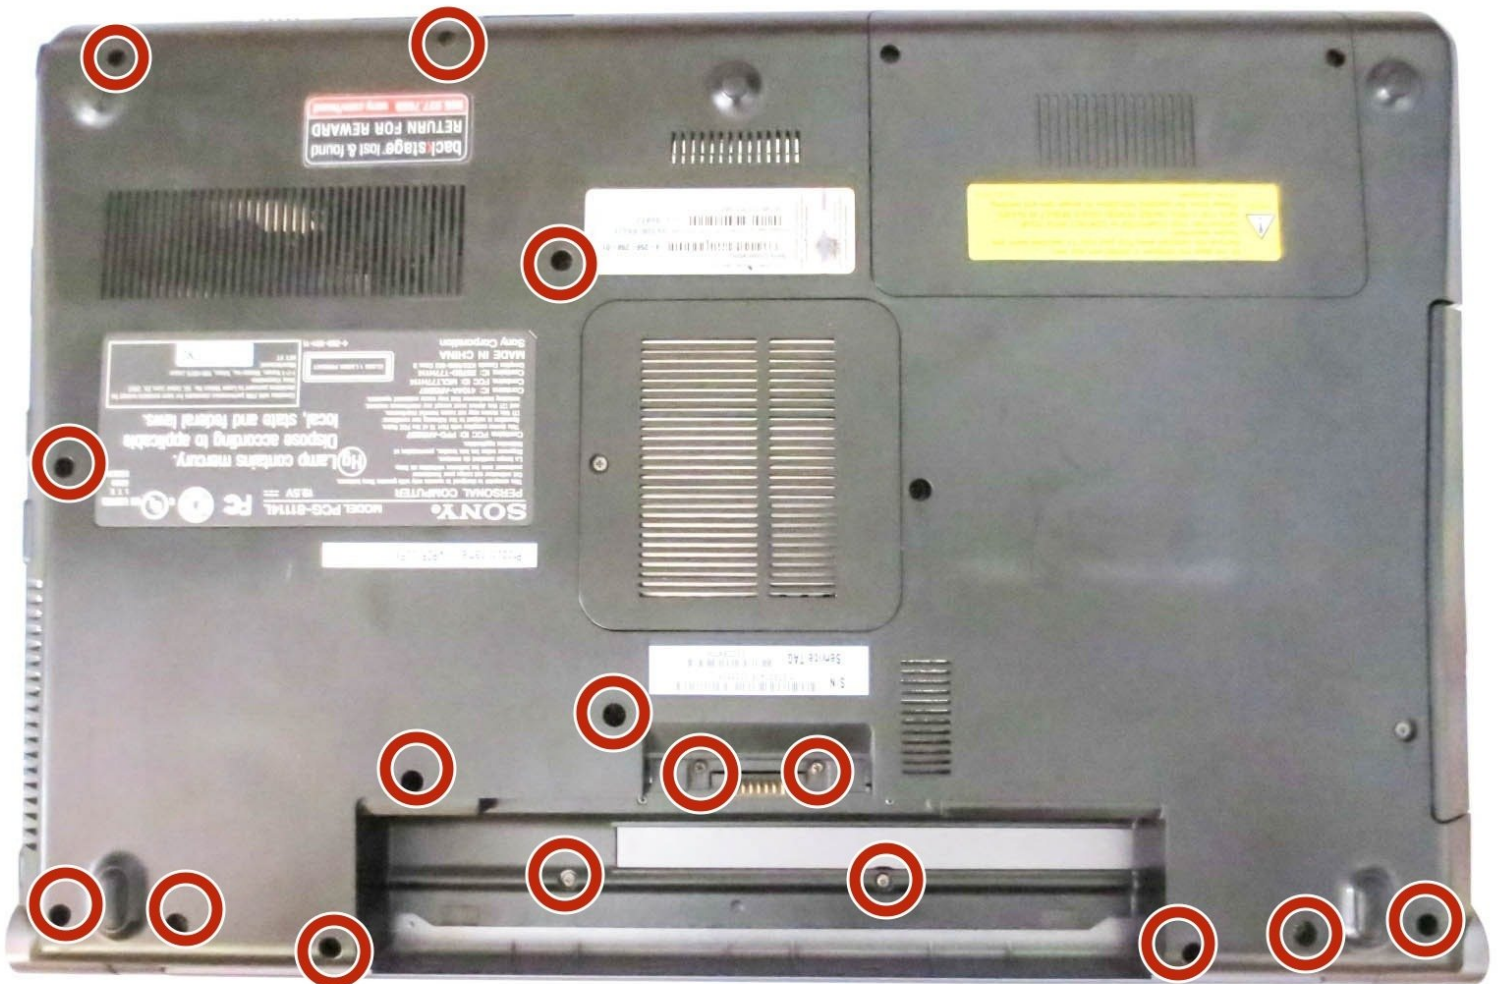



TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

Step 1 — Battery




- Remove all wires then flip the laptop

Step 2




- Remove the battery

Step 3 — RAM

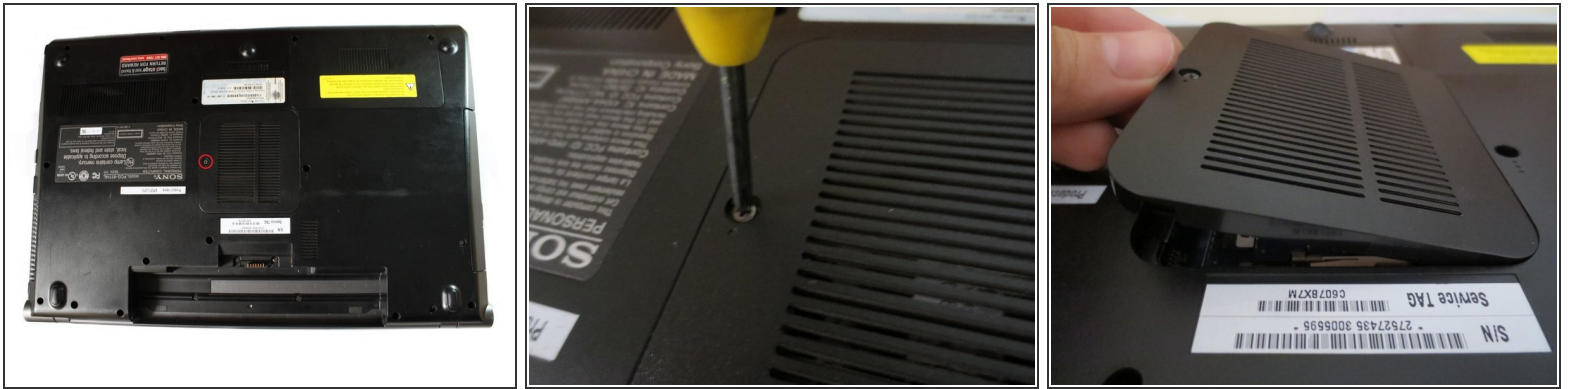


- Flip the Laptop, and unscrew the RAM cover.

Step 4

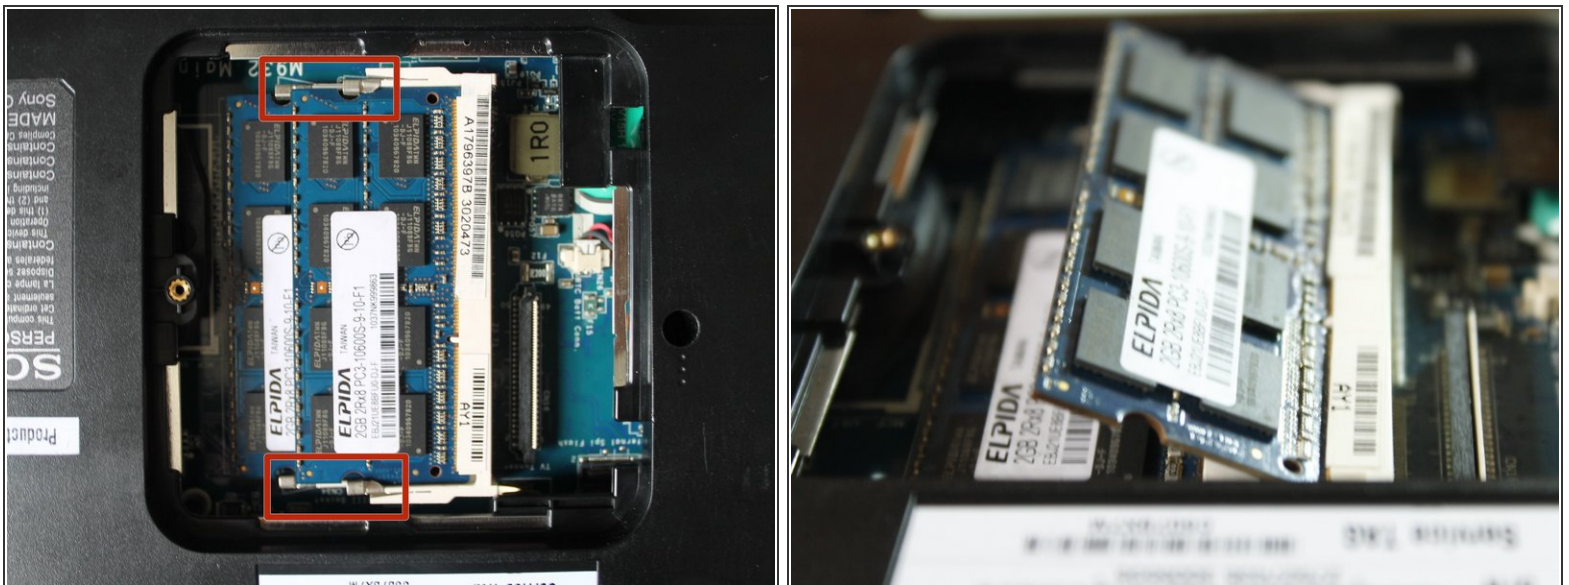

- Unlock the RAM by pulling the locks outward.
- i You'll know if its unlocked if it flips up in 45 degrees.



Step 5

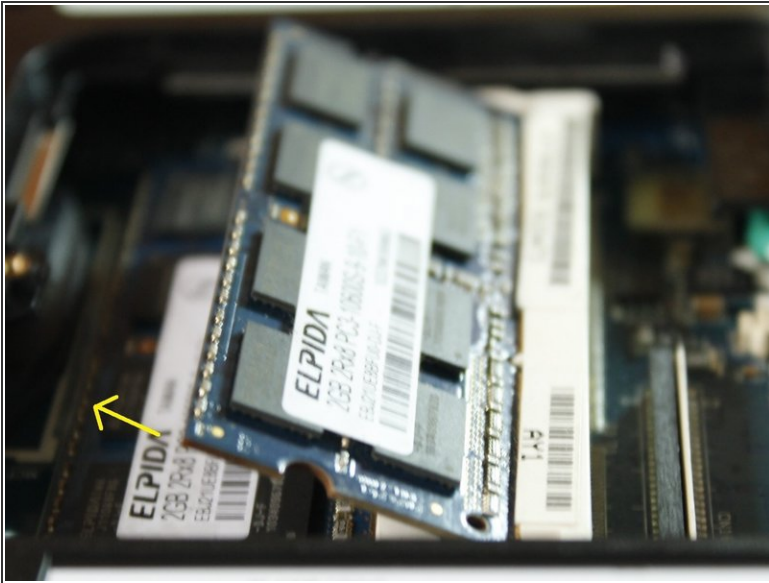

- Pull the outer RAM. Repeat Step 4 and 5 for the other RAM.


⚠ When returning, put the RAM back in at 45 degree angle, NOT 90 degree angle.

Step 6 — CD/DVD Drive

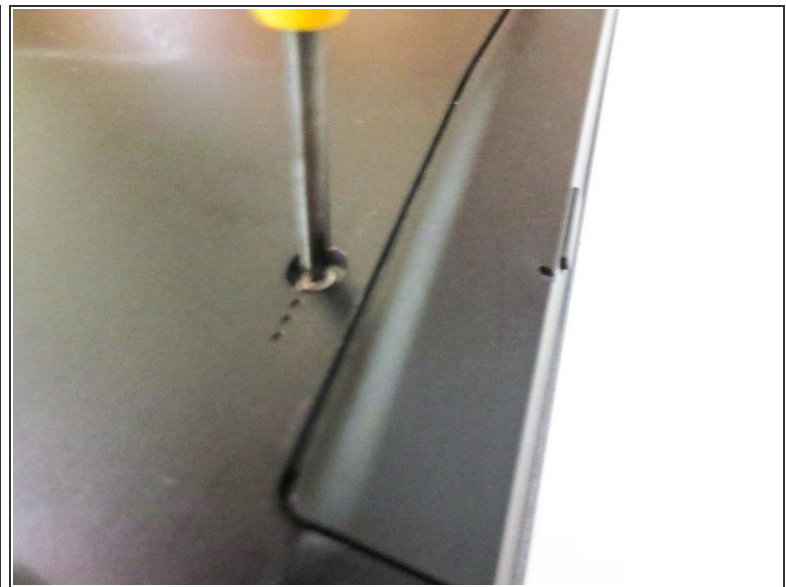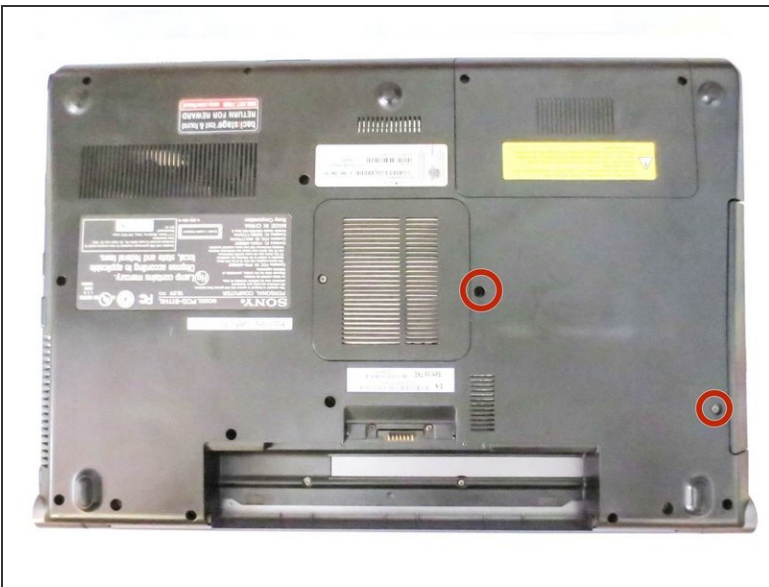

- Remove the 2 screws holding the CD/DVD Drive.

Step 7

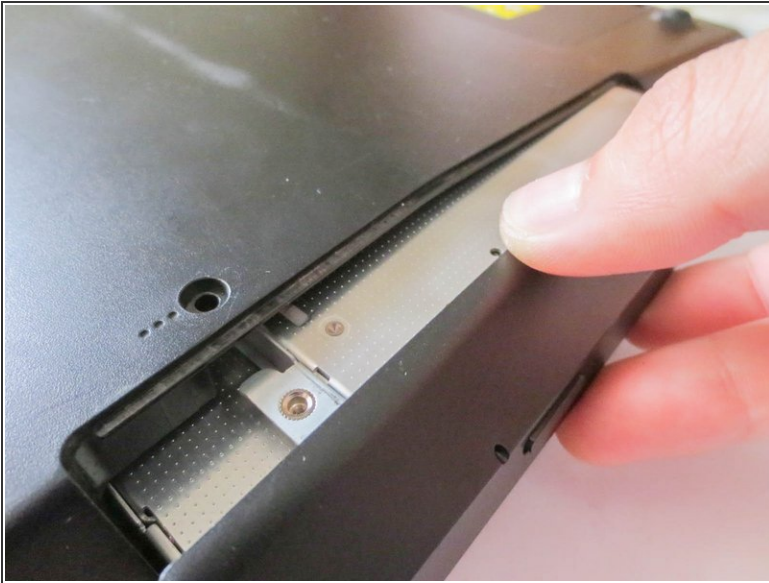

- Slide the CD/DVD Drive out.

Step 8 — Hard Disk Drive / Solid State Drive



- Remove the screws.
- Slide the HD cover outward then lift.

Step 9



- Remove the screws.
- Slide to where the arrow points to unlock the HD.


⚠ Hold it at the side. Never touch the circuits.

Step 10



- Remove the 4 screws at the side and remove the HDD/SSD

Step 11 — Bottom Case

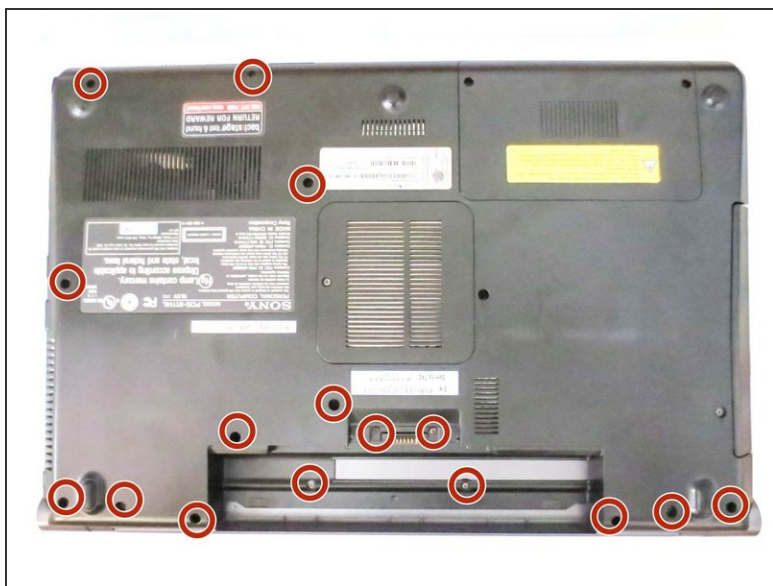

- Remove all the other screws.
- Dont forget the 3 screws after you remove the CD/DVD Drive.

To reassemble your device, follow these instructions in reverse order.