



Canon Powershot SD880 Back Cover Replacement

The outer casing covers the internal mechanisms...

Written By: Ben Tupas



INTRODUCTION

The outer casing covers the internal mechanisms of the camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Remove the two 2.4 mm screws on the side of the camera that are next to the LCD screen using a Phillips #00 screwdriver.
- Remove the two 4.1 mm screws on the other side using a Phillips #00 screwdriver.
 - ⓘ One screw will be located under the rubber USB flap.
- Remove the single 2.6 mm screw from the bottom of the camera using a Phillips #00 screwdriver.
- Slowly pull the back cover off of the camera.

To reassemble your device, follow these instructions in reverse order.