




Pentax Optio WP Motherboard and Flash Unit Replacement

Prerequisite guide for motherboard and flash unit removals

Written By: Derek

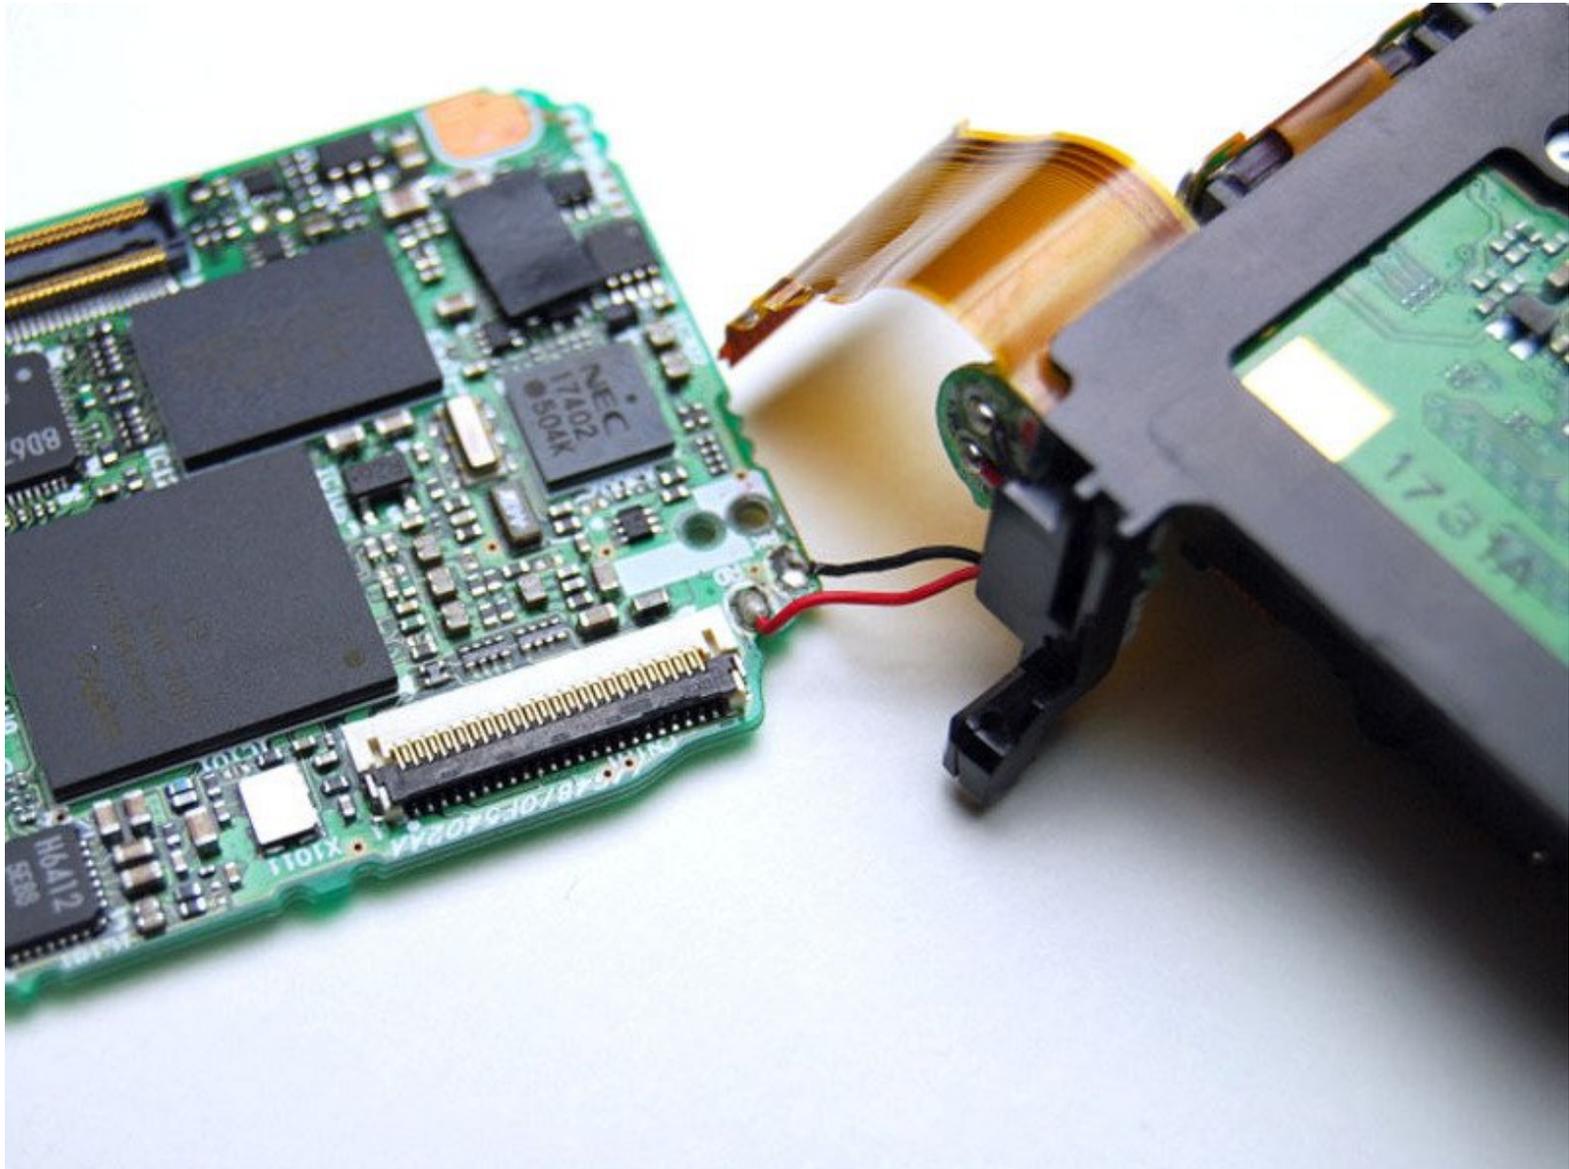


INTRODUCTION

PREREQUISITE GUIDE ONLY.

TOOLS:


- [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Motherboard and Flash Unit

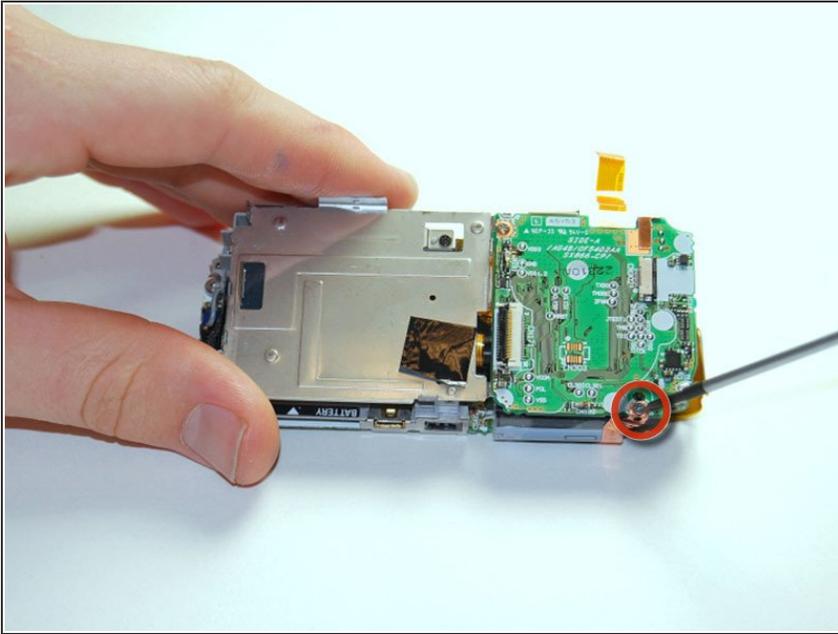


- Remove the 4 mm black screw on the bottom right corner of the motherboard.
- ⓘ The black screw may be hard to remove. Use the tweezers if necessary.

Step 2

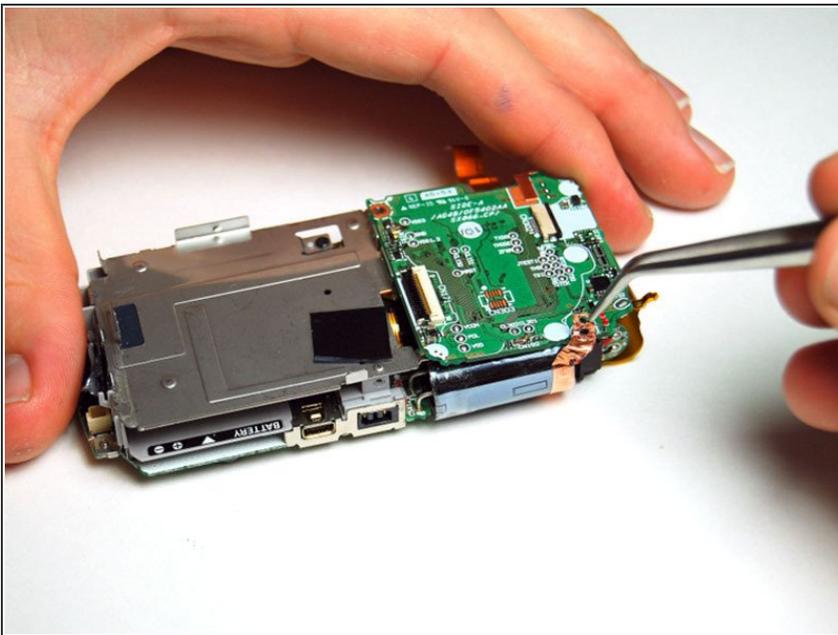



- With the tweezers, carefully peel back the copper ribbon that was underneath the black screw.

Step 3

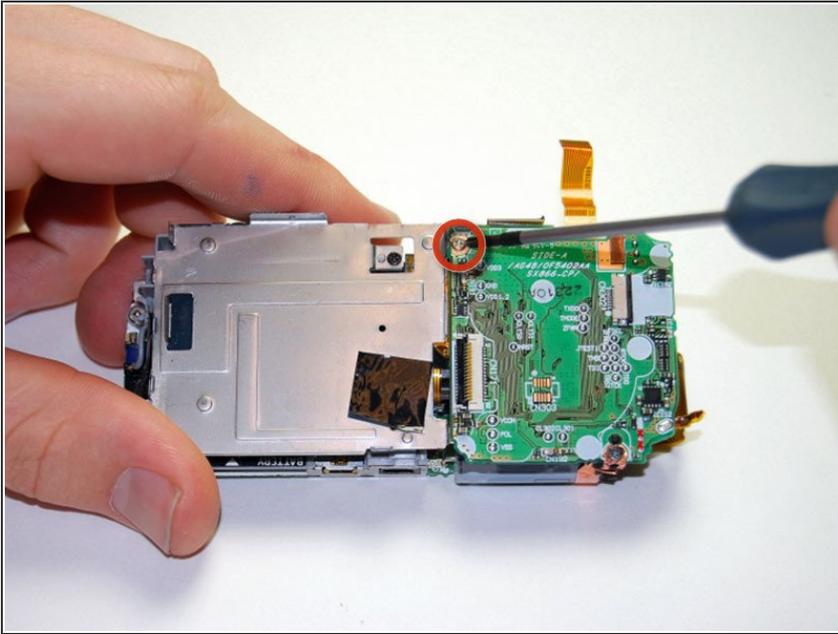

- Remove the 2.5 mm silver screw from the upper left corner of the motherboard.

Step 4

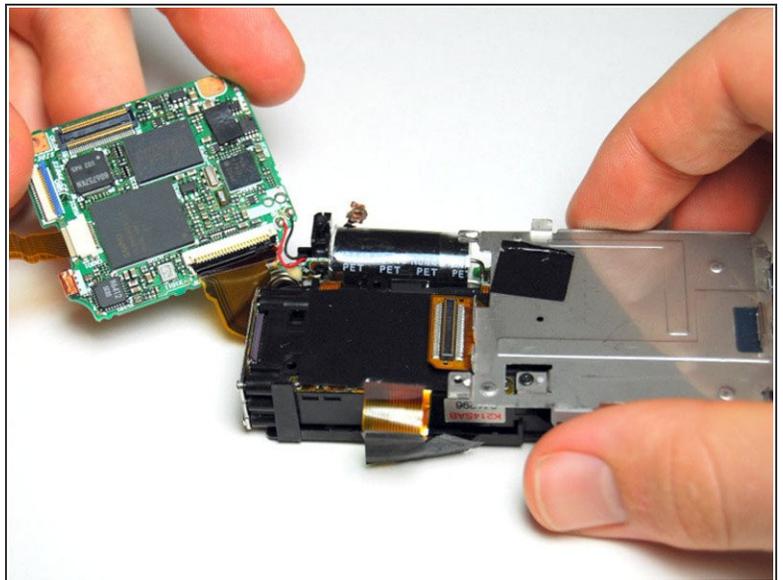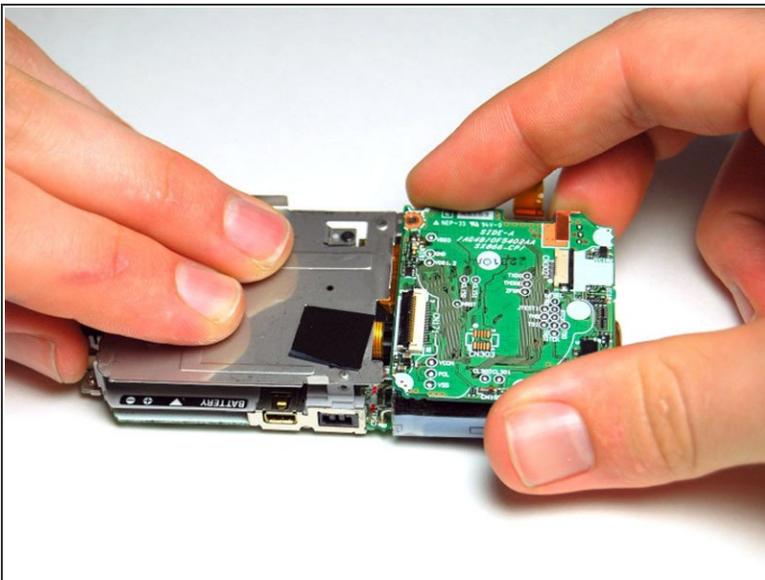

- Press down on the metal plate and gently lift the motherboard up from left to right.
- ⚠ Be cautious when lifting the motherboard since there is a copper ribbon and two wires attaching the motherboard to the flash unit.
- Reorient the camera so you are looking at the top edge with the metal plate on the right.

This document was generated on 2020-11-28 02:08:36 AM (MST).

To reassemble your device, follow these instructions in reverse order.