


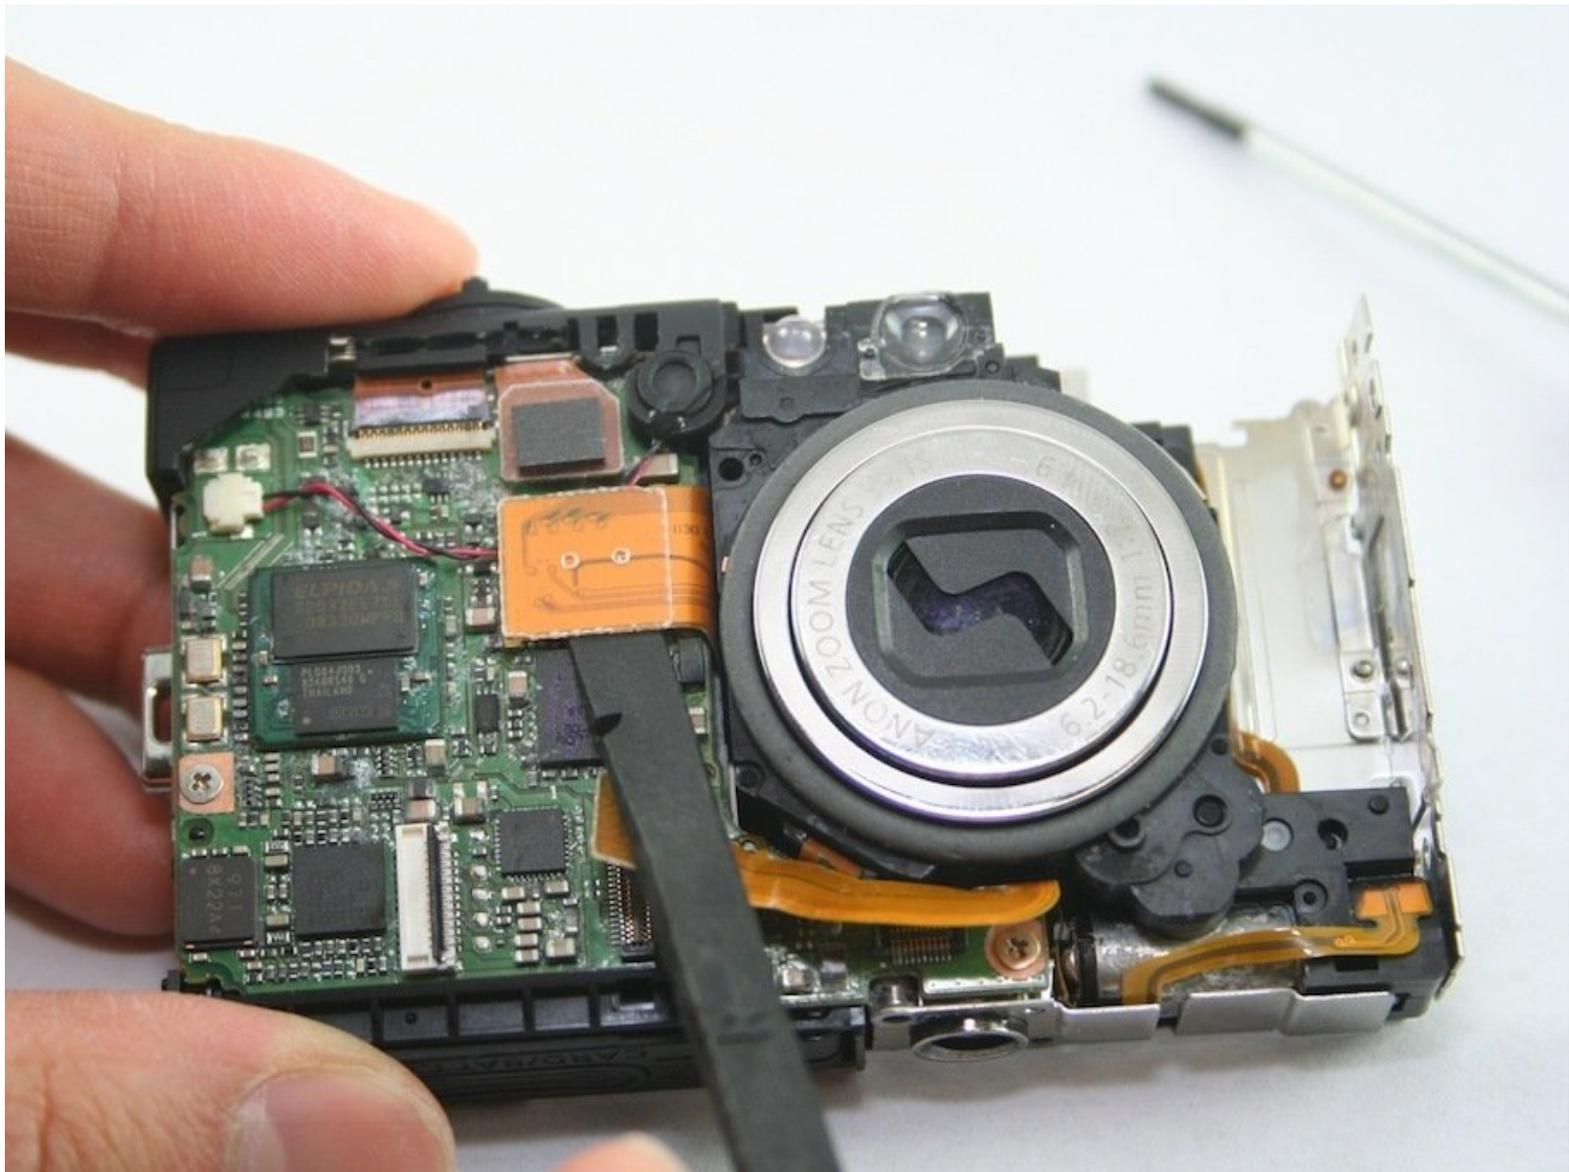

# Canon PowerShot SD1100 IS Top Button Assembly Replacement

This guide will show you how to remove the button assembly along the top of the camera, which includes the shutter button.

Written By: Wyatt Chan



This document was generated on 2020-11-28 02:07:55 AM (MST).

---

## INTRODUCTION

In this guide you will learn to remove the top button assembly, which can be replaced if damaged or filled with debris.

---

### **TOOLS:**

- [Spudger](#) (1)
-

## Step 1 — Front and Rear Cover




- Remove wrist strap and battery.

## Step 2



- Remove 2 screws from each side of the camera (4 total, 0.102 in).
  - Remove 2 screws from the bottom on the camera (0.138 in).
- ⚠ Do not mix the 4 side screws with the 2 bottoms ones; they are different sizes.

### Step 3

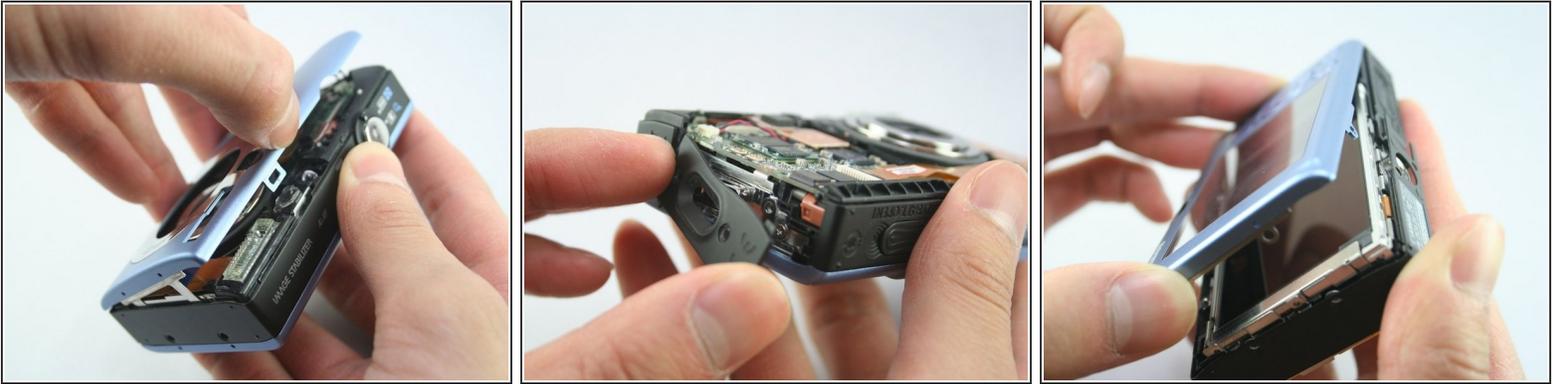

- Gently pull off the front cover.
- ⓘ The plate on the side should come off.
- Gently pull off the back cover.

### Step 4




- The cases should now be removed.

## Step 5 — Top Button Assembly




- Use the spudger to disconnect the black tab.

## Step 6

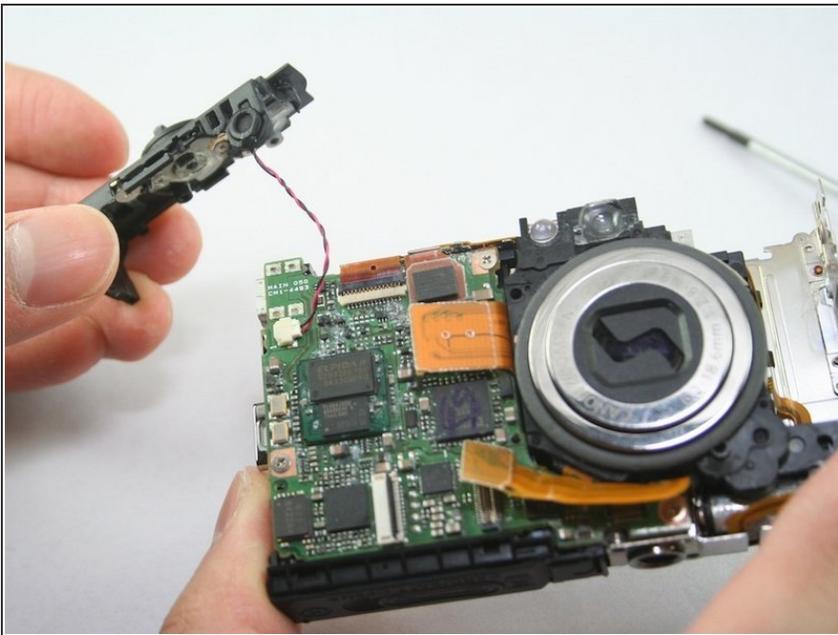

- Gently pull off the shutter button assembly.

## Step 7

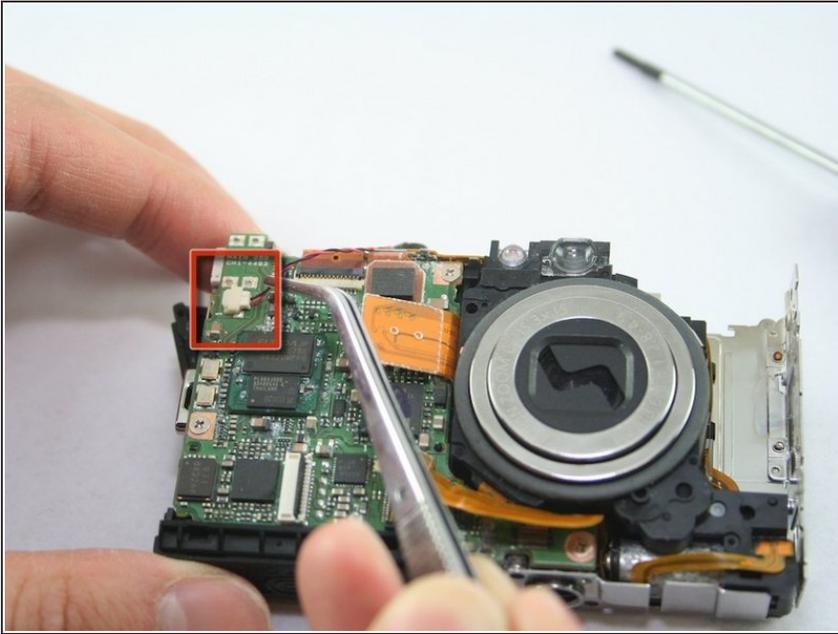

- Use the tweezers to disconnect the microphone cable.

## Step 8



- The shutter button assembly should now be removed.

To reassemble your device, follow these instructions in reverse order.