 


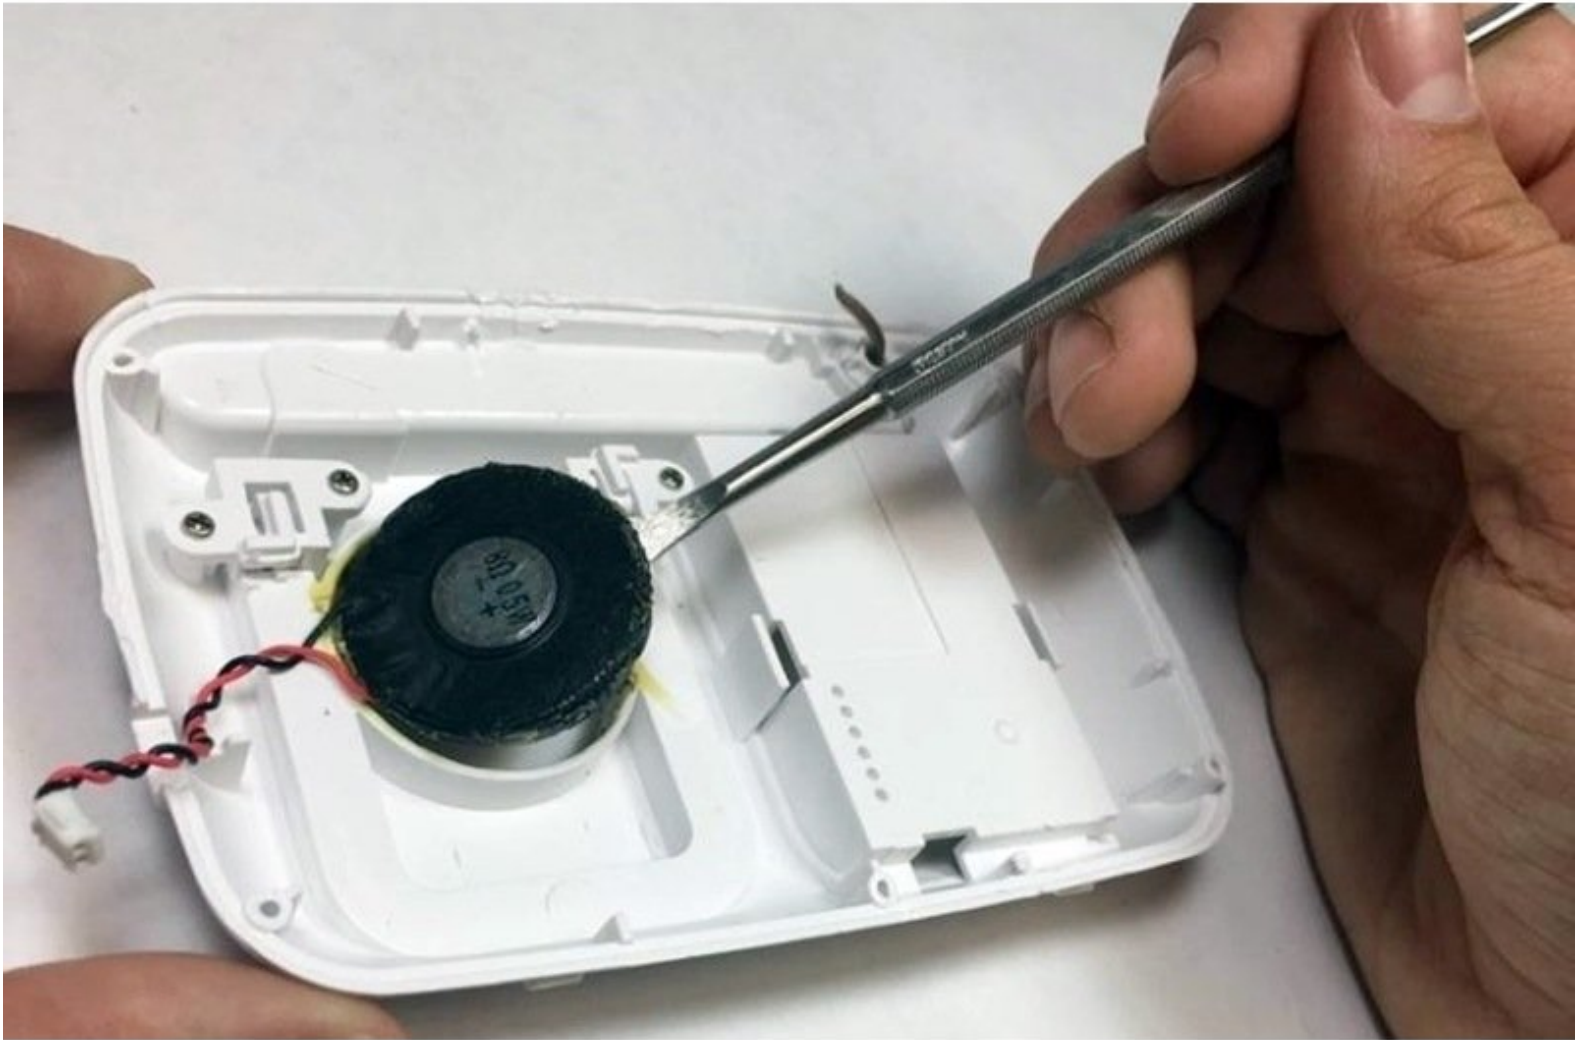

Infant Optics DXR-8 Speaker Replacement

8W speaker replacement. To access speaker, reference this disassembly guide:
<https://www.ifixit.com/Guide/Infant+Optics+DXR-8+Monitor+Disassembly/78454>

Written By: Larsha Johnson



INTRODUCTION

Replace a faulty speaker.



TOOLS:

- [Heat Gun](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Internal Monitor Components



- Using the plastic opening tool, remove screen protector from front of monitor.

Step 2



 
- Remove the six 4mm screws using a Phillips #00 screwdriver.
- Remove the screen, exposing the circuit board.
- Turn device over to expose rear circuit board.

Step 3




- Disconnect speaker from monitor for ease of access by unplugging wire.

Step 4 — Speaker

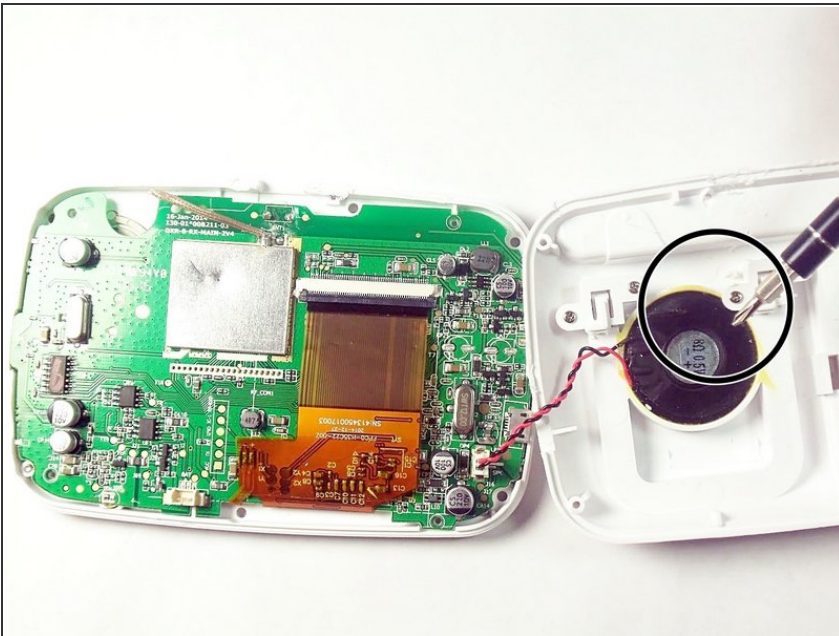

- Use a heat gun to soften and easily remove epoxy that surrounds the speaker. Gently scrape it free little by little with metal spudger.

 Step 5

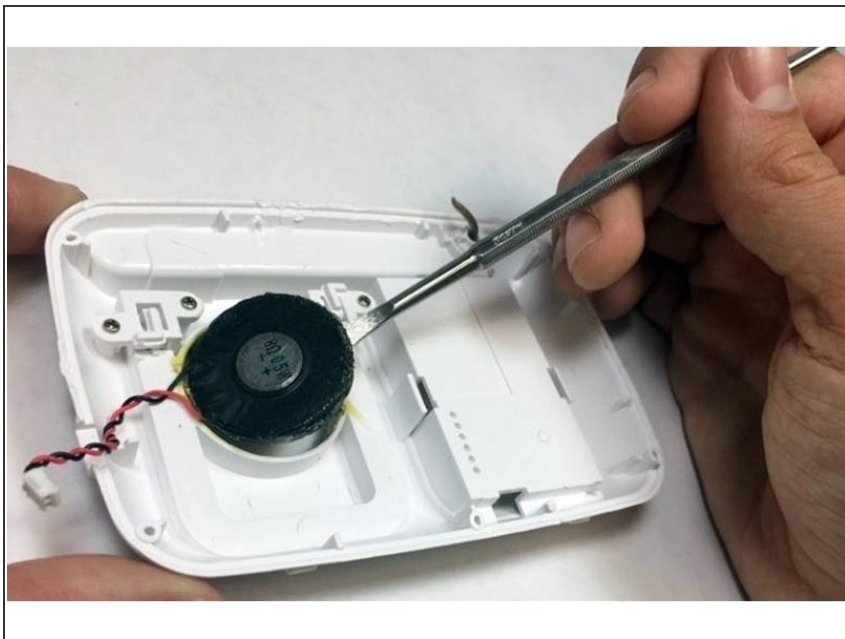

- Lift the speaker from casing using metal spudger.
- Place new 8W speaker in the casing and connect wire.

To reassemble your device, follow these instructions in reverse order.