




# HTC One X Plus Top Speaker Replacement

If your top speaker doesn't work then...

Written By: Jason Melo

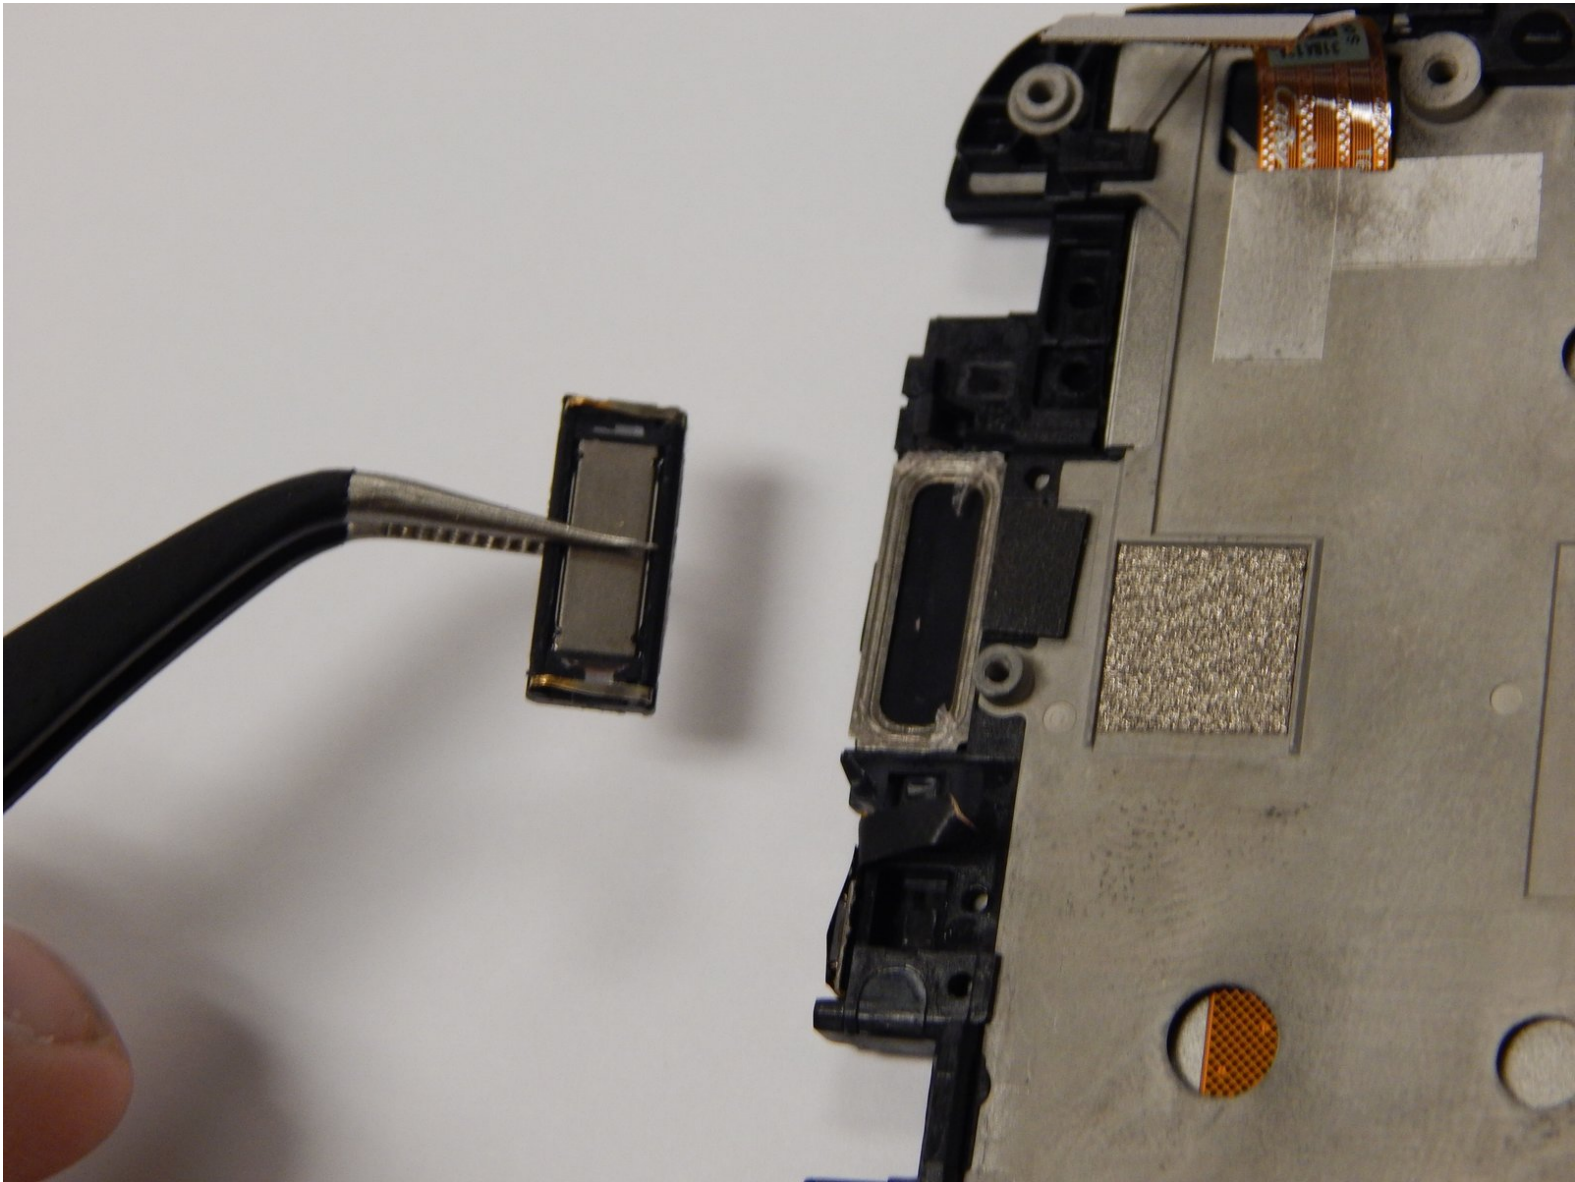

# INTRODUCTION

If your top speaker doesn't work then replacement may be the best option.

---

## TOOLS:

- [Tweezers](#) (1)
  - [Suction Handle](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Top Speaker




- Hold down the power button to turn off your device.
- Insert a pin, paper clip, or another similar object into the hole next to the micro sim card holder to remove it.
- ⓘ The SIM card slot is located on the top edge of the device.

## Step 2



- Using plastic opening tools, pry open the bottom of the device.
- You will hear clicking sounds as the sides of the device detach from the screen.
- Once both sides are detached use the suction cup tool to remove the screen completely from the black casing.


## Step 3

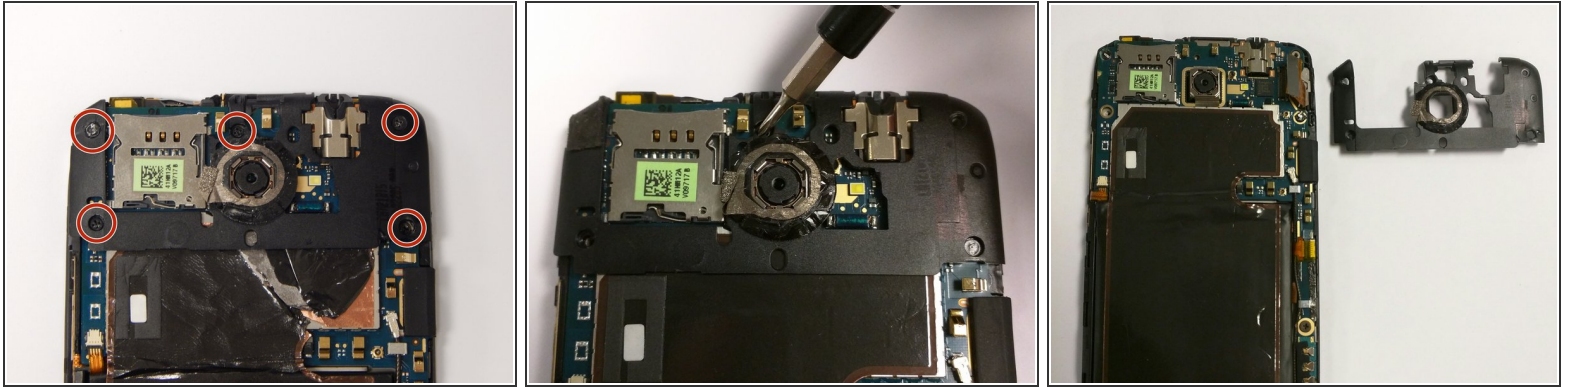

- Remove the five 2.4mm screws located around the camera using a Philips head screwdriver to remove the plastic cover.

⚠ Once you have disassembled your device the warranty will no longer be valid.


## Step 4

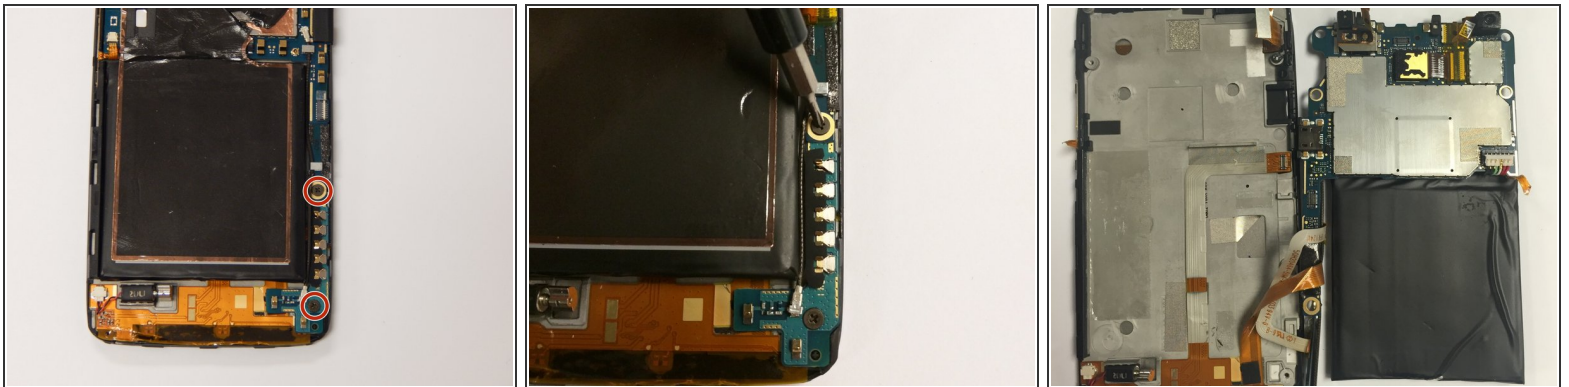

- Use the J000 Philips screwdriver to remove the screws and remove the PCB board and antenna.
  - These are two 3.4mm Philips head screws found in the lower right corner of the phone.





## Step 5

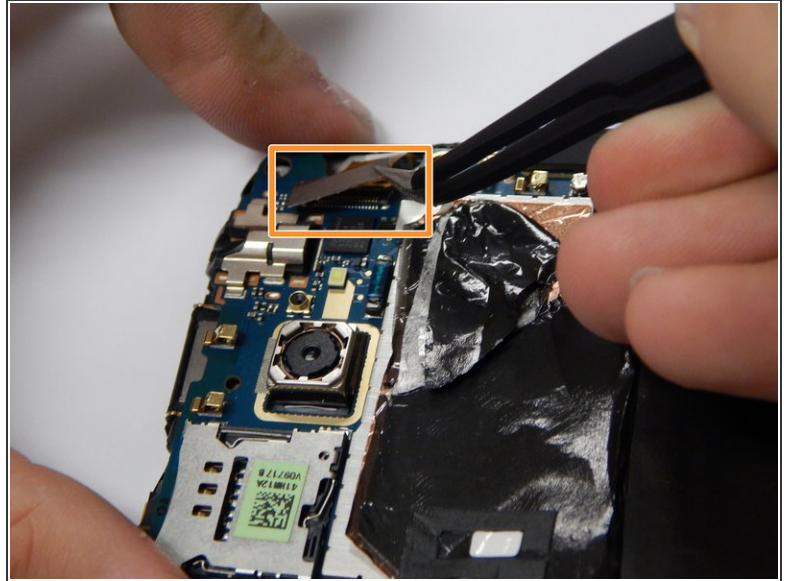


- Pull out the power button flex cable using tweezers to disconnect from the phone.
- Use the tweezers to then disconnect the touch screen flex cable.

## Step 6

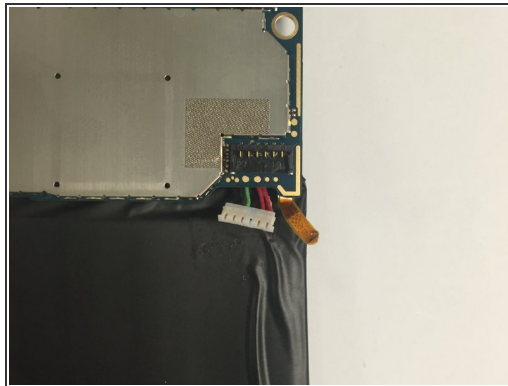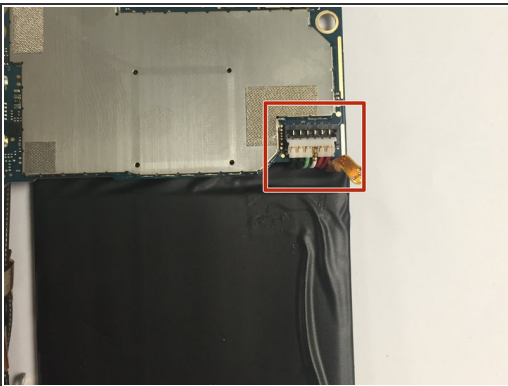

- Remove the battery connections to the logic board.
  - This is the six pin connector seen in the red box.
- Pull the battery away to remove from the back of the screen.

## Step 7

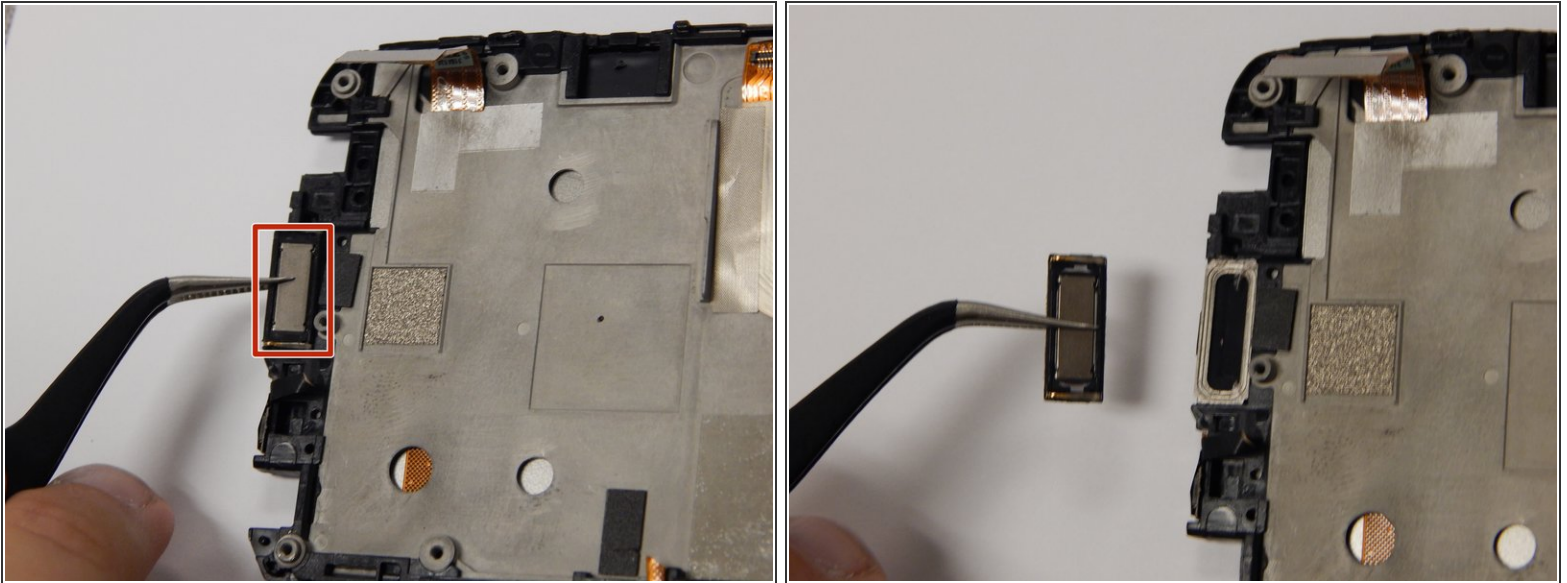

- CAUTION: carefully remove the top speaker from the phone using tweezers.

To reassemble your device, follow these instructions in reverse order.