




Nest Dropcam Pro Mounting Clips Replacement

Replace the mounting clips to keep your Nest Dropcam Pro secure in the mount.

Written By: David Foens

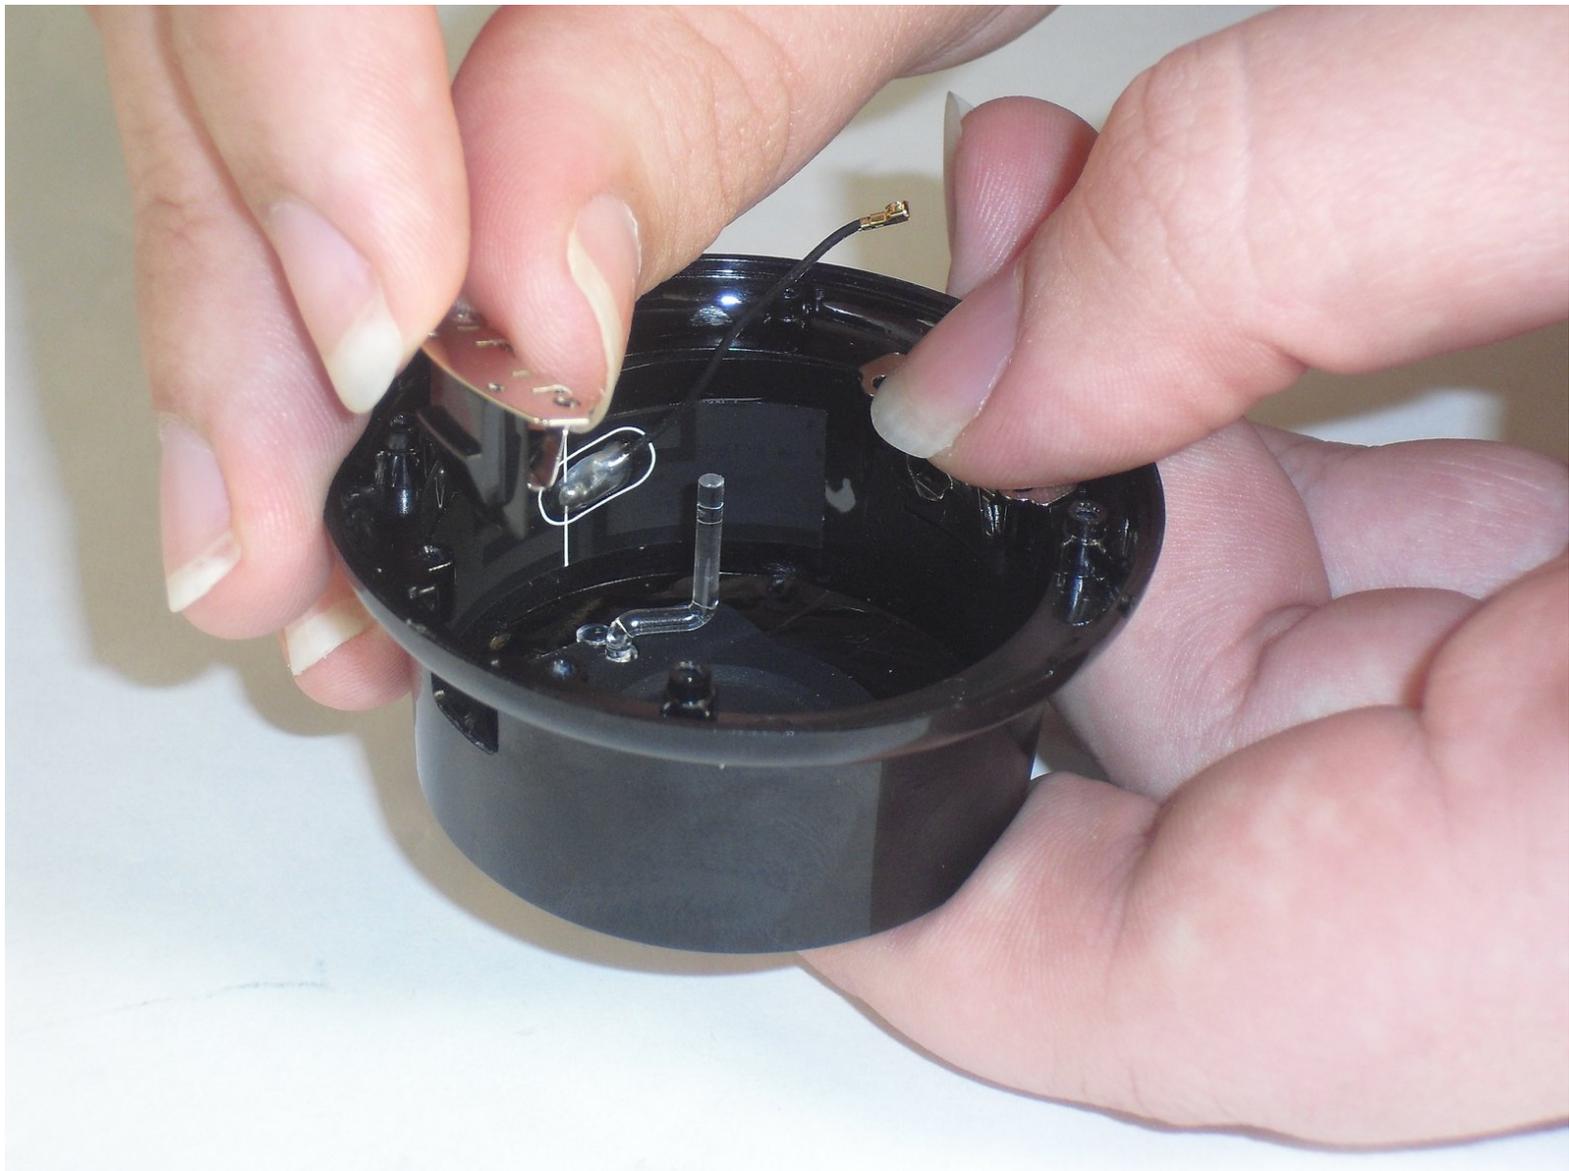

INTRODUCTION

This guide is needed to replace the mounting clips if they do not securely hold the camera in its mount. Make sure the device is unplugged before opening.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Outer Case




- Press in the mounting clips on each side of the case to remove the camera from the mount.

Step 2




- Using a Philips #0 screwdriver, remove the four 3 mm screws.

Step 3

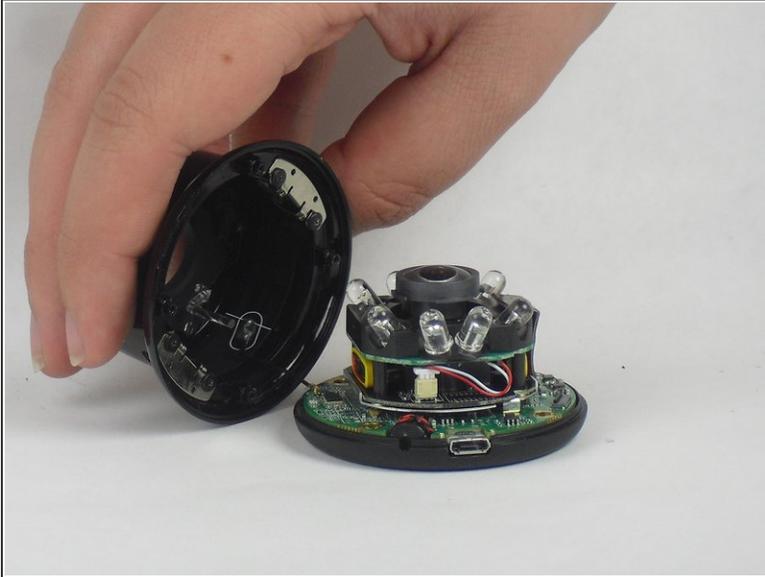

- Lift the front of the case slowly, as there is an antenna cable attached to the motherboard.
- Carefully disconnect the antenna cable from the motherboard. You will feel this cable "pop" out of place when disconnected.

Step 4 — Mounting Clips

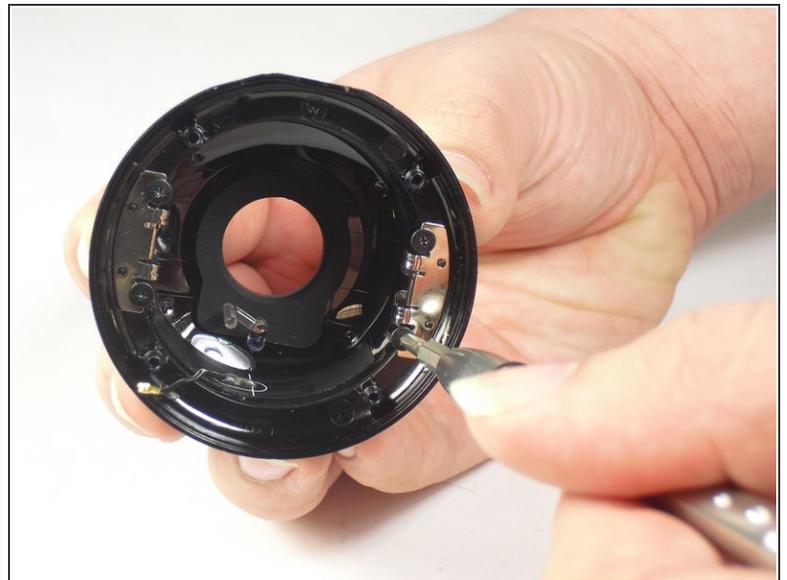

- Using a Philips #0 screwdriver, remove the four 4 mm screws that are attaching the mounting clips to the case.

Step 5



- Lift the mounting clips away from the case.

To reassemble your device, follow these instructions in reverse order.