



# Samsung Galaxy Note5 LCD screen & USB board & Home button Replacement

Samsung Galaxy Note 5 LCD screen replacement, USB board replacement and Home button flex replacement

Written By: Sophia



## INTRODUCTION

Samsung Galaxy Note 5 LCD screen replacement, USB board replacement and Home button flex replacement share the most same and complicated steps, so bring them together.

[video: [https://www.youtube.com/watch?v=uqkv86aK\\_\\_k](https://www.youtube.com/watch?v=uqkv86aK__k)]



### TOOLS:

- [Heat Gun](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Suction Handle](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)



### PARTS:


- [Galaxy Note5 Screen](#) (1)
- [Galaxy Note5 Charging Assembly \(Verizon\)](#) (1)
- [Galaxy Note5 Charging Assembly \(AT&T\)](#) (1)
- [Galaxy Note5 Home Button Assembly](#) (1)
- [Samsung Galaxy Note 5 LCD screen](#) (1)
- [Samsung Galaxy Note 5 USB board](#) (1)
- [NuGlas Tempered Glass Screen Protector for Galaxy Note5](#) (1)

## Step 1 — LCD screen & USB board & Home button



- Remove SIM card tray and S pen.

## Step 2

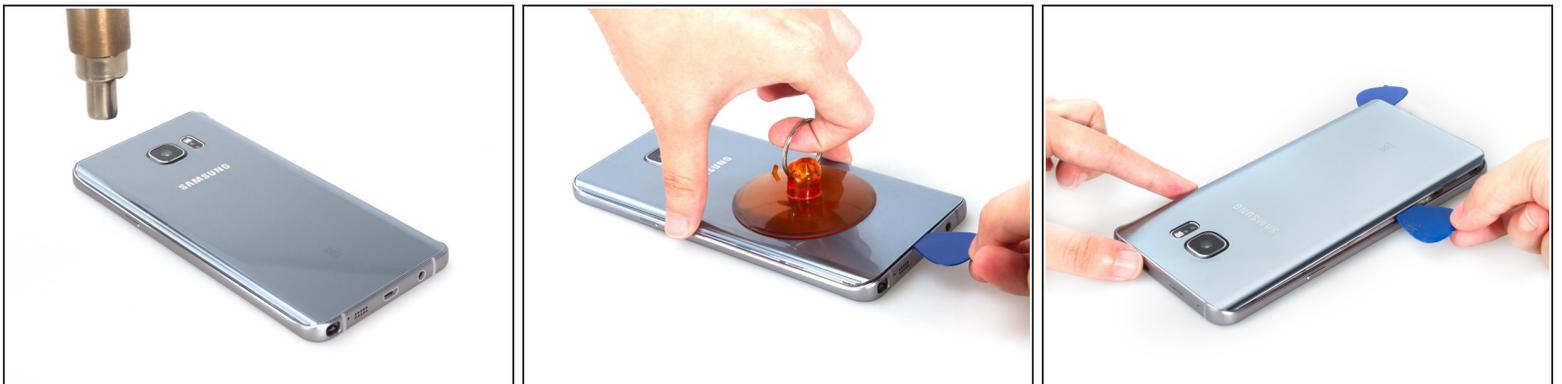


- Remove back cover.

### Step 3



- Remove middle housing.

### Step 4

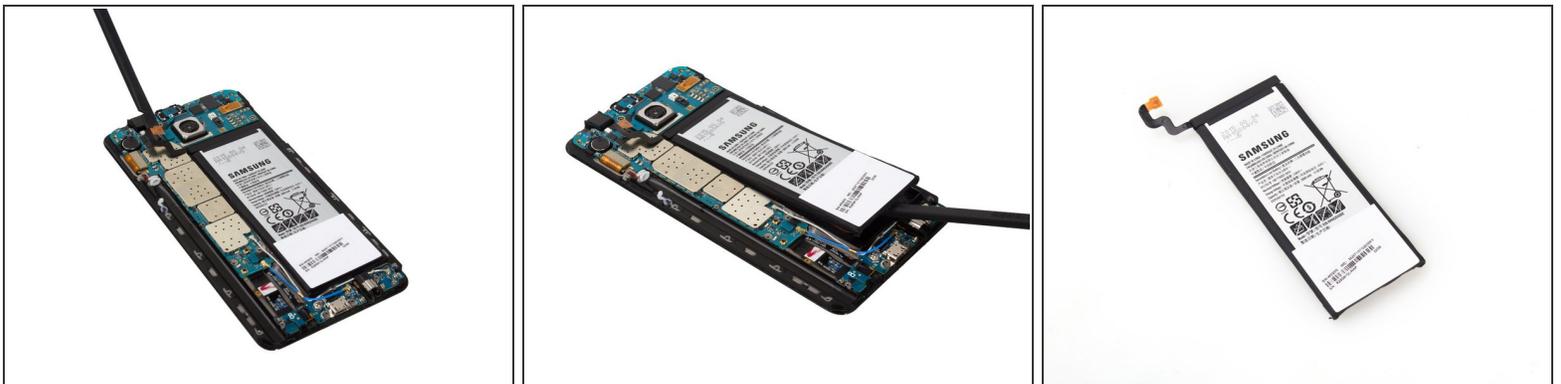


- Remove battery.

## Step 5



- Release connectors on the motherboard.

## Step 6

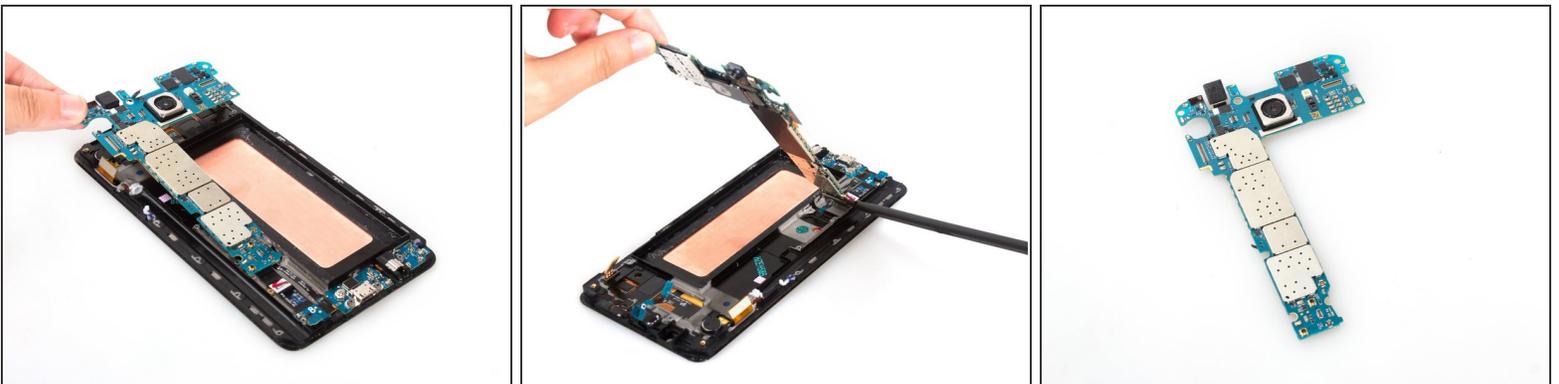

- Release USB board connector on the back and remove the motherboard.

## Step 7



- Remove LCD screen. It's really difficult, see more details on [Samsung Galaxy Note 5 teardown.](#)

## Step 8



- Remove USB board. If you replace USB board only, please be careful with the LCD screen very much. Once a defect, the screen will be cracked or broken.

## Step 9



- Push the button out from slot as the direction of mark. And then release the adhesive and remove button flex.
- The same tips: Be careful with the LCD screen!

To reassemble your device, follow these instructions in reverse order.