

De'Longhi EC155 Bottom Panel Replacement

Prerequisite Only

Written By: David Griffith





Phillips #2 Screwdriver (1)

Step 1 — Bottom Panel





- Flip the device on its head.
- Using the Phillips #2 screwdriver, unscrew the four 12 mm screws found at each corner of the bottom panel.
- Lift the panel off or flip the device over and let the panel drop out.

To reassemble your device, follow these instructions in reverse order.