



# Dyson DC58 Battery Pack Replacement

Remove the battery pack from the Dyson DC58 vacuum.

Written By: Krista St Onge



## INTRODUCTION

Check out this guide to learn how to remove the battery pack from the Dyson DC58 vacuum. If your vacuum is not charging due to a damaged or dead battery this guide will show you how to replace it!

### **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)

### **PARTS:**

- [Dyson V6 Vacuum Battery](#) (1)

## Step 1 — Bin



- Make sure your vacuum is unplugged.

 Avoid pressing the red trigger on the vacuum handle; this will power on the vacuum.

## Step 2



- Locate the red lever parallel to the red trigger and on the side of the clear bin.

### Step 3



- Push the red lever downward to open the clear bin. You may need to do this over a trash bin if there is debris in the clear bin.

### Step 4



- Push the red lever downward again while pulling the clear bin away from the main body of the Dyson vacuum.

## Step 5 — Battery Pack



- Locate the 10mm screw on the side of the battery pack closest to the purple cyclone of the vacuum
- Use the 2.0 Phillips head screwdriver to remove the 10mm screw

## Step 6



- Locate the 10mm screw on the back of the handle on the opposite side of the red trigger button
- Use the 2.0 philips head screwdriver to remove the 10mm screw

## Step 7



- Pull the base of the vacuum down, away from the main body

To reassemble your device, follow these instructions in reverse order.