



Nikon Coolpix S70 Display Screen Replacement

Replace your broken or cracked display screen so you can use the touch display and view your pictures clearly.

Written By: Danielle Morris





INTRODUCTION

This guide will assist you in replacing your broken, cracked or malfunctioning display screen. For this replacement you will need a Phillips #000 screwdriver and a plastic opening tool.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-


Step 1 — Display Screen

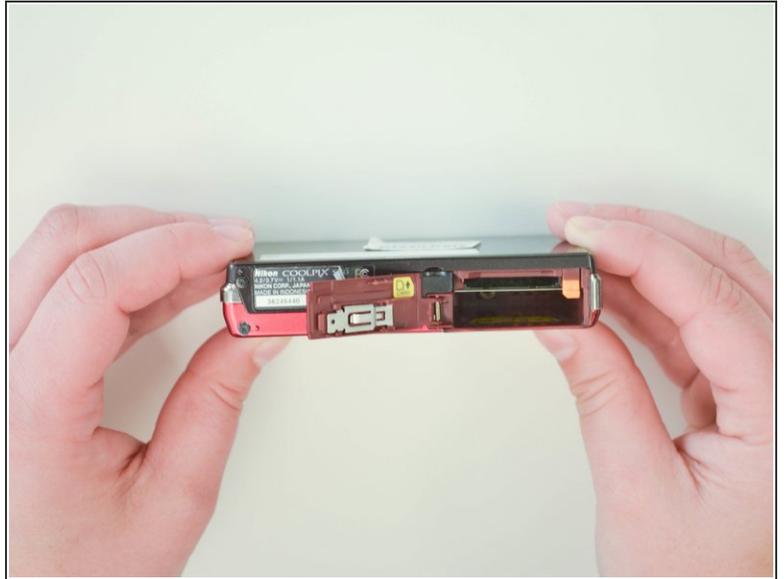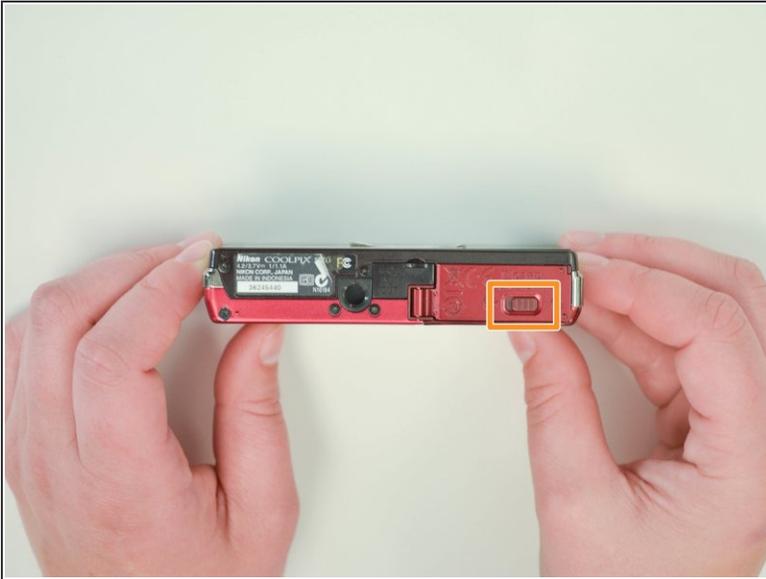

i Power off the camera before beginning.

- Remove the battery by sliding the latch located at the bottom of the camera.

Step 2

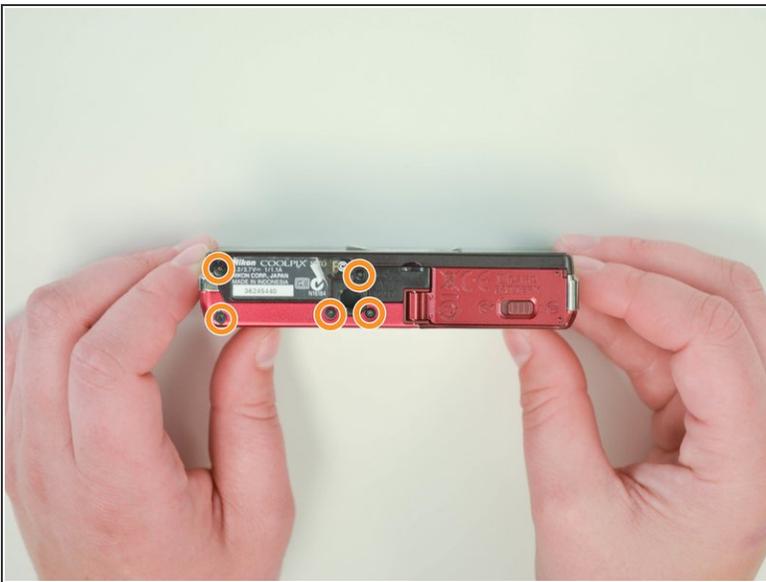


- Using a Phillips head #000 screwdriver, remove the five 0.4mm screws on the bottom of the camera.

Step 3




- Use a plastic opening tool to carefully separate the back panel of the camera.
- Once loosened, use your fingers to manually separate the two panels.

Step 4

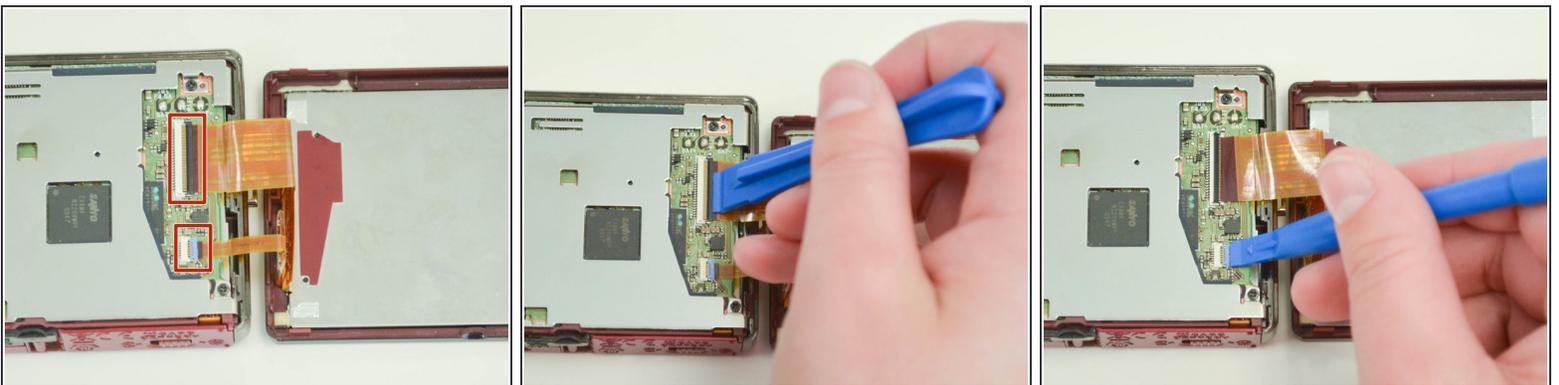


- Using a plastic opening tool, lift both latches that hold the ribbon cables in place.

Step 5

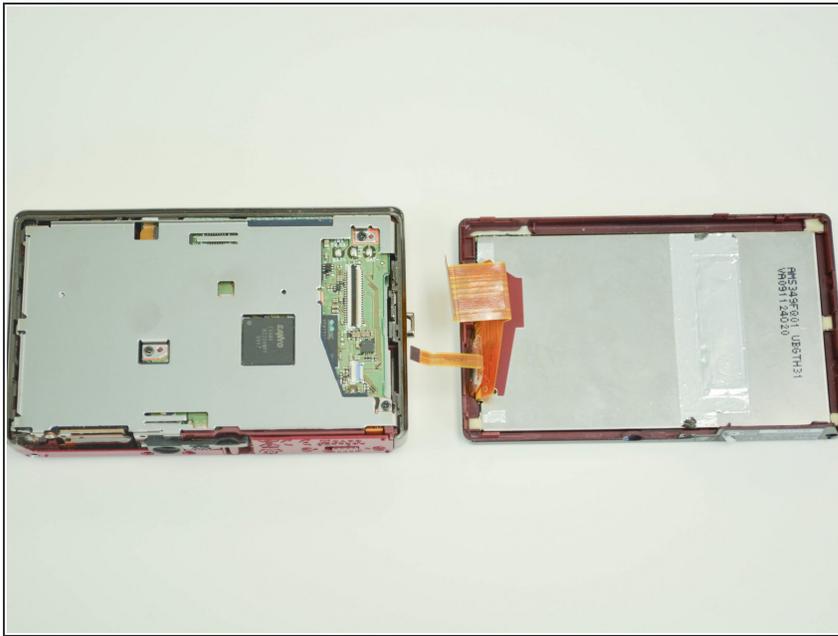

- Carefully disconnect the orange flat ribbon cables from the latches.

Step 6

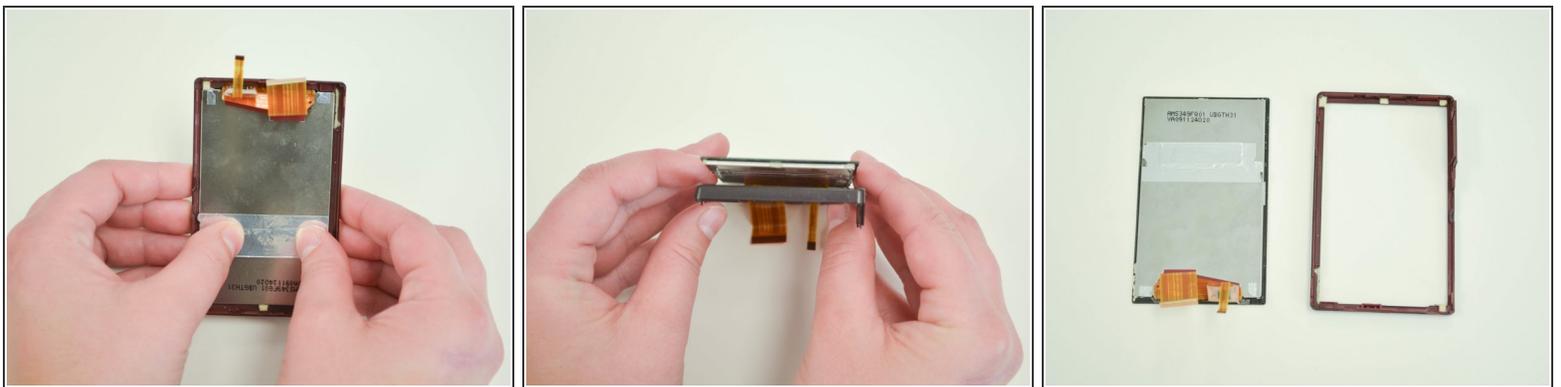

- Remove the screen from the case of the camera by carefully pushing on the back of the screen.
ⓘ You may need to push with a little force to get the screen to loosen.

To reassemble your device, follow these instructions in reverse order.