



Asus Zenbook UX32VD HD Web Camera Replacement

This guide will show you how to replace your HD web camera.

Written By: Michael Rimmel



INTRODUCTION

If the HD web camera is not functioning this guide will teach you how to get behind the screen cover to replace the camera.

Note: Be sure the camera is broken and not just a software issue before you replace it.

TOOLS:


- [Heat Gun](#) (1)
 - [Metal Spudger Set](#) (1)
 - [Spudger](#) (1)
-

Step 1 — HD Web Camera



- Heat the adhesive behind the screen frame with a hair dryer or a [heat gun](#).
- ⚠ Use low heat with the [heat gun](#). Over heating could damage delicate electronic components.

Step 2

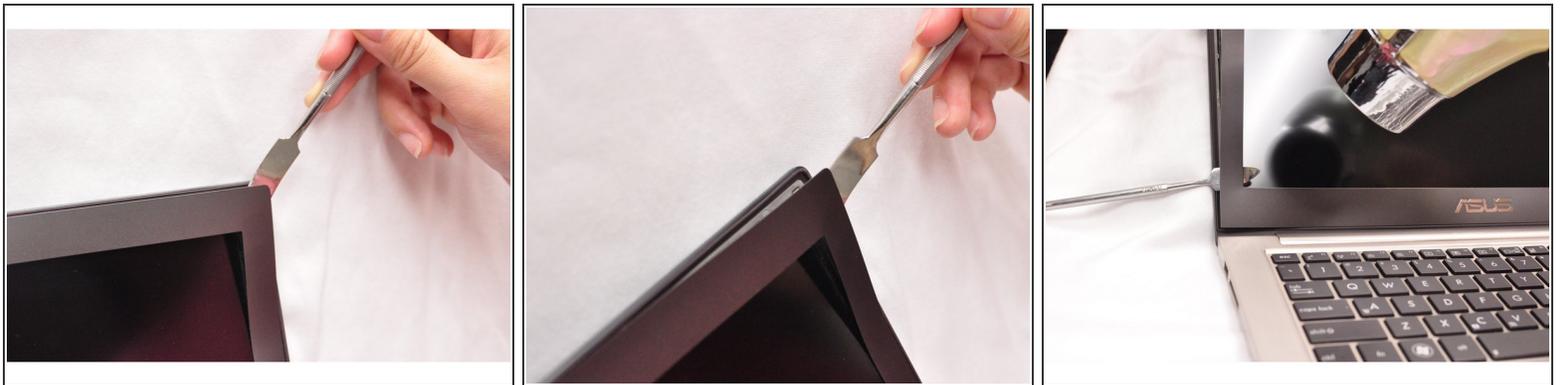


- Insert a [spudger](#) between the display screen frame and the back screen panel.
- Pry the display screen frame away from the back screen panel.
- Continue to heat and remove the display screen frame along the whole perimeter.

Step 3



- Remove display screen frame completely before adhesive cools and hardens.

Step 4

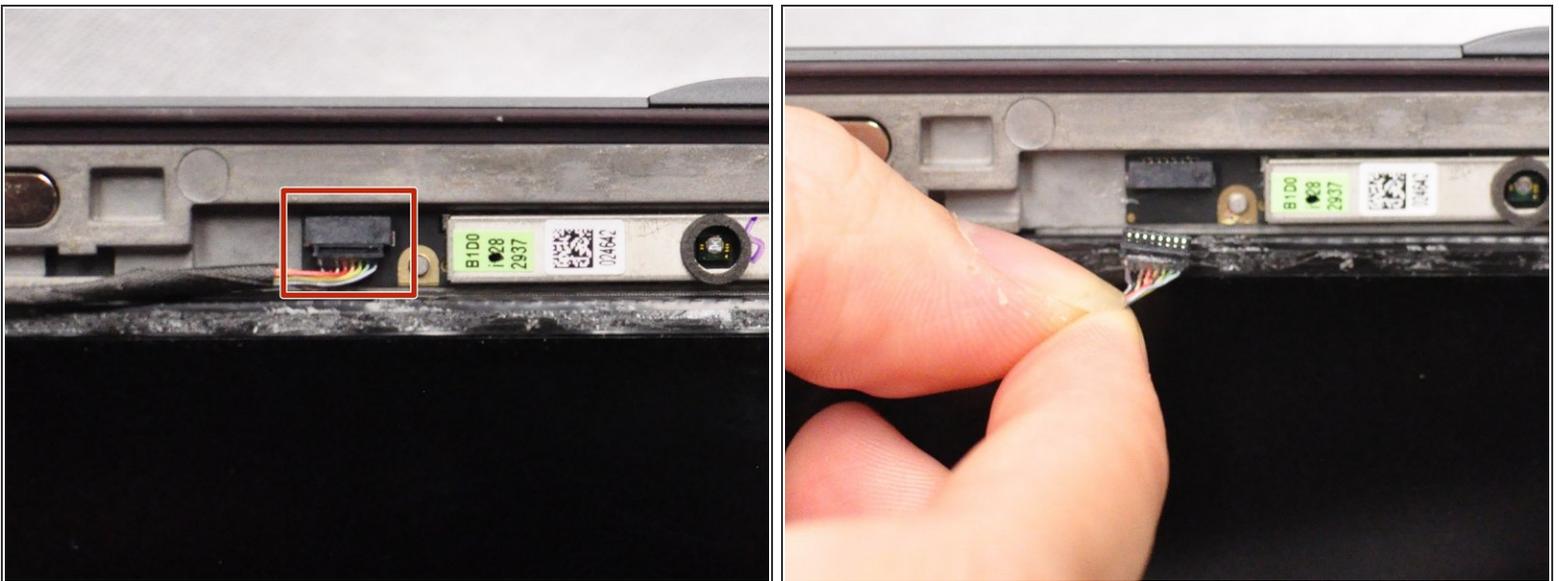

- Unplug the bundled cable connector.
- Pull the cable away from the connector in the same direction as the individual wires are running.
⚠ Pull evenly on the full width of the cable so that no individual wires are overly strained.

Step 5



- Pry the camera out from the two pins on the left and right of the camera with the tip of a [spudger](#).
- Remove the camera completely.

To reassemble your device, follow these instructions in reverse order.