




Acer Iconia A1-830 Display assembly-digitizer, lcd, frame Replacement

Give a short summary.

Written By: Jesse

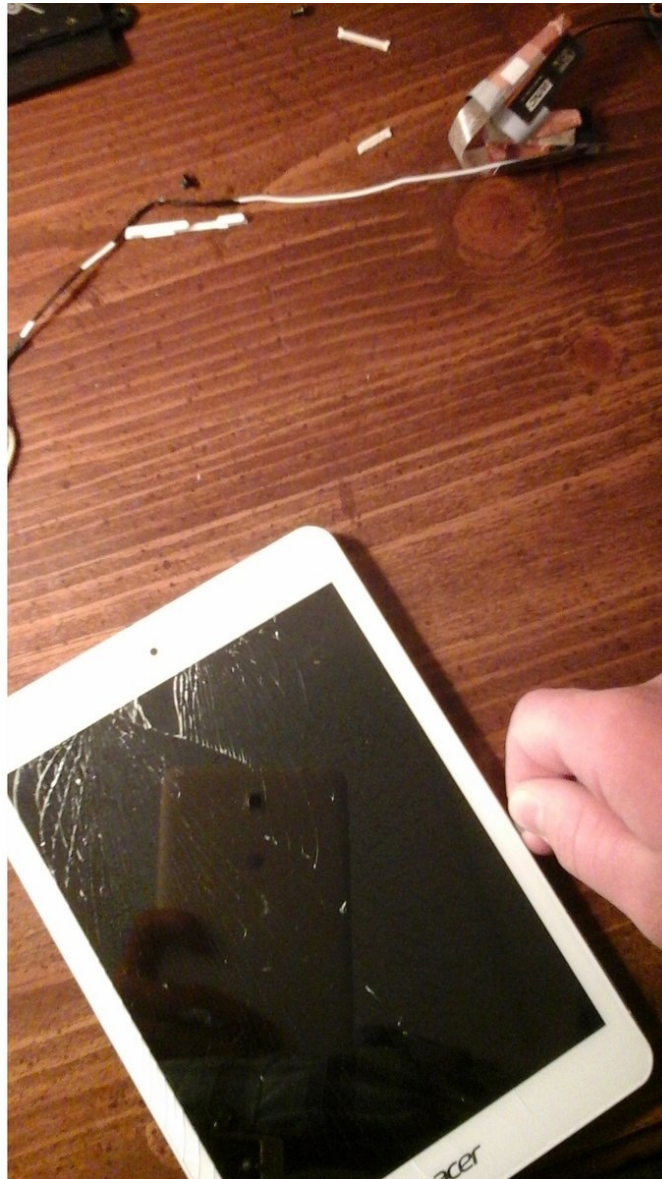

INTRODUCTION


Outline what you are going to teach someone how to do.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Display assembly-digitizer, lcd, frame

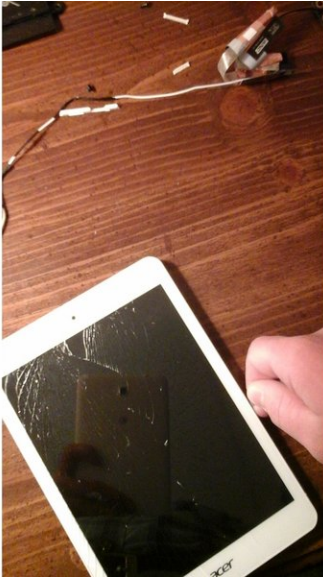

 Make sure the tablet is powered off, not just sleeping, and that it is unplugged.

- Lay the tablet facedown on a flat surface.
- Use a plastic opening tool to carefully loosen the back of the tablet all the way around.
- Carefully lift the back from the tablet and lay it aside.

Step 2

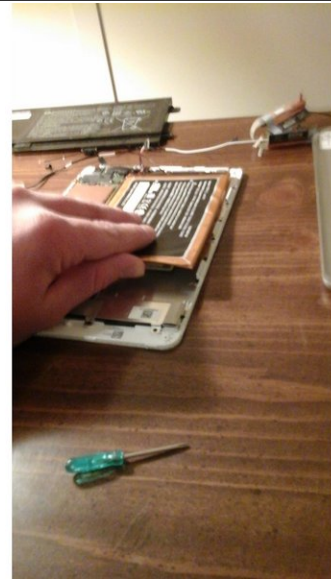

- Carefully unhook the battery cable.
 - Very carefully lift the battery, loosening it from its adhesive tape.
- ⚠ Be very careful not to puncture or damage the battery in any way. If you do, get a new battery. Whatever you do, don't use a screwdriver to try to pry the battery loose from the tape.
- Lay the battery aside.

To reassemble your device, follow these instructions in reverse order.