


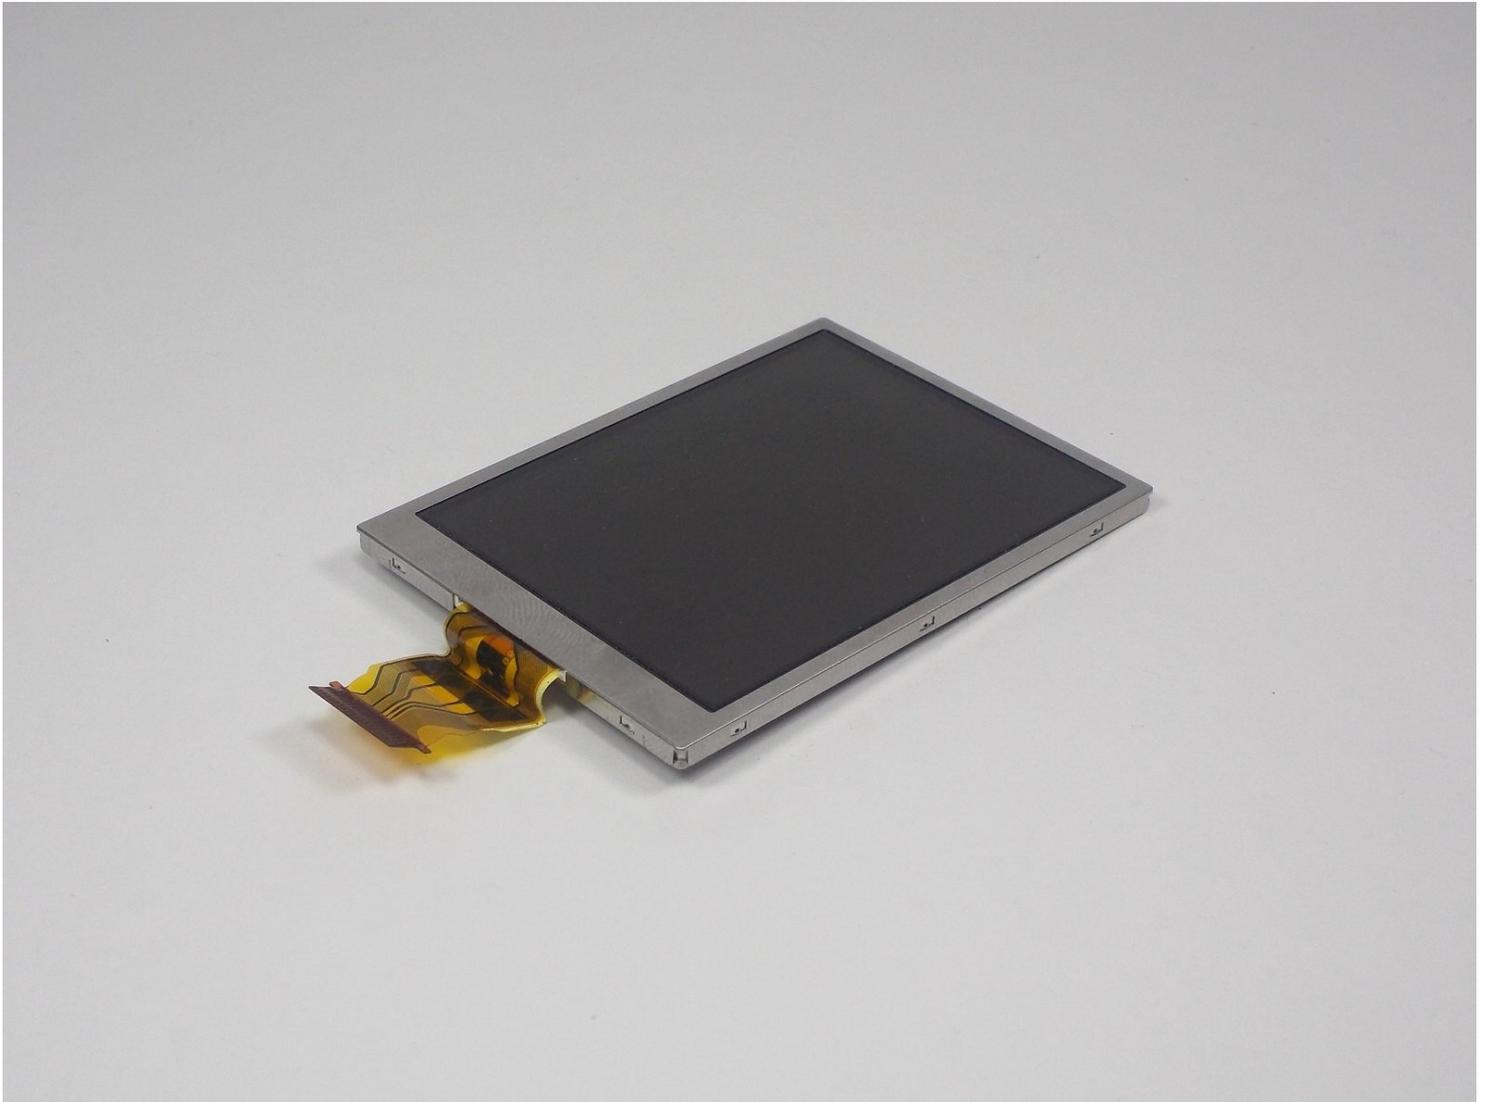

Sanyo VPC-T850 LCD Display Replacement

This guide will come in very handy for other...

Written By: Devin Farnsworth



INTRODUCTION


This guide will come in very handy for other repairs on your camera because of the number of prerequisites required.

TOOLS:

[Phillips #000 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

Step 1 — Battery

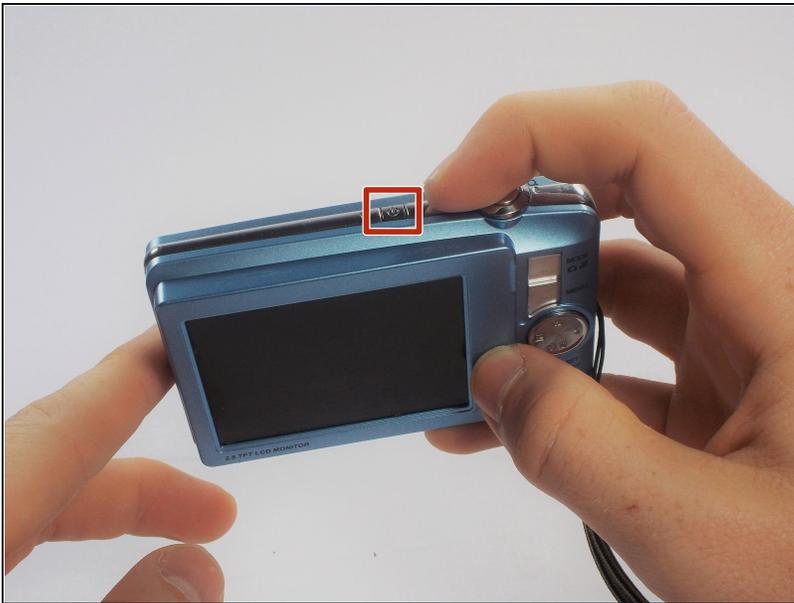

- Make sure the camera is powered off by pressing and holding the small, square button embedded in the top rim of the camera.

Step 2



- Locate the hatch found on the bottom of the camera.
- Open the hatch by gripping the small notch and sliding it outwards.

Step 3



- Push the small, plastic arm out of the way to free the battery.
- ⓘ The battery is spring loaded and will pop out slightly when the arm is moved.

Step 4




- Pull the battery out of the camera and close the hatch.
- ☑ To reinsert, there is a triangle on the battery indicating which direction to slide it in.

Step 5 — Outer Casing



- Using your Phillips #000 Screwdriver, remove the eight screws located around the sides and bottom of the camera.
- ① Be sure to keep track of the side each screw comes from, as they come in different lengths.

Step 6

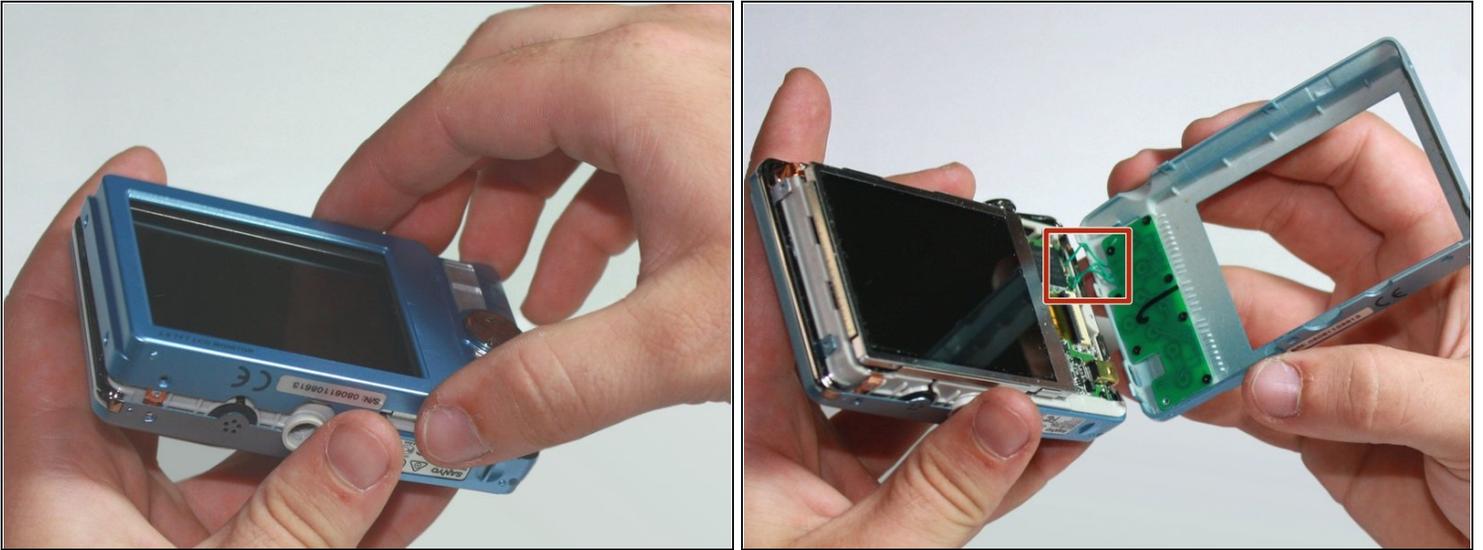


- Orient the camera so the display is facing up.
- Gently pull off the rear panel surrounding the display.

⚠ There are still three green wires connecting the panel to the rest of the camera.



ⓘ Use your prying tool if you have difficulties removing the panel by hand.

Step 7

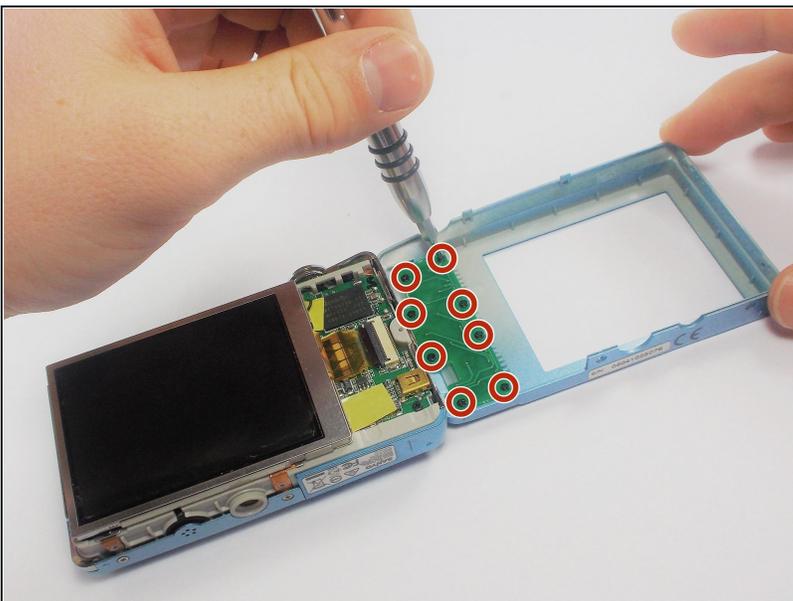


- Remove the eight black screws connecting the keypad circuit board to the rear panel.

Step 8

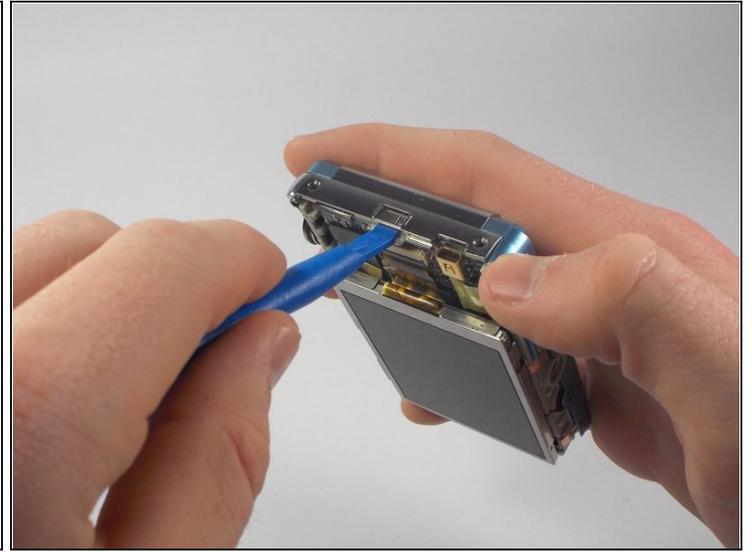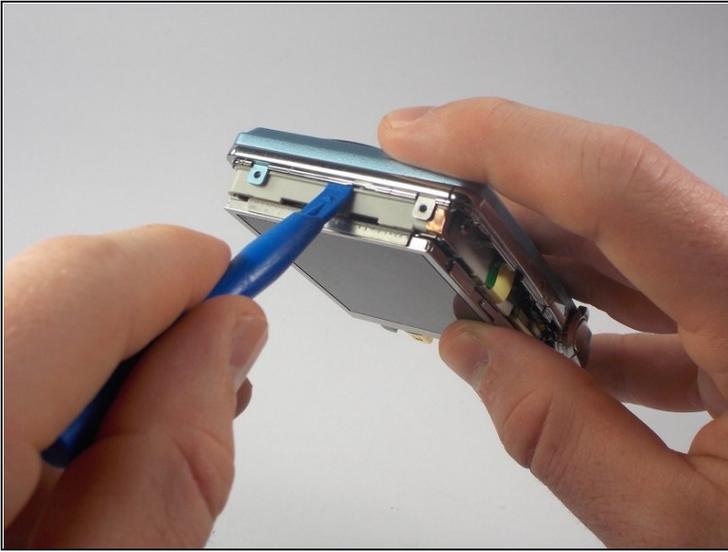


- With a plastic opening tool, gently remove the chrome framing on the left and right sides of the camera.

Step 9

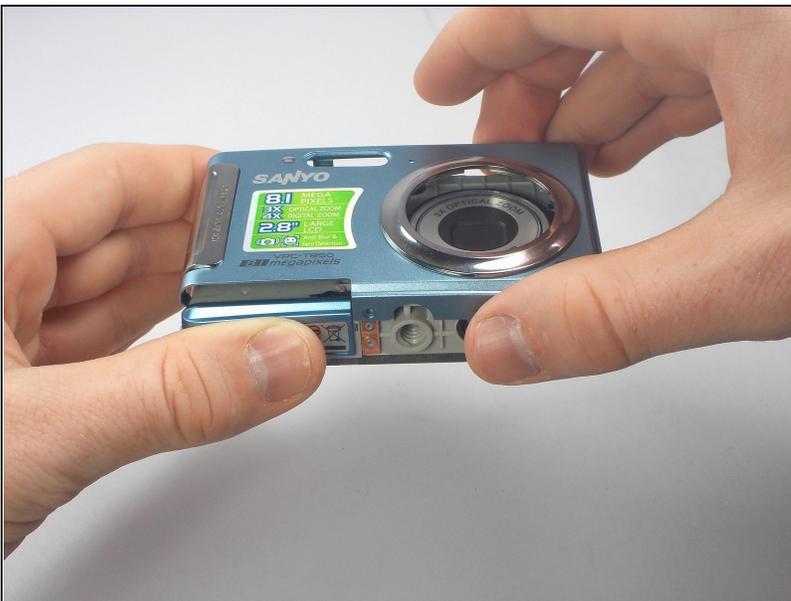


- Flip the camera over so the lens is facing up.
- Gently lift up the front panel to remove it from the rest of the camera.
- ⓘ Use your plastic opening tool if you have difficulties removing the panel by hand.

Step 10 — LCD Display

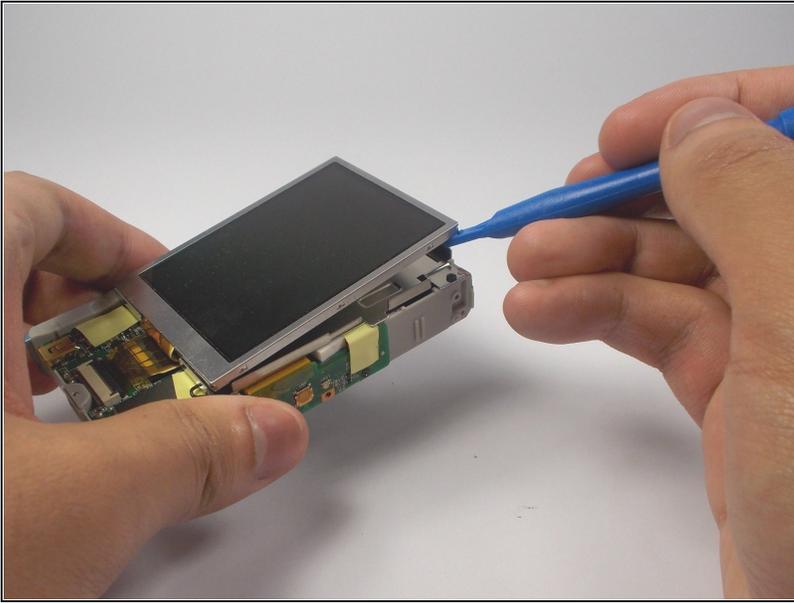


- Flip the device over to where the display is located.
- Using your plastic opening tool, lift the display out of its metal housing.

Step 11

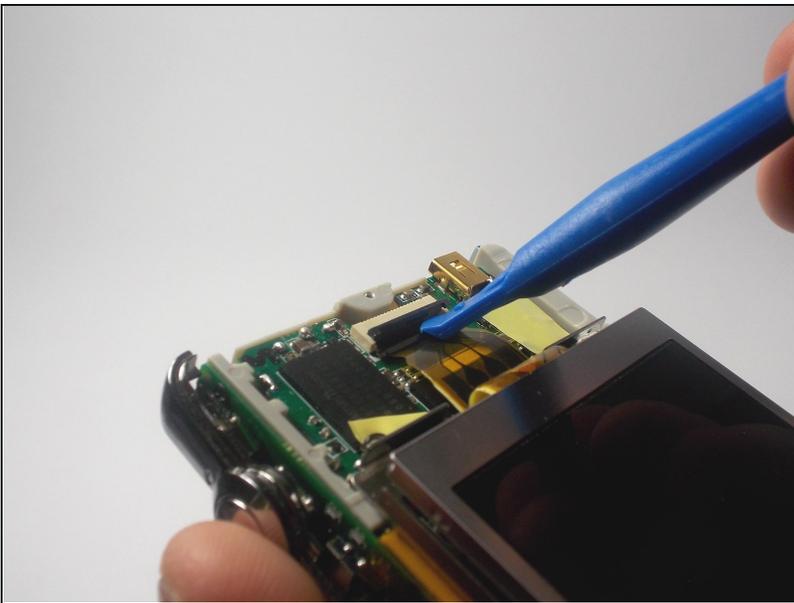

- Locate the orange ribbon connecting the display to the camera.
- Using your plastic opening tool, gently lift the black bar holding the orange ribbon to the camera.

Step 12

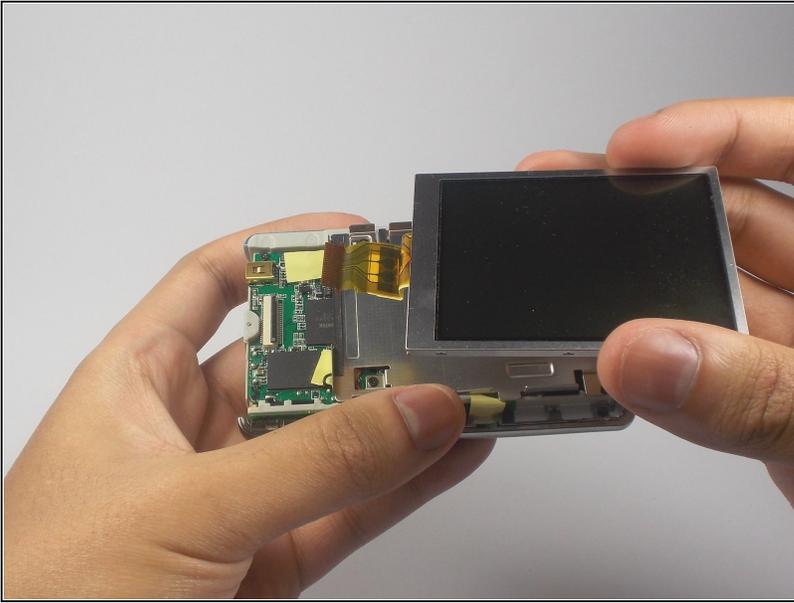

- With two fingers held firmly on the display, gently pull the orange ribbon out of the camera.

⚠ Pull slowly to avoid severing the orange ribbon from the display.

To reassemble your device, follow these instructions in reverse order.