



# HP Pavilion dv6700 Display/Monitor Replacement

This guide would be used if your screen gets...

Written By: Alec Gramm



# INTRODUCTION

This guide would be used if your screen gets damaged or no longer functions. All screws are a PH00 size. It would be advisable to keep track of which screws go where, as there are a lot of screws that will be removed over the course of this guide. Be sure to wear the anti-static guard strap, as that will protect the circuitry from permanent damage from static electricity.

---

## TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips #00 Screwdriver](#) (1)


[Needle-nose Pliers](#) (1)

[Hex \(5\) Screwdriver](#) (1)

[Anti-Static Wrist Strap](#) (1)

---

## Step 1 — Battery

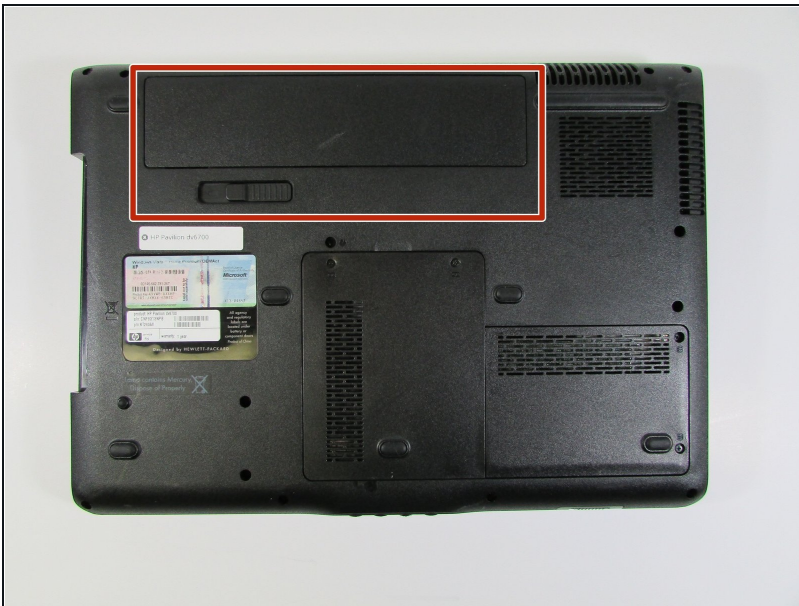

- Flip over the device so that the bottom is facing you.
- Locate the battery on the bottom of your laptop.



## Step 2




- Slide the tab all the way over to the left until battery pops out. Lift out and remove battery.

## Step 3 — Display/Monitor



- Remove the RAM port cover by unscrewing the two screws.
  - ① These screws can not be fully removed because they're captive. Loosen them until they turn freely.

## Step 4

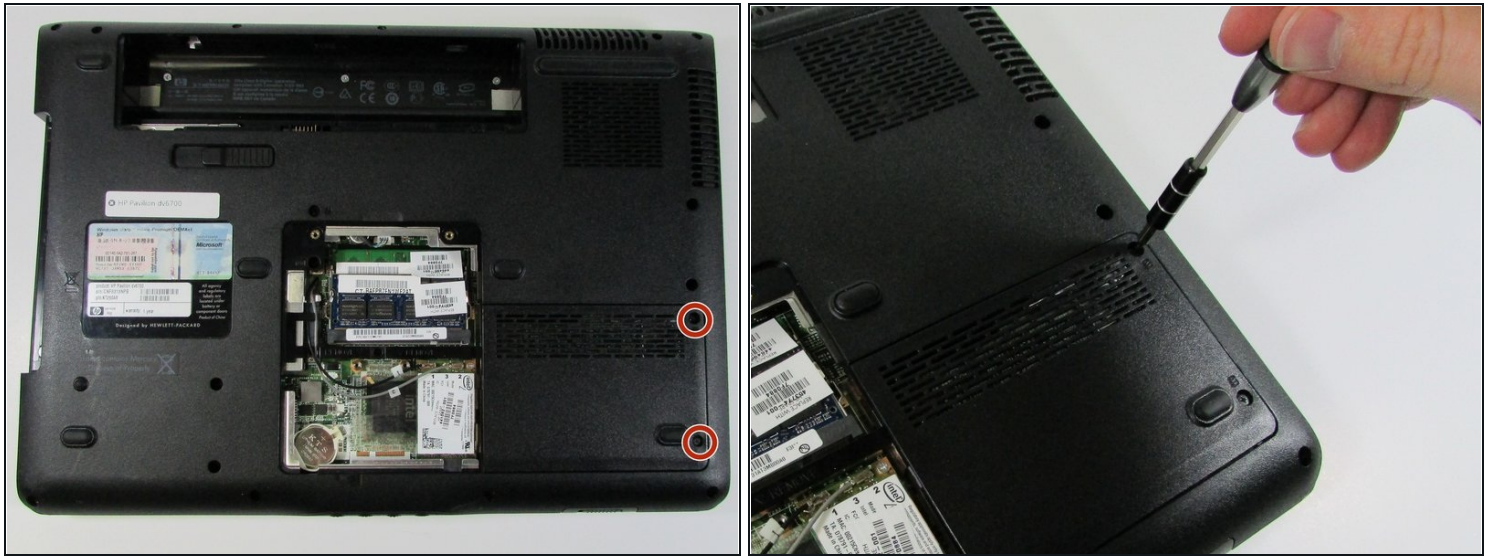

- Use a Phillips #00 screwdriver to remove the two screws securing Hard Disk Drive (HDD) cover.
- ⓘ Screws will not fully remove. Loosen them until they turn freely.

## Step 5



- Use a Phillips #00 screwdriver to remove the 25 screws securing the bottom of the computer.



## Step 6



- Detach WiFi antenna wires.

ⓘ Be sure that the wires are labeled so you remember which ones go where.


## Step 7



- Using the Phillips #0 screwdriver remove the 2 screws.

ⓘ Use a needle-nose pliers to do the initial loosening, then switch to using a hex screwdriver (size 5) head to do the rest of the loosening.

## Step 8

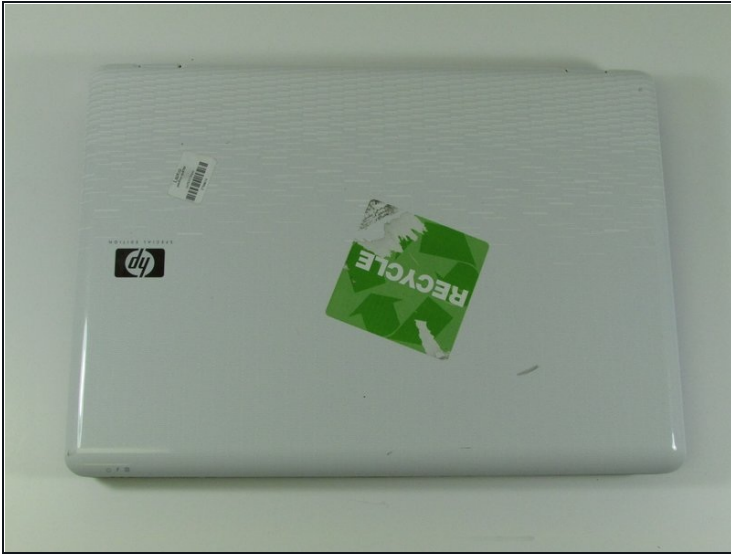

- Flip over HP Pavilion dv6700 so that the top is facing you.
- Open up HP Pavilion dv6700.


## Step 9



- Use an iFixit opening tool to pry open the plastic bar above the keyboard.  
⚠ Be careful not to yank so hard that you rip out the ribbon cables underneath. There is enough room to pull safely, but use control to prevent damage.




## Step 10

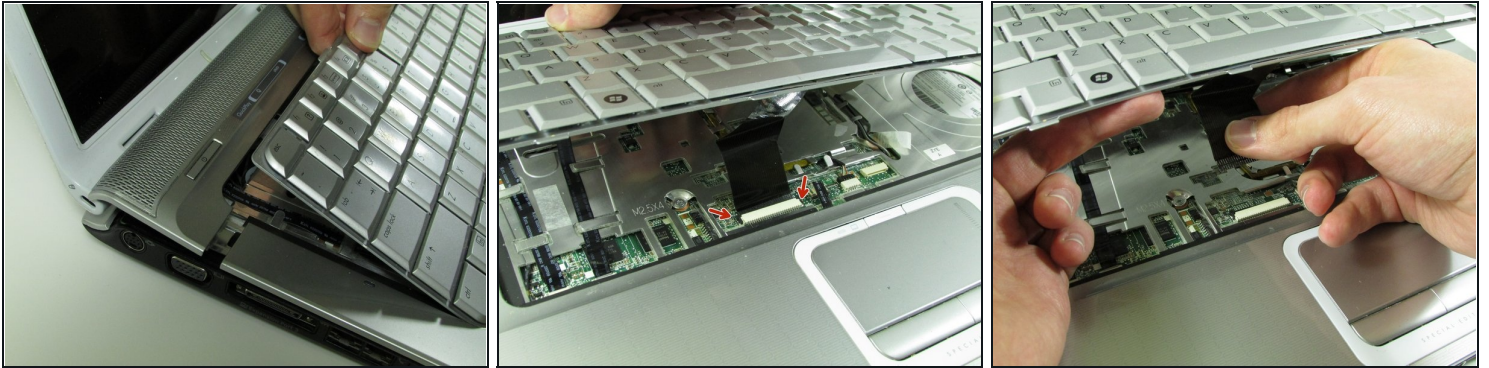




- Pull out and up on keyboard to remove it.  
**⚠ Do not yank it all of the way out, as there is a ribbon cable underneath.**
- Slide the two black locks on the side of the keyboard cable connection port up to release the cable.
- Grip the ribbon cable near the connection point and gently but firmly pull it out.

## Step 11

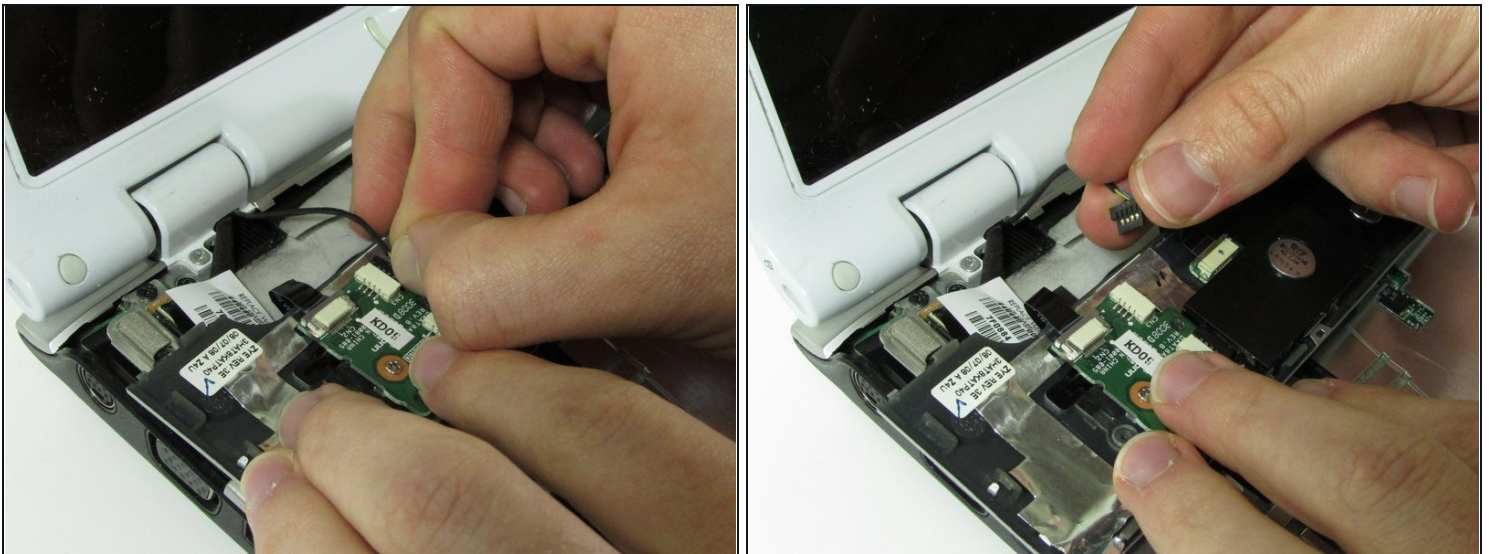




- Flip over the plastic bar.
- Detach the display connector.  
**⚠ Do not pull on the wires. Pull on the black plastic part or wedge an iFixit opening tool or fingernail between the port and the connector.**

## Step 12

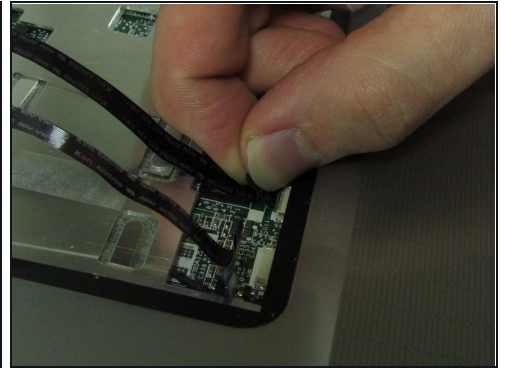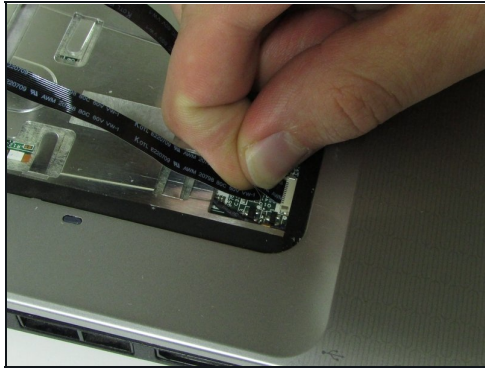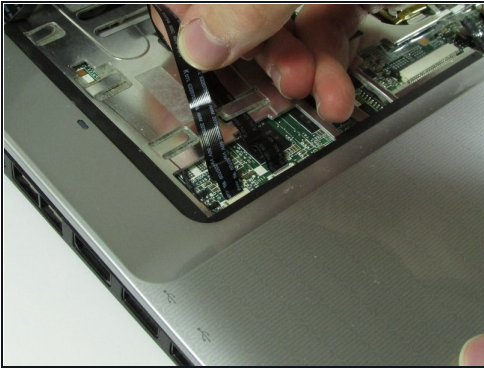

- Detach the ribbon cables.
  - ① Pull from the area closest to the connection port gently but firmly.


## Step 13

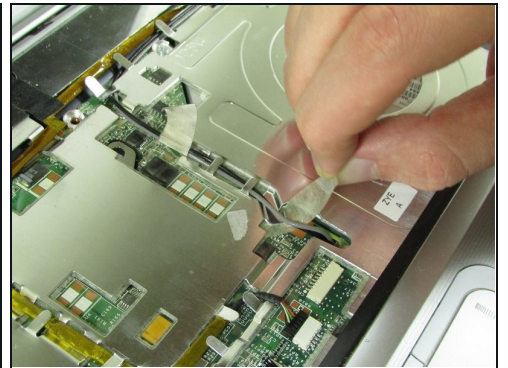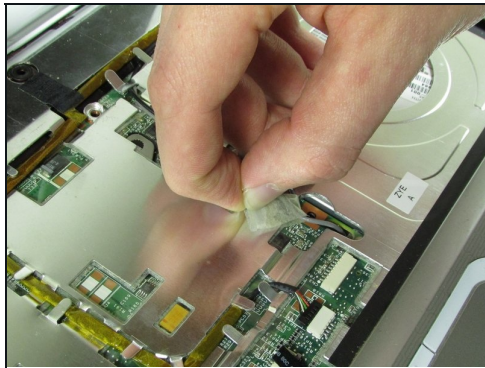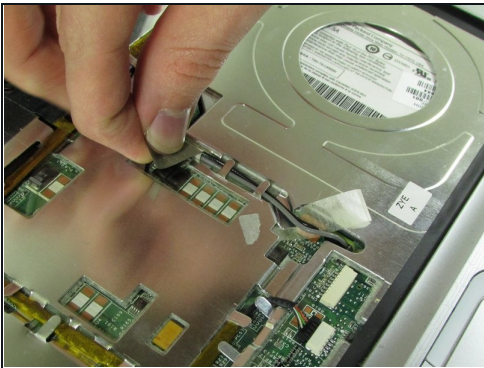

- Pull up on tape holding down wires.




## Step 14

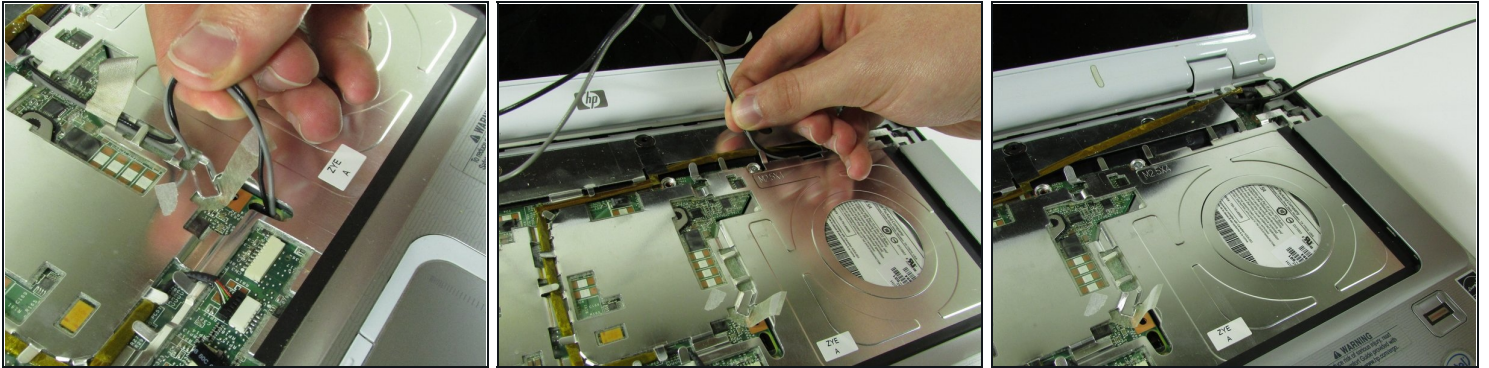

- Pull up on the WiFi wires and out from under the metal tabs.



⚠ Do not yank them out. Let them hang loose once they are out from under the tabs.

## Step 15

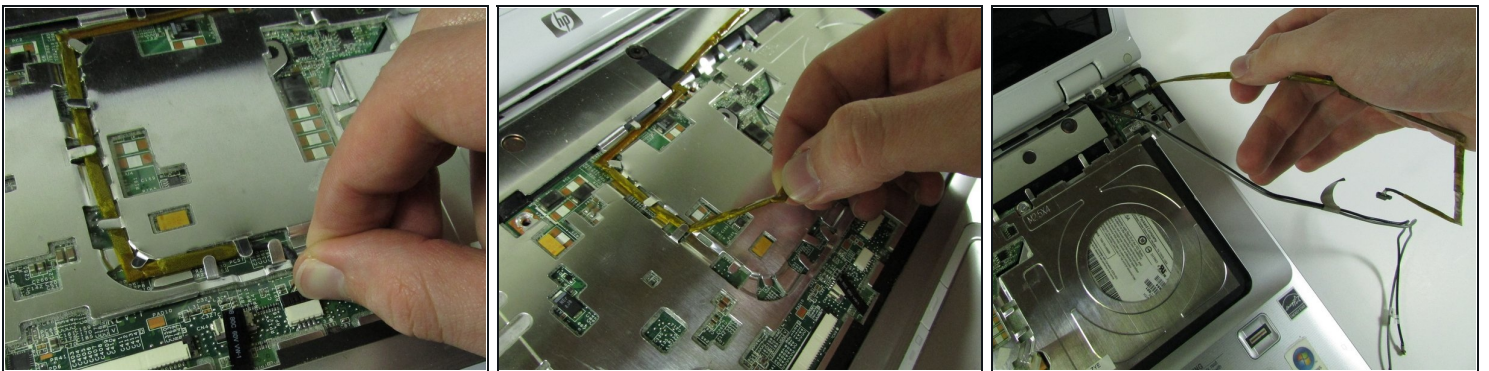


- Disconnect the connector from the port.
- Remove the wire from under the metal tabs.
- Let wire hang loose after removing under the tabs.

## Step 16

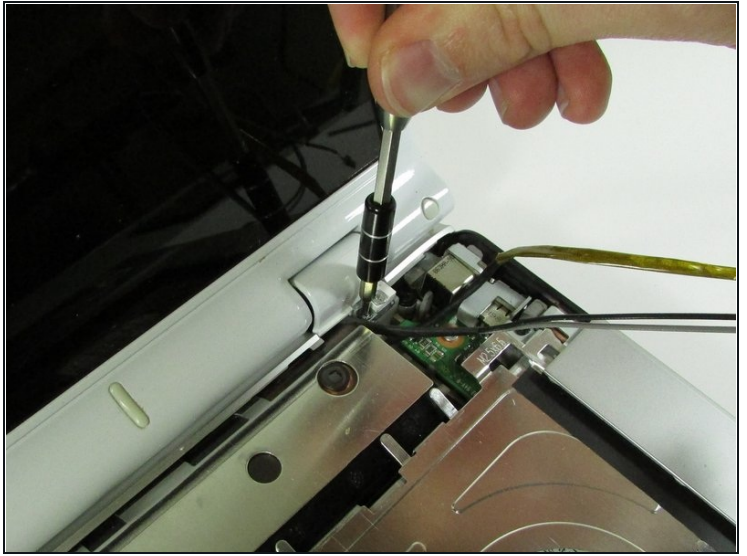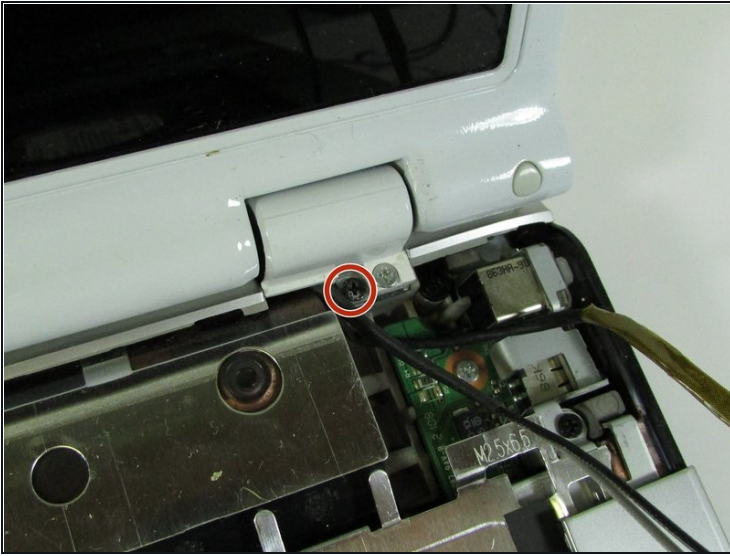

- Use a Phillips #00 screwdriver to remove the black screw located in the top right corner near the display.

## Step 17

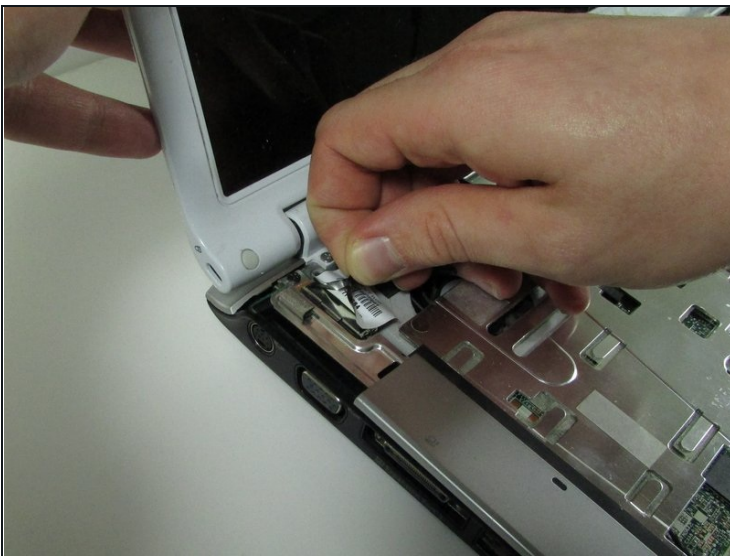

- Pull upward on the screen connector tab.
  - ① It will be firmly secured, so don't be afraid to use a little extra force to pull it off.



## Step 18



- Use a Phillips #00 screwdriver to remove the black screw securing the screen.  
⚠ Keep your hand on the screen to secure it, as once you remove this screw, it will come loose.
- Lift the screen off and set it aside.

---

To reassemble your device, follow these instructions in reverse order.