


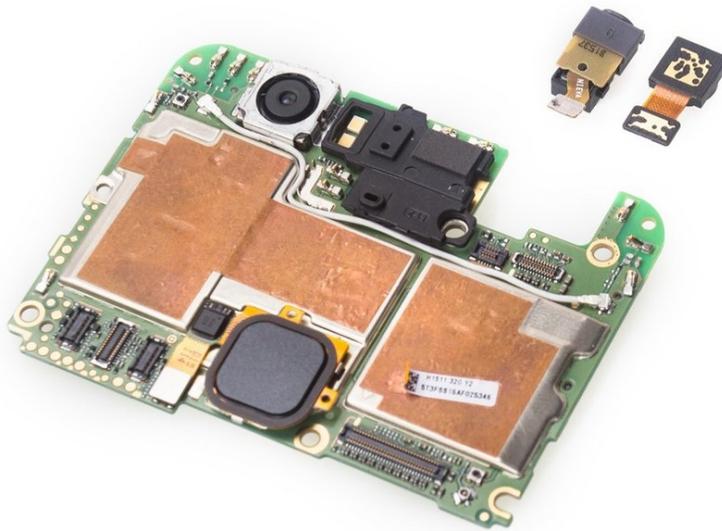

Nexus 6P Rear Camera&Front Camera&Headphone Jack Replacement

This replacement guide shows how to disassemble...

Written By: Witrigs



INTRODUCTION

This replacement guide shows how to disassemble Huawei Nexus 6P camera and audio jack. While your Google Nexus 6P related parts get damaged, just follow this guide to DIY replace them by yourself.

TOOLS:

[Heat Gun](#) (1)

[iFixit Opening Picks set of 6](#) (1)

[Suction Handle](#) (1)

[Curved Razor Blade](#) (1)

[Phillips #000 Screwdriver](#) (1)

[Metal Spudger](#) (1)

Step 1 — Rear Camra&Front Camera&Headphone Jack



- Remove SIM card tray.

Step 2



- Heat up back glass panel.
- Use hobby knife to open a gap and cut the fierce sticker underneath rear glass panel.

⚠ The back glass panel is easily shattered and the adhesive underneath is fierce. So be careful to pry this part.

Step 3



- Heat up bottom plastic panel.
- Use hobby knife to open a gap and insert guitar picks to cut adhesive underneath.

Step 4



- Twist off 6 Phillips screws together.
- Insert guitar picks and plastic opening tool to separate front assembly from back cover.

⚠ Attention: These two parts fit tightly. It is very difficult to separate them. You can also try using [heavy-duty suction cup](#) to disassemble them.

Step 5



- Unscrew one Phillips screw.
- Remove metal bracket securing flex contactors.
- Release 3 flex contactors and remove it .

Step 6





- Twist off 5 Phillips screws together and release battery contactor.
- Remove metal bracket securing LCD contactor.
- Release metal bracket securing front camera contactor and headphone jack contactor.

Step 7



- Disconnect signal cable contactor.
- Release LCD contactor.
- Pry up and remove motherboard.

Step 8

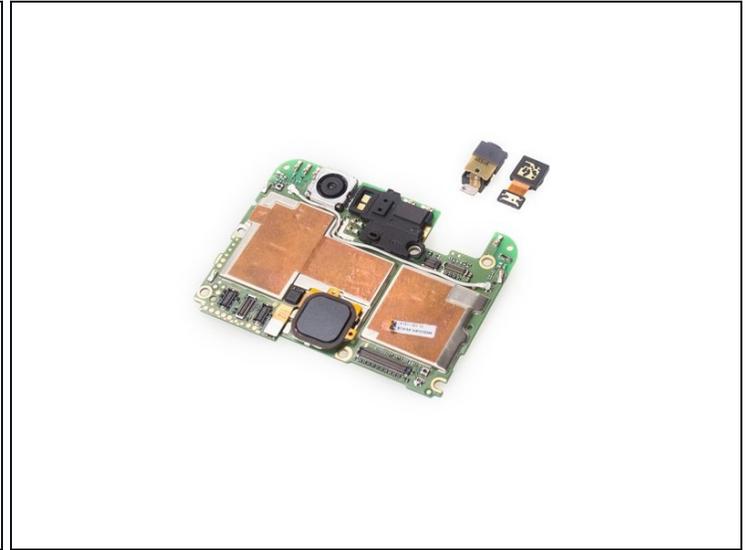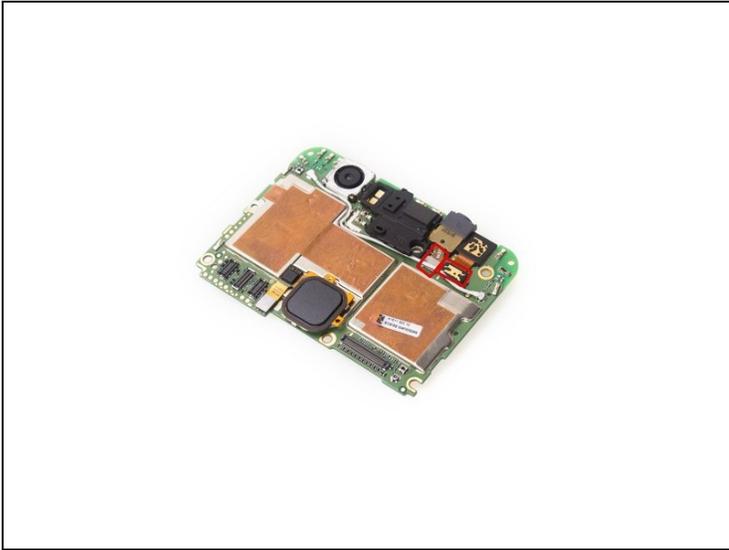

- Remove headphone jack and front camera.

Step 9



- Release rear camera contactor, then remove it.

To reassemble your device, follow these instructions in reverse order.