


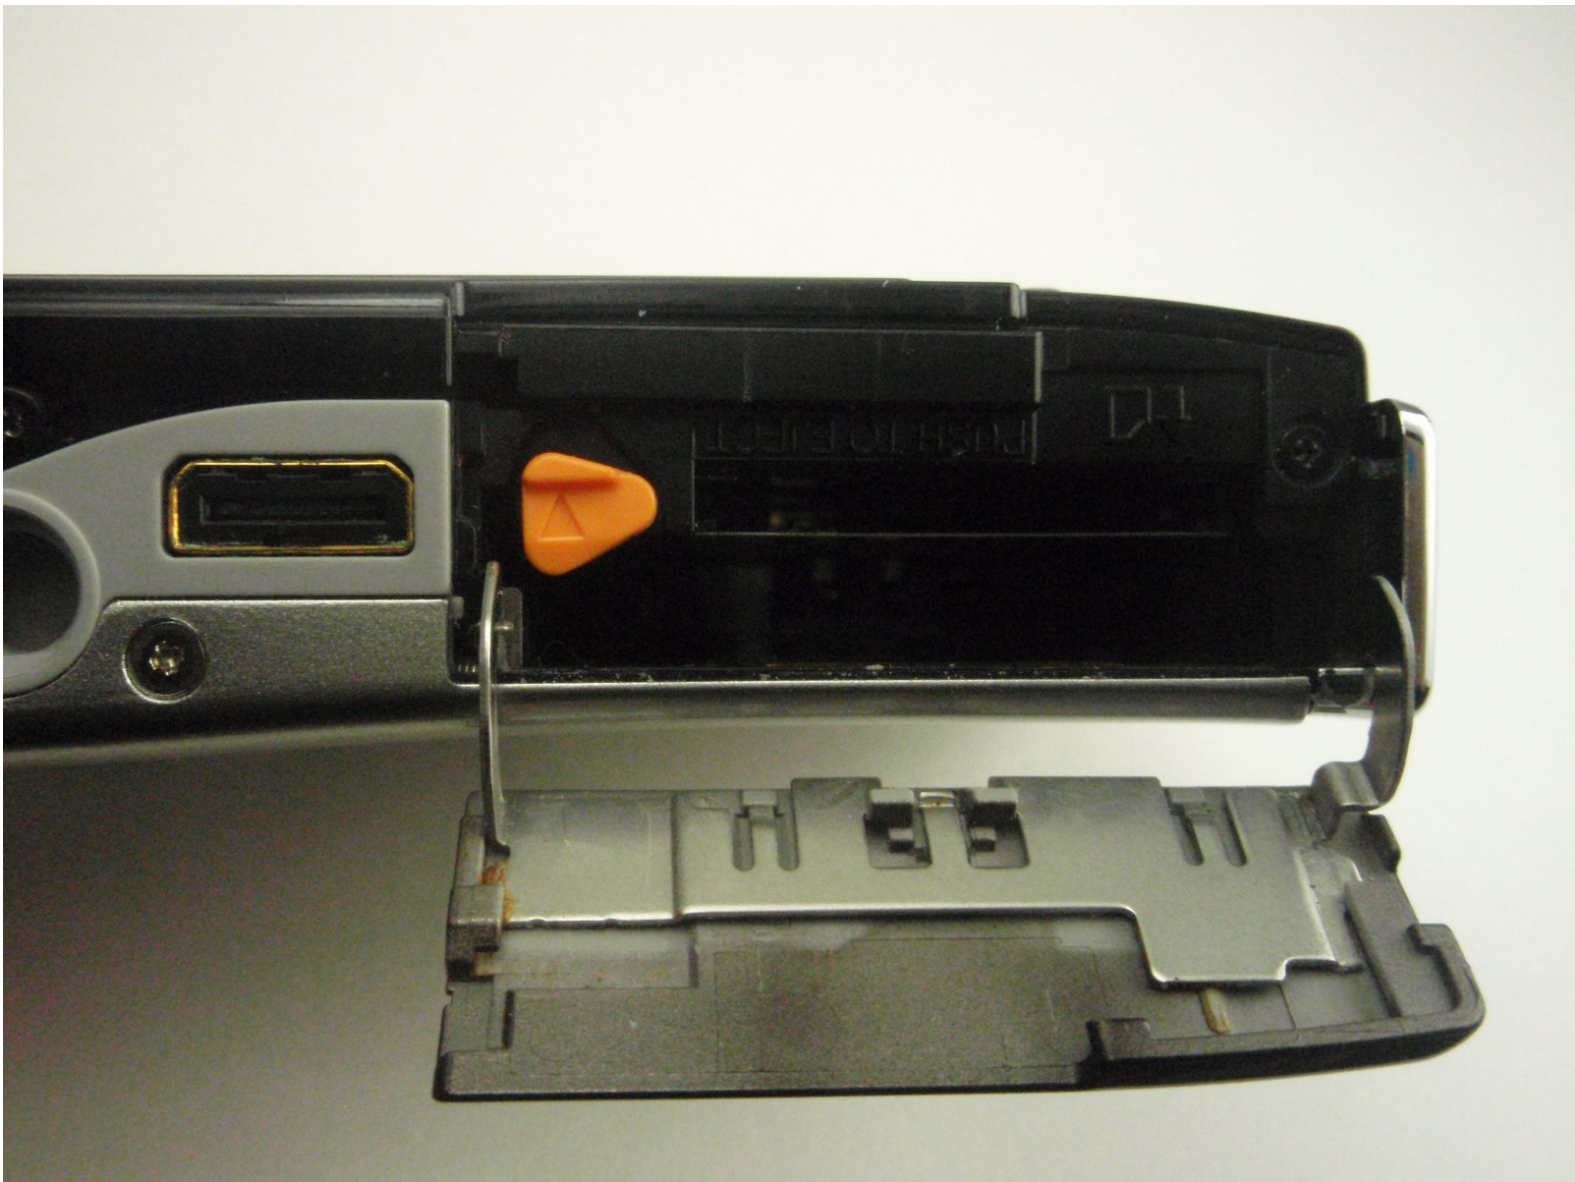

# Nikon Coolpix S51c Memory Card Replacement

How to take out the memory card if you need to replace it or download the data using a card reader instead of a USB cord.

Written By: Ryan



# INTRODUCTION

How to take out the memory card if you need to replace it or download the data using a card reader instead of a USB cord.

## Step 1 — Memory Card



- Turn the camera upside down to find the battery door.

## Step 2



- Slide the battery door in the direction of the arrow, toward the LCD screen. The door will then swing open.

### Step 3



- Push memory card further into the camera. This will release the memory card making it available to remove.

To reassemble your device, follow these instructions in reverse order.